2007 FOUR WINDS SLIDE REFERENCE

FUN MOVER

39C

SOFA 7164 SLIDE ASSBLY 36" FOUR WINDS

39D

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

SUPER C

32B

SOFA/DIN 7164B SLIDE ASSBLY 36" FOUR WINDS

33K ALL SLIDES ARE ELECTRIC

34G ALL SLIDES ARE ELECTRIC

35B

SOFA/DIN 7164B SLIDE ASSBLY 36" FOUR WINDS

BED ELECTRIC (LIPPERT)

HURRICANE

30F

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

31D ALL SLIDES ARE ELECTRIC

31H ALL SLIDES ARE ELECTRIC

32R

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

33H

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

34B

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

BED LIPPERT SLIDE AND CYLINDER

BUNK BED 7135 SLIDE ASSBLY 18" FOUR WINDS

34N

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

34S

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

BED LIPPERT SLIDE AND CYLINDER

BUNK BED 7135 SLIDE ASSBLY 18" FOUR WINDS

WINDSPORT

32R

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

35B

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

BED LIPPERT SLIDE AND CYLINDER

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

36E

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

36Z

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

MAGELLAN

35B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED LIPPERT SLIDE AND CYLINDER

36E

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

36K

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

36Z

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

38E

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

VALENCIA

36A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

36B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED LIPPERT SLIDE AND CYLINDER

37A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

38C

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

PRESIDIO

39A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39C

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

39D

VANITY

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS BED 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)

7135 SLIDE ASSBLY 18" FOUR WINDS

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

39E

KITCHEN 7369 SLIDE ASSBLY 24" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED LIPPERT SLIDE AND CYLINDER

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

2007 FOUR WINDS SLIDE REFERENCE

HURRICANE

30F

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

31D ALL SLIDES ARE ELECTRIC

31H ALL SLIDES ARE ELECTRIC

32R

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS BED 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)

33H

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

34B

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

BED LIPPERT SLIDE AND CYLINDER

BUNK BED 7135 SLIDE ASSBLY 18" FOUR WINDS

34N

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

WINDSPORT

31D ALL SLIDES ARE ELECTRIC

31H ALL SLIDES ARE ELECTRIC

32R

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

35B

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

BED LIPPERT SLIDE AND CYLINDER

36E

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS BED 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

36Z

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS BED 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)

MAGELLAN

35B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED LIPPERT SLIDE AND CYLINDER

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

36E

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

36K

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

36Z

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

38E

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VAL	ENCIA
-----	-------

36A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

36B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED LIPPERT SLIDE AND CYLINDER

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

37A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

38C

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

PRESIDIO

39A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

1	\cap	
4	ч	

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39D

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

39E

KITCHEN 7369 SLIDE ASSBLY 24" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)


BED LIPPERT SLIDE AND CYLINDER

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)


30F HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

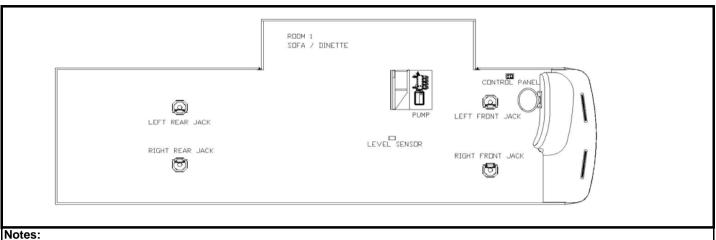

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8267	
Pump	5-Function,1 Room, Jacks	1		7242	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 48	Pump to Room 1	2	Green	7306	127 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		D			
		Revisions	MA IIZ\		
1	Change hose length fro room 1 from 32 to 4	8 (10/19/05	IVIJK)		


34B/34S HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

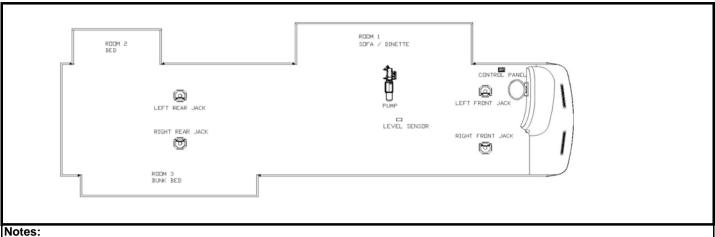

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8323			
Pump	7-Function, 3 Rooms, Jacks	1		7301			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic		
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476			
Hose, 180	Pump to Jack, Right Front	2	White	2470			
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479			
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A		
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A		
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A		
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side		
Hose, 372	Pump to Room 2	2	Purple	2481	341 / Drivers Side		
Hose w90, 372	Pump to Room 3	2	Gray	2481	300 / Passenger Side		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	N/A		HWH	N/A		
Options							
		.					
		Revisions					


34B/34S HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

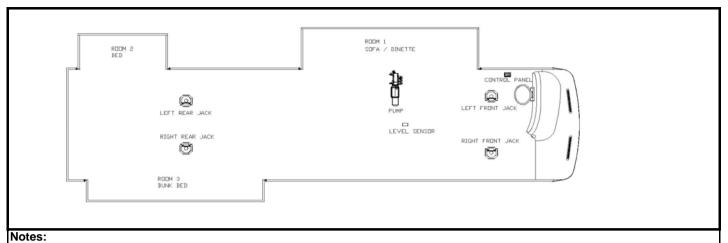

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms, Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	341 / Drivers Side
Hose w90, 372	Pump to Room 3	2	Gray	2481	300 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			

35 D FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

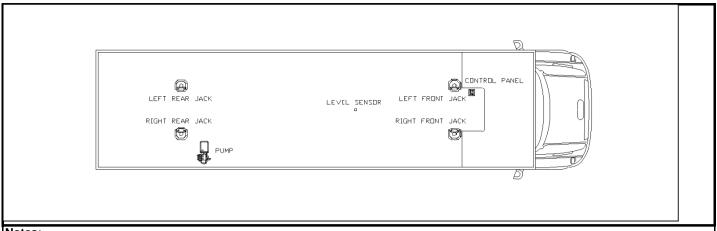


Notes:

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from book of ook
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2319	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 300	Pump to Jack, Left Front	2	Brown	2479	mecnanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
I/CVISIONS	Безоприон				Date


36B Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

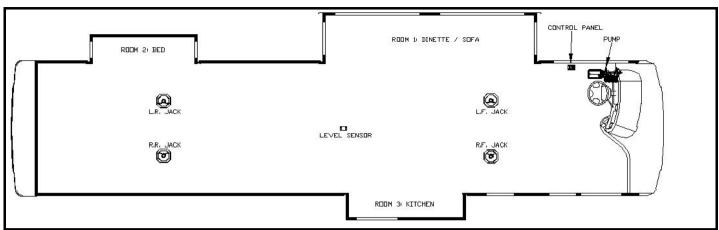

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8310	
Pump	7-Function, 3 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted	1		7351	hoses where they attach to
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309	
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 420	Pump to Room 2	2	Purple	7313	325 / Drivers Side
Hose w90, 200	Pump to Room 3	2	Red	7315	146 / Passenger Side
	Pump to Room 4	N/A			
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
			ļ		
		Davisiess			
		Revisions			


36A Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

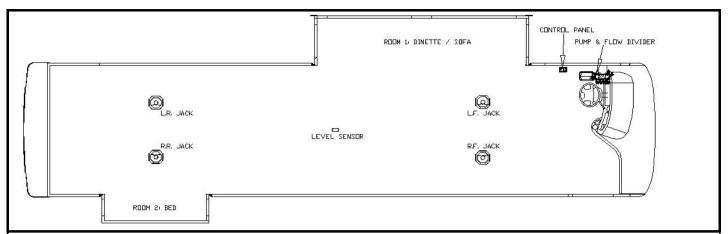

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8279		
Pump	6-Function, 2 Rooms & Jacks	1		7318		
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic	
Sync Cylinder	Mounted	1		7351	hoses where they attach to	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.	
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	1	
Hose, 144	Pump to Jack, Right Front	2	White	2467	1	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481		
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side	
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side	
	Pump to Room 1	N/A	Green			
Hose, 456	Pump to Room 2	2	Purple	2488	325 / Passenger Side	
·	Pump to Room 3		Gray		Ţ.	
	Pump to Room 4		Red			
	Pump to Generator Slide	N/A			N/A	
Travel Clamp	(two per slide, except the bed slide)	2		HWH	N/A	
·						
		Options				
		Revisions				
1	ECN #3714, added the note on hose fittings				fittings)	
2	ECN #3772, changed dinette slide hoses to					
3	ECN #3845, flow divider is replaced by the s	ynchronizin	g cylinder (a	Il field units as v	vell)	


38D Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

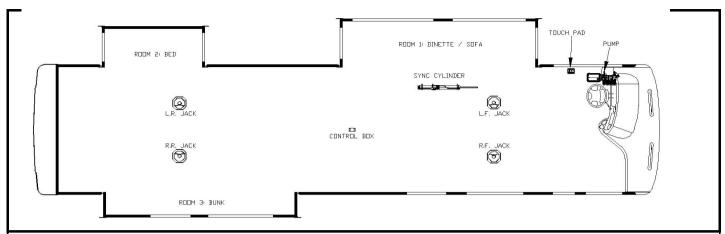

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8347	
Pump	7-Function, 3 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
	Pump to Room 4	N/A	Red		
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Revisions			


32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

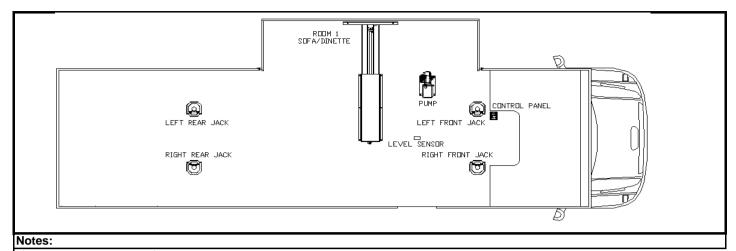

1) Jacks mount 2nd hole from top to top mounting plate hole.

Itom Longth	Description / Location	Qty	Color	Vendor PN	
Item, Length	Description / Location	Qty	Color	Vendor PN	-
Kit	(Items listed below)	1		8264	-
Pump	5-Function,1 Room, Jacks	1		7242	1
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2319	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			By	Date
1	Made Jack, Control Panel, Level Sensor & ho	oses stand	lard	JB	11/17/2005


32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

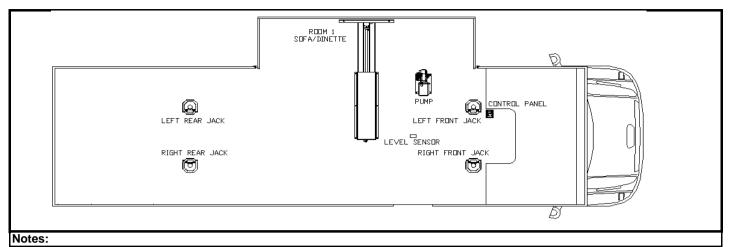

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	
nom, zengm	2000	<u> </u>	00.0.	70110101111	
Kit	(Items listed below)	1		8264	
Pump	5-Function,1 Room, Jacks	1		7242	Macauring from book of ook
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2319	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1	Made Jack, Control Panel, Level Sensor & h	oses stand	ard	JB	11/17/2005
	·				


35B MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

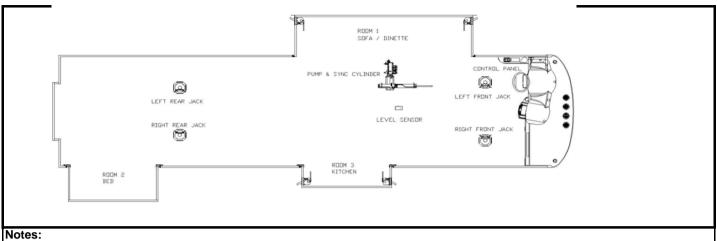

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8313	
Pump	7-Function, 2 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	7322	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	7323	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 420	Pump to Room 2	2	Purple	7313	350 / Passenger Side
Hose w90, 110	Pump to Room 3	2	Gray	7299	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	4		HWH	N/A
		Options			
4	And this flagged on fam M/2007 at a tile and the			/04/00	
1 2	Add this floorplan for MY2007 starting with the				
	Change name from 36B to 35B still starting	with the fele	ase of 04/24	H/U0	


35B MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

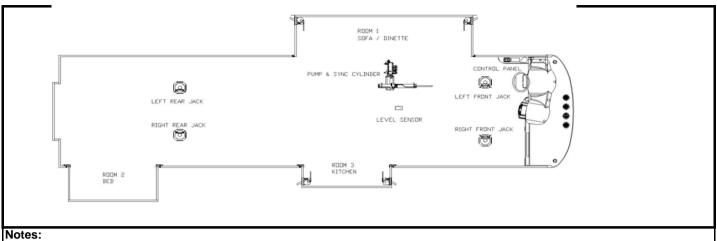

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8313	
Pump	7-Function, 2 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartment
Hose, 108	Sync cylinder to front slide, Room 1	2	Green	2464	95 / Drivers Side
Hose, 108	Sync cylinder to rear slide, Room 1	2	Green	2464	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 420	Pump to Room 2	2	Purple	2485	350 / Passenger Side
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	4		HWH	N/A
		Options			
4	Add this floorplan for MV2007 storting with the	aa aabadul-	rologood 04	/24/06	
1 2	Add this floorplan for MY2007 starting with the Change name from 36B to 35B still starting values.				
	Change hame from 300 to 300 still starting t	with the rele	ast 01 04/22	1 /UU	
					_
	<u> </u>				


39F Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

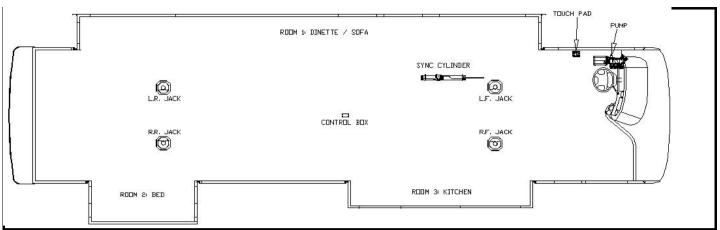

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
 - 4) Room #1 will have a non-powered slide mechanism in center of room
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8340	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 228	Pump to Room 3	2	Purple	2474	146 / Passenger Side
Hose, 480	Pump to Room 2	2	Gray	2490	345 / Drivers Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	UPDATE JPG				
2	Updated per ECN #4237				


39E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

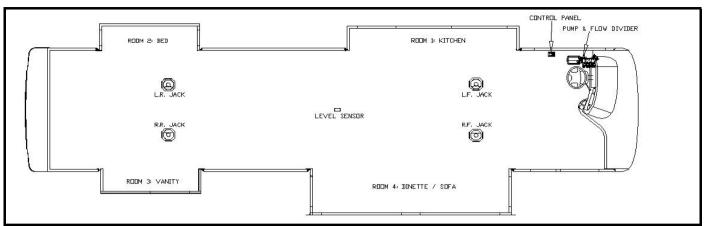

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8315	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	7342	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	7341	
Hose, 140	Pump to synchronizing cylinder	2	Green	7311	Mounts to bracket on structure
Hose, 140	Pump to synchronizing cylinder	2	Red	2426	Mounts to bracket on structure
Hose, 475	Pump to Room 2	2	Purple	7338	325 / Drivers Side
Hose w90, 425	Pump to Room 3	2	Gray	7337	355 / Passenger Side
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	95 / Drivers Side
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	180 / Drivers Side
Hose w90, 170	Sync cylinder to front slide, Room 4	2	Red	2425	103 / Passenger side
Hose w90, 170	Sync cylinder to rear slide, Room 4	2	Red	2425	196 / Passenger side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
•	, , ,				
		Options			
		Revisions			


39A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

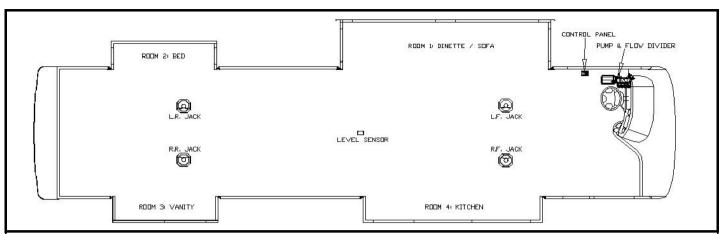

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
	Beginning with release of 1/23/06 and docur	mented on E	CN #3845		


39F Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

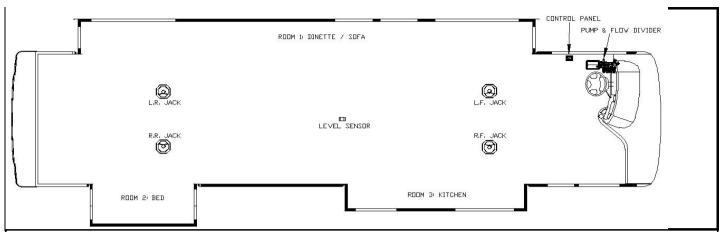

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
 - 4) Room #1 will have a non-powered slide mechanism in center of room
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8340	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 228	Pump to Room 3	2	Purple	2474	146 / Passenger Side
Hose, 480	Pump to Room 2	2	Gray	2490	345 / Drivers Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			


40B MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

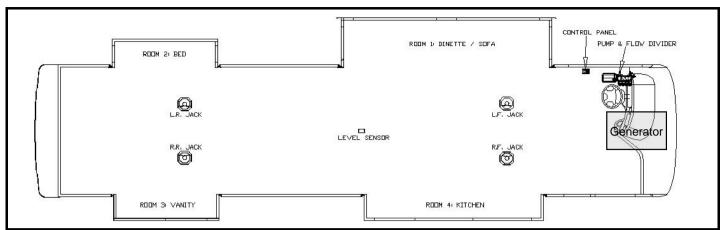

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		?	
Pump	9-Function, 4 Rooms, & Jacks	1		?	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7351	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to syncronizing cylinder	2	Green	2467	Inside pump compartment
Hose w90, 168	Sync cylinder to front slide, Room 1	1	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	1	Green	2469	187 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 504	Pump to Room 2	2	Purple	?	357 / Drivers Side
Hose w90, 456	Pump to Room 3	2	Gray	2488	389 / Passenger Side
Hose w90, 204	Pump to Room 4	2	Red	2472	146 / Passenger Side
Hose, 60	Pump to Generator Slide	2		2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		ь			
		Revisions			


32R WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

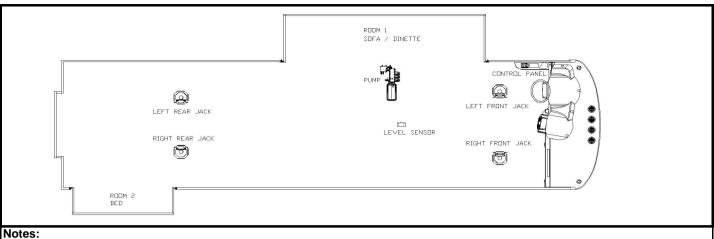

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8308	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	the since mechanism.
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, 364	Pump to Room 2	2	Purple	7300	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
,	·				
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.


32R WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

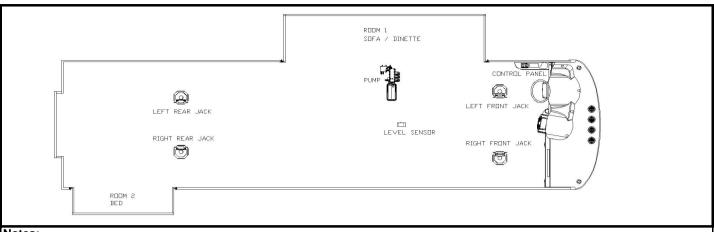

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	33.3.	8308	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 288	Pump to Jack, Right Rear	2	Yellow	2478	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Davida!			
4		Revisions	n Dm 1 ot	ting with the sale	andula ralagged 04/24/06
1	New chart for Windsport for MY2007 due to	raux riat 0	n Km 1, star	ung with the scr	iedule released 04/24/06.
					_
					_
i					


36R WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

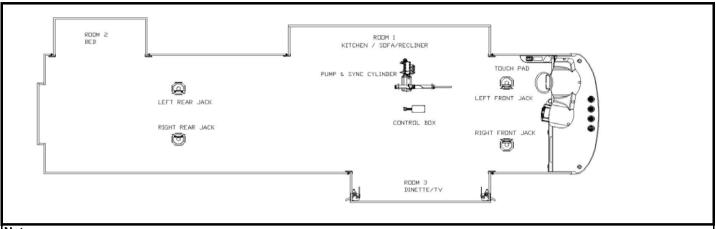

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			


39D FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

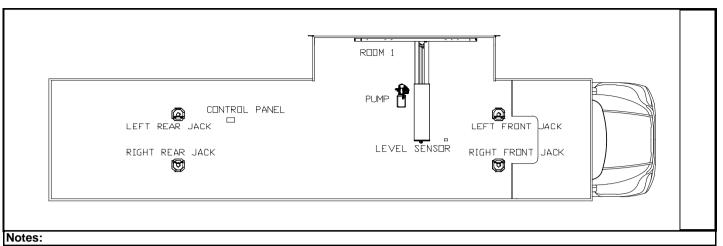

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	73 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
	,				
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
1		Revisions			
+					


42D FUN MOVEREQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

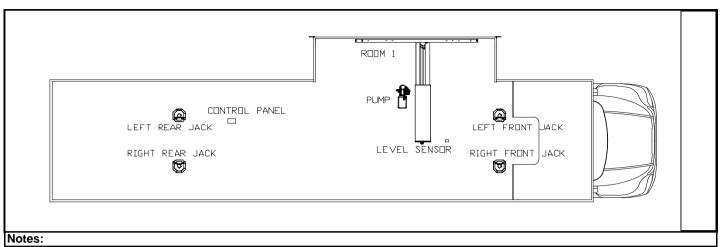

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Otv	Color	Vendor PN	Measuring from back of cab
itelli, Leligth	Description / Location	Qty	COIOI	vendor PN	floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	73 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	עפו	HWH	N/A
rravei Ciamp	Two per Slide	IN/A	+	ПИЛ	IN/A
		Options			
Kit	(Items listed below)	1		8253	Τ
	(vierne neisea a even,				
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
,	, ,				
		Revisions			


30Q HURRICANE/WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

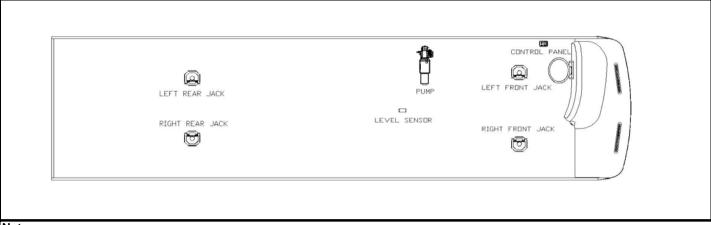

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Add Windsport to Title of this chart for MY20	107.			


31D HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

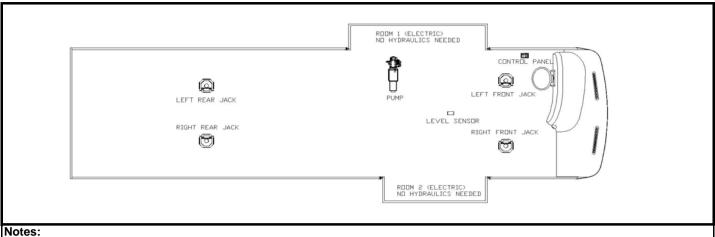

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8252		
Pump	4-Function, Jacks	1		7239BR		
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic	
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.	
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473		
Hose, 180	Pump to Jack, Right Front	2	White	2470		
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476		
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A	
Travel Clamp	Two per Slide	N/A		HWH	N/A	
		Options				
Revisions						
1 Add Windsport to Title of this chart for MY2007.						
	1					


31H HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

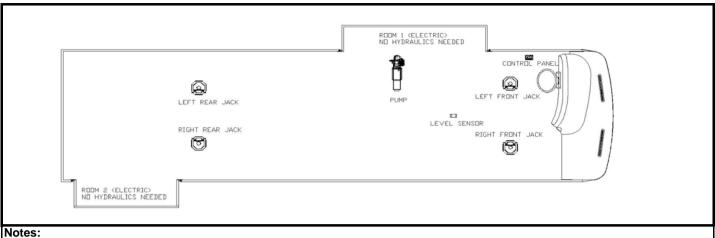

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8252		
Pump	4-Function, Jacks	1		7239BR		
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic	
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.	
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473		
Hose, 180	Pump to Jack, Right Front	2	White	2470		
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476		
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A	
Travel Clamp	Two per Slide	N/A		HWH	N/A	
		Options				
		Davisiana				
1	Add Windsport to Title of this chart for MY20	Revisions				
TAGG WINGSPORT O THE OF THIS CHARLOF WIT 2007.						
					_	


32E HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

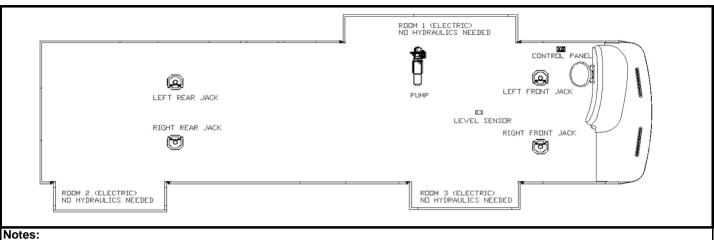

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8252		
Pump	4-Function, Jacks	1		7239BR		
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic	
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.	
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473		
Hose, 180	Pump to Jack, Right Front	2	White	2470		
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476		
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A	
Travel Clamp	Two per Slide	N/A		HWH	N/A	
		Options	ı			
		Revisions	<u> </u>			
Revisions						


32R HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

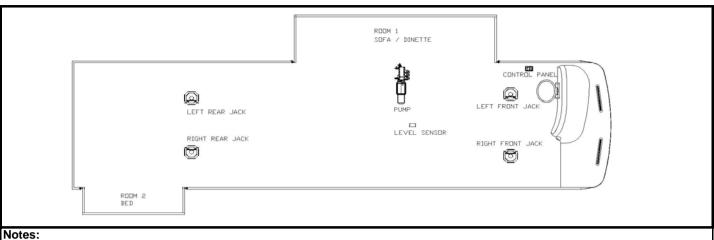

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8254	
Pump	6-Function, 2 Rooms, Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 228	Pump to Jack, Right Rear	2	Yellow	2474	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	305 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			


33H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

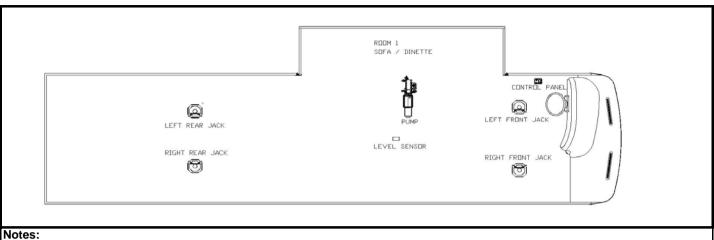

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8270		
Pump	5-Function,1 Room, Jacks	1		7242BR		
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic	
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.	
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473		
Hose, 180	Pump to Jack, Right Front	2	White	2470		
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476		
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A	
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A	
Travel Clamp	Two per Slide	N/A		HWH	N/A	
		Options	T			
		Revisions				
Venigionia						
L	<u>l</u>					


34B/34S HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

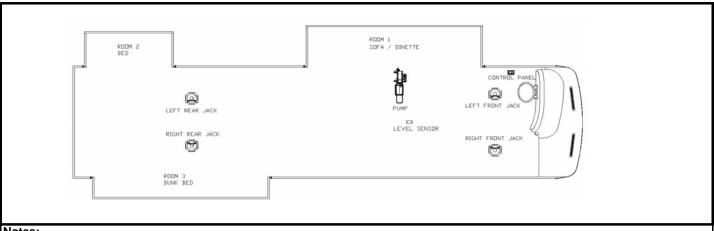

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	341 / Drivers Side
Hose w90, 372	Pump to Room 3	2	Gray	2481	300 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		.			
0/4/0000		Revisions			
9/1/2006	Add 34S to 34B chart				


34N HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

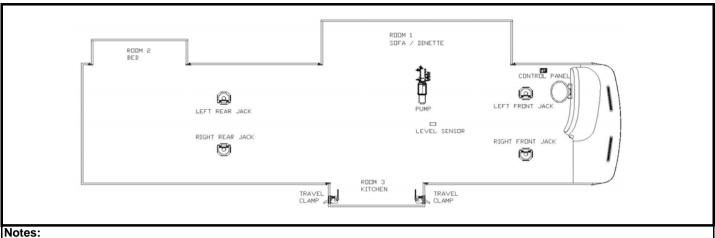

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8269	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	305 / Passenger Side
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Davidalar -			
		Revisions			


34Y HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

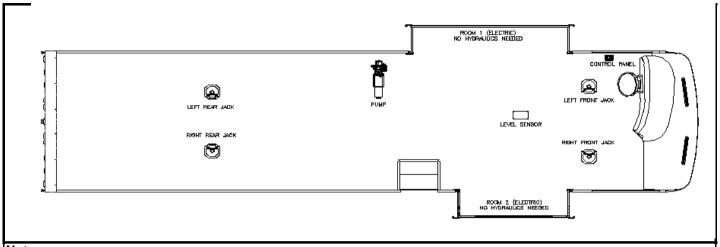

Notes:

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end
Touch Pad	Located to the left of the drivers seat	1		2318	location of the hydraulic
Control Box	Attached to bottom of structure	1		2730	hoses where they attach to
Flow Divider	Mounted inside pump compartment	N/A		N/A	the slide mechanism.
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	2	White	2473	
Hose, 180	Pump to Jack, Right Rear	2	Yellow	2470	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
				1	
Options					
Revisions	Description			Ву	Date
	·				

30Q HURRICANE/WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

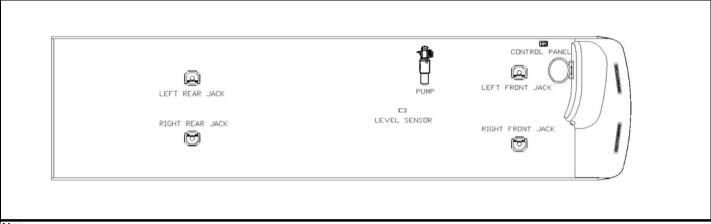


Notes:

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
4		Revisions			
	Add Windsport to Title of this chart for MY20 Update per Equalizer Specs	JU7.			
	Opaate per Equalizer Opecs				


31D HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

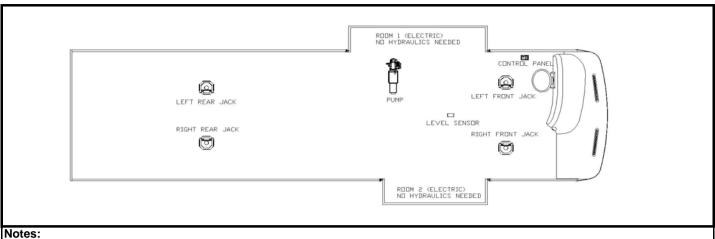

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Add Windsport to Title of this chart for MY20				
	Update per Equalizer Specs	,,,,			
_	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				


31H HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

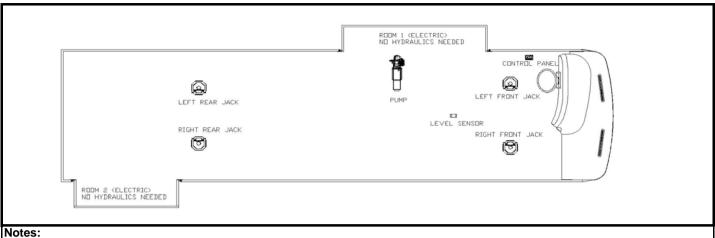

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
	Add Windsport to Title of this chart for MY20)07.			
2	Update per Equalizer Specs				


32E HURRICANE/WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

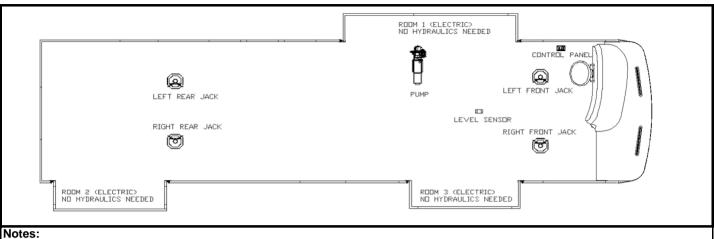

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs				


33H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

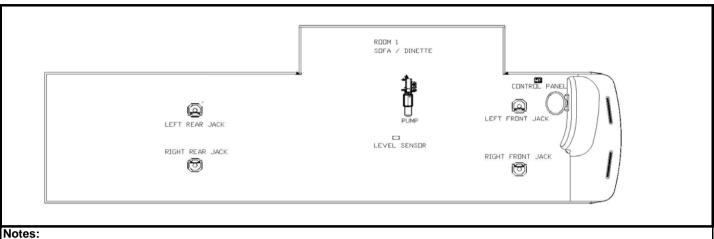

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8270	
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs				
	1				


33T HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

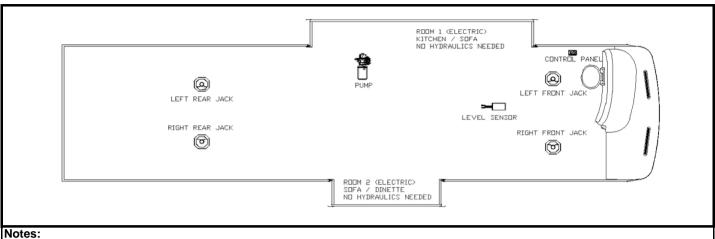

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8381	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 204	Pump to Jack, Left Front	2	Brown	2472	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 252	Pump to Jack, Right Front	2	White	2587	
Hose, 216	Pump to Jack, Right Rear	2	Yellow	2473	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Danisian			
	T	Revisions			


34B/34S HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

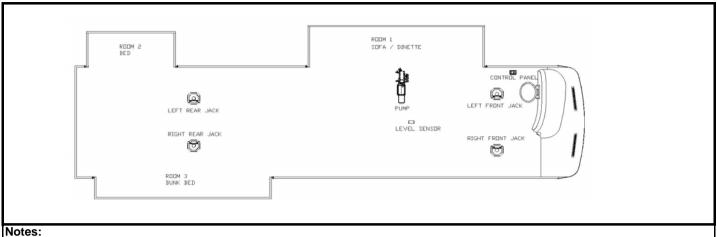

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	341 / Drivers Side
Hose w90, 372	Pump to Room 3	2	Gray	2481	300 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
0/4/0000		Revisions			
9/1/2006	Add 34S to 34B chart				
2	Update per Equalizer Specs				


34N HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

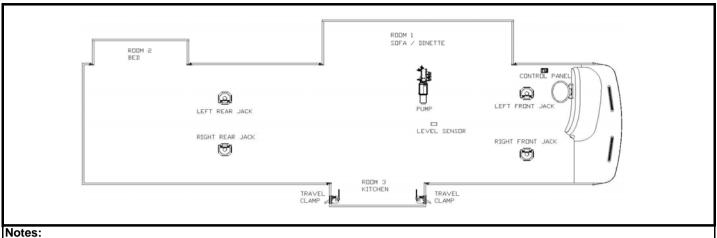

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8269	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	305 / Passenger Side
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
					_
		Revisions			
1	Update per Equalizer Specs				-


34Y HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

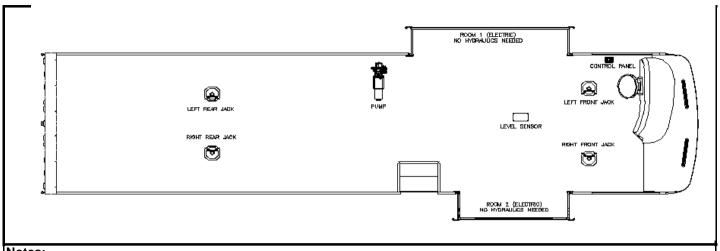

Notes:


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end
Touch Pad	Located to the left of the drivers seat	1		2318	location of the hydraulic
Control Box	Attached to bottom of structure	1		2730	hoses where they attach to
Flow Divider	Mounted inside pump compartment	N/A		N/A	the slide mechanism.
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	2	White	2473	
Hose, 180	Pump to Jack, Right Rear	2	Yellow	2470	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
		Revision	s		
1	Update per Equalizer Specs				

33C FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

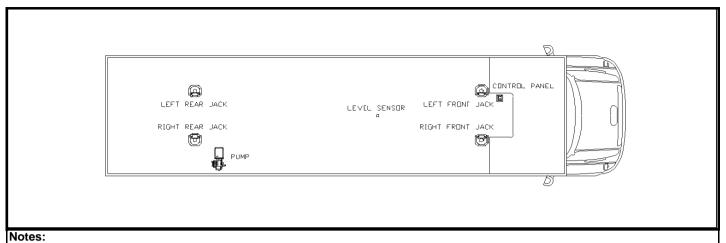


Item, Length	Description / Location	Qty	Color	Vendor PN	
	·				-
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	•
Control Box	Attached to bottom of structure	1		2319	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 288	Pump to Jack, Left Front	2	Brown	2478	mecnanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date

34D FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

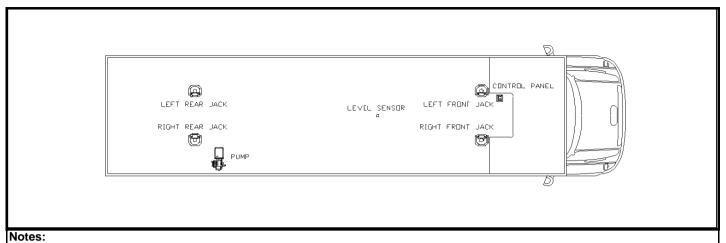


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2319	•
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 288	Pump to Jack, Left Front	2	Brown	2478	mechanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
				-,	

34C FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

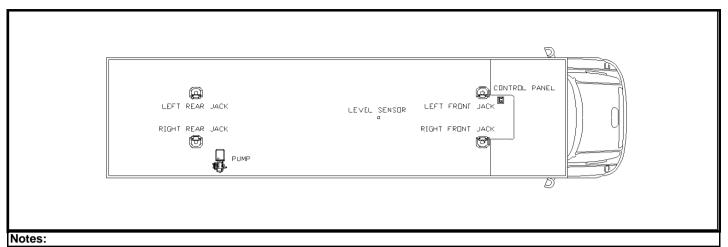


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2319	•
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 288	Pump to Jack, Left Front	2	Brown	2478	mechanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
				-,	

35 D FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

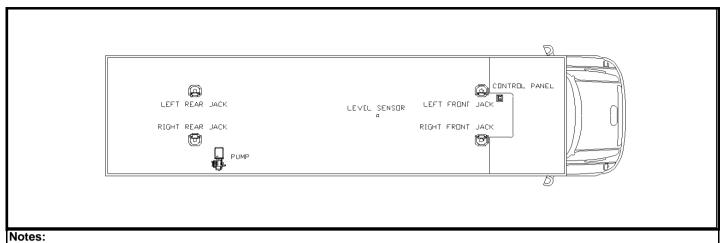

Item, Length	Description / Location	Qty	Color	Vendor PN	
	·				-
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	•
Control Box	Attached to bottom of structure	1		2319	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 288	Pump to Jack, Left Front	2	Brown	2478	mecnanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date


39C FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

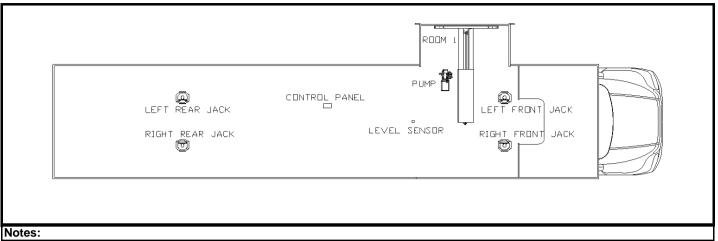

1) Jacks mount top hole to 2nd from top mounting plate hole.


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
, , ,					floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	42 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 96	Pump to Jack, Left Front	2	Brown	2463	
Hose, 252	Pump to Jack, Left Rear	2	Orange	2587	
Hose, 120	Pump to Jack, Right Front	2	White	2465	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
		Revisions			
		Revisions			

39D FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

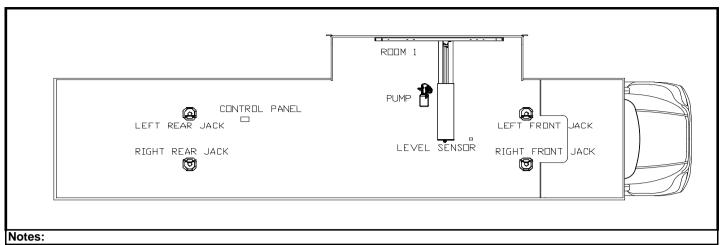


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
,					floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	73 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 96	Pump to Jack, Left Front	2	Brown	2463	
Hose, 252	Pump to Jack, Left Rear	2	Orange	2587	
Hose, 120	Pump to Jack, Right Front	2	White	2465	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
		Revisions			
	-				

42D FUN MOVEREQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

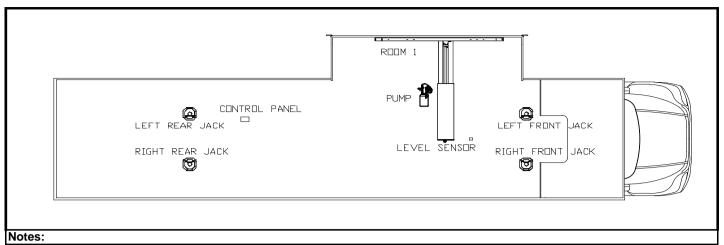


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
,					floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	73 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 96	Pump to Jack, Left Front	2	Brown	2463	
Hose, 252	Pump to Jack, Left Rear	2	Orange	2587	
Hose, 120	Pump to Jack, Right Front	2	White	2465	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
		Revisions			
	-				

32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

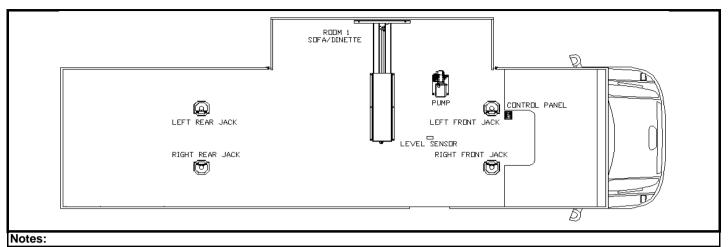


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8264	
Pump	5-Function,1 Room, Jacks	1		7242BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2730	•
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Devisions	Description			D ₁	Data
Revisions 1	Description Made Jack, Control Panel, Level Sensor & ho	oses stand	ard	By JB	Date 11/17/2005

33K KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

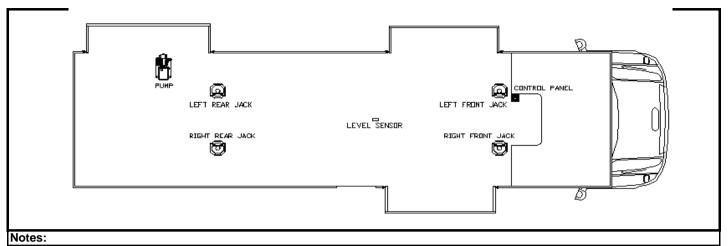


Itom Longth	Description / Location	061	Color	Vendor PN	Measuring from back of cab
Item, Length	Description / Location	Qty	Color	vendor PN	floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside nump compartment	N/A		N/A	
Hose, N/A	Mounted inside pump compartment Pump to Flow Divider	N/A	TBD	N/A	mechanism. N/A
	Flow divider to front slide, Room 1	N/A N/A	TBD	N/A N/A	N/A N/A
Hose, N/A	,				
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
Kit	(Items listed below)	1		8274	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 300	Pump to Jack, Left Front	2	Brown	2479	
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 300	Pump to Jack, Right Front	2	White	2479	
Hose, 132	Pump to Jack, Right Rear	2	Yellow	2466	
	l F	Revisions			
I					
				-	-

34G KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

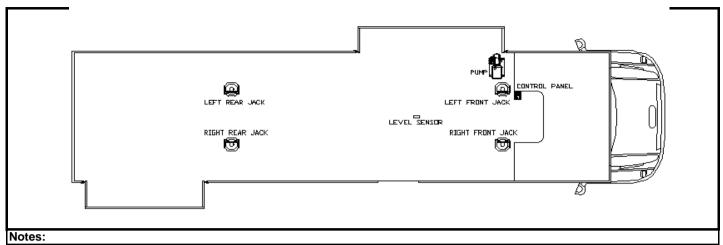


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
	·				
		Options			
Kit	(Items listed below)	1		8275	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
	F	Revisions			

34H KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

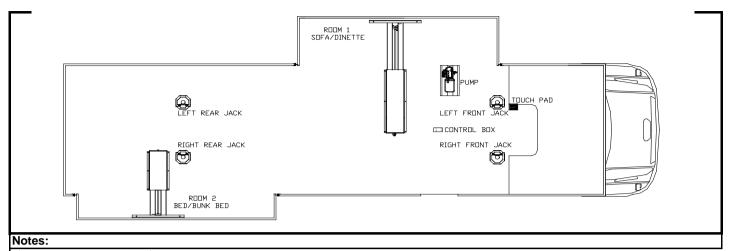


Item, Length	Description / Location	Qty	Color	Vendor PN	
IZit	(Itama Patadhalass)	4	1	00.44	
Kit	(Items listed below)	1	<u> </u>	8341	_
Pump	6-Function,2 Rooms, Jacks	1	<u> </u>	7243BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2730	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A	<u> </u>	N/A	mechanism.
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Hose, 300	Pump to Room 2	2	Purple	2479	245 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Revisions	Description			Ву	Date

35B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

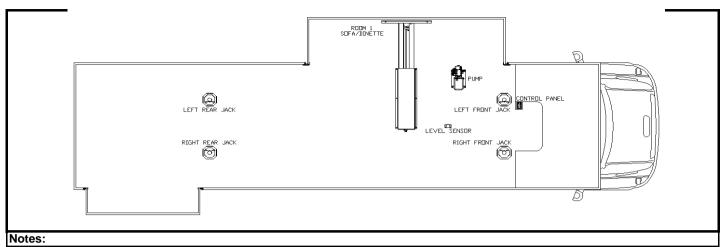

Itama I an ath	Description / Leastion	041	Color	Vander DN	
Item, Length	Description / Location	Qty	Color	Vendor PN	-
Kit	(Items listed below)	1		8264	-
Pump	5-Function,1 Room, Jacks	<u> </u>		7242BR	-
Jack	12,000 lbs, 16" Stroke	4		7242BR 7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	<u> </u>		2730	of the hydraulic hoses where
Flow Divider		N/A		N/A	they attach to the slide
	Mounted inside pump compartment	2 N/A	Brown	2462	mechanism.
Hose, 84 Hose, 264	Pump to Jack, Left Front Pump to Jack, Left Rear	2		2462	-
	·	2	Orange White	2464	-
Hose, 108	Pump to Jack, Right Front	2	Yellow	2464	-
Hose, 276	Pump to Jack, Right Rear	∠ N/A		= :::	N1/A
Hose, N/A	Pump to Flow Divider		TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
D					5.4
Revisions	Description			Ву	Date


35B MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

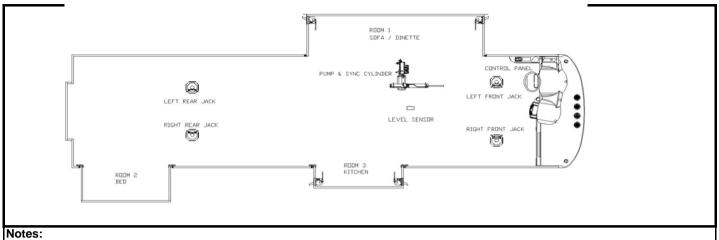

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8313			
Pump	7-Function, 2 Rooms & Jacks	1		7301			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.		
Hose, 264	Pump to Jack, Left Rear	2	Orange	7322			
Hose, 180	Pump to Jack, Right Front	2	White	7296			
Hose, 300	Pump to Jack, Right Rear	2	Yellow	7323			
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment		
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side		
Hose, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 420	Pump to Room 2	2	Purple	7313	350 / Passenger Side		
Hose w90, 110	Pump to Room 3	2	Gray	7299	160 / Passenger Side		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	4		HWH	N/A		
		Options					
	In 1141: (1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 104	10.4.10.0			
1	Add this floorplan for MY2007 starting with the						
2	Change name from 36B to 35B still starting			1/06			
3	Chg'd sync cylinder p/n to 7387, was 7351, s	see ECN-42	37 12-8-06				


36E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

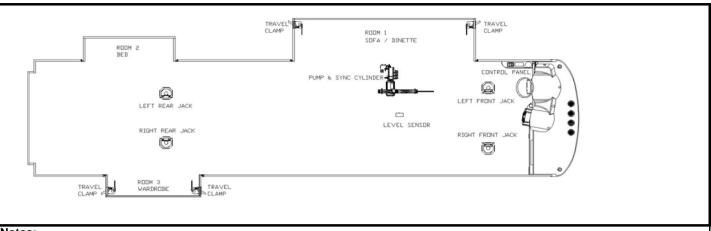

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8288			
Pump	7-Function, 3 Rooms & Jacks	1		7301			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.		
Hose, 264	Pump to Jack, Left Rear	2	Orange	7322			
Hose, 180	Pump to Jack, Right Front	2	White	7296			
Hose, 300	Pump to Jack, Right Rear	2	Yellow	7323			
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment		
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side		
Hose, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 364	Pump to Room 2	2	Purple	7300	319 / Drivers Side		
Hose w/90, 364	Pump to Room 3	2	Gray	7324	319 / Passenger Side		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	4		HWH	N/A		
		Options					
		Revisions	. 5	011 / 11 1			
1	Flow divider replaces sync cylinder, add 90 f	itting to "Pu	mp to Room	3" (addendum t	to original ECN 3706)		
2	Windsport now has it's own chart starting wi			1 U4/24/U6, CH-(J149 (MY2007)		
3	Chg'd sync cylinder p/n to 7387, was 7351, s	see ECN-42	37 12-8-06				

36K MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

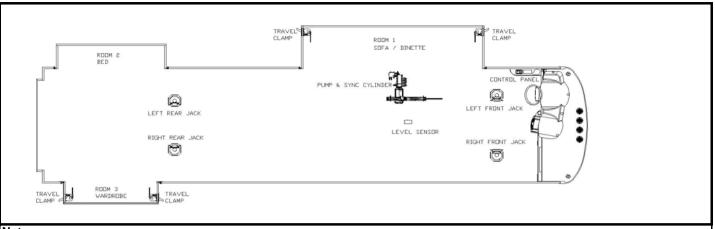


Notes:

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Itom Longth	Description / Location	Qty	Color	Vendor PN	
Item, Length Kit	(Items listed below)		COIOI	8289	
Pump	7-Function, 3 Rooms & Jacks	1 1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	4 1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 140	Pump to Jack, Left Florit	2	Orange	7322	the slide mechanism.
Hose, 180	Pump to Jack, Left Real Pump to Jack, Right Front	2	White	7322	
		2	Yellow	7323	
Hose, 300	Pump to Jack, Right Rear	2	Green		Incide numa comportment
Hose, 32	Pump to sync cylinder			7298	Inside pump compartment
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	2	Purple	7300	340 / Drivers Side
Hose w/90, 364	Pump to Room 3	2	Gray	7324	323 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	4		HWH	N/A
		Options			
		Revisions			
1	Flow divider replaces sync cylinder, add 90 f				
2	Windsport now has it's own chart starting wit			I 04/24/06, CH-0)149 (MY2007)
3	Chg'd sync cylinder p/n to 7387, was 7351, s	see ECN-42	37 12-8-06		
			-		


36R MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

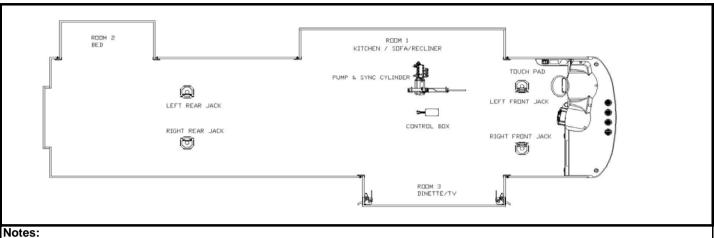

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

	c hose terminations for room #3 require 90 de	g. c c c c c c c c c c c c c c c c c c c			
tem, Length	Description / Location	Qty	Color	Vendor PN	Measuring from inside of
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the left of the drivers seat	1		2318	
_evel Sensor	Attached to bottom of structure	1		2319	
Sync Cylinder	Mounted behind pump compartment	1		7351	
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartme
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Fravel Clamp	Two per Slide	2		HWH	N/A
Options					


36Z MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

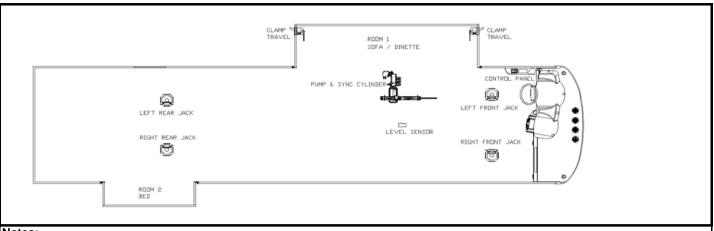

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8290			
Pump	6-Function, 2 Rooms & Jacks	1		7243			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.		
Hose, 264	Pump to Jack, Left Rear	2	Orange	7322			
Hose, 180	Pump to Jack, Right Front	2	White	7296			
Hose, 300	Pump to Jack, Right Rear	2	Yellow	7323			
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment		
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side		
Hose, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 364	Pump to Room 2	2	Purple	7300	319 / Passenger Side		
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	2		HWH	N/A		
		Options					
		D					
4		Revisions	-1 =0\10700	<u> </u>			
1	Flow divider replaces sync cylinder (addendu				24.40 (NI)(0007)		
2	Windsport now has it's own chart starting with			1 U4/24/U6, CH-(J149 (MY2007)		
3	Chg'd sync cylinder p/n to 7387, was 7351, s	see ECN-42	37 12-8-06				


38E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

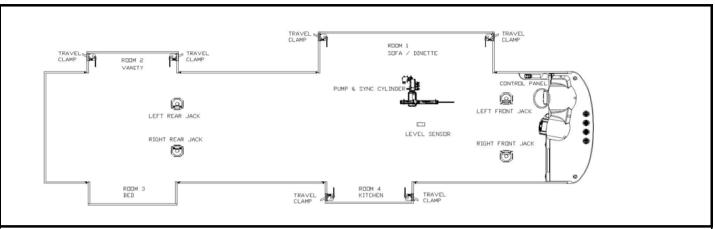

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8291			
Pump	8-Function, 4 Rooms & Jacks	1		7302			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.		
Hose, 282	Pump to Jack, Left Rear	2	Orange	7325			
Hose, 180	Pump to Jack, Right Front	2	White	7296			
Hose, 318	Pump to Jack, Right Rear	2	Yellow	7326			
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment		
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side		
Hose, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 364	Pump to Room 2	2	Purple	7300	356 / Drivers Side		
Hose, 396	Pump to Room 3	2	Gray	7327	344 / Passenger Side		
Hose w/90, 110	Pump to Room 4	2	Red	7328	160 / Passenger Side		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	6		HWH	N/A		
		Options					
		Davidalar -					
1		Revisions	mn to Door	4" (addand: 4	e original ECN 2706)		
2	Flow divider replaces sync cylinder, add 90 f Windsport now has it's own chart starting wi	th the seker	TILL TO KOOM	4 (addendum 1	.0 011ginal ECN 3706)		
3	Chg'd sync cylinder p/n to 7387, was 7351, s			1 U4/24/U0, UH-L	7149 (IVI12007)		
3	Crig a sync cylinaer p/n to 7367, was 7351, s	SEE EUN-42	31 12-0-00				


35B MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

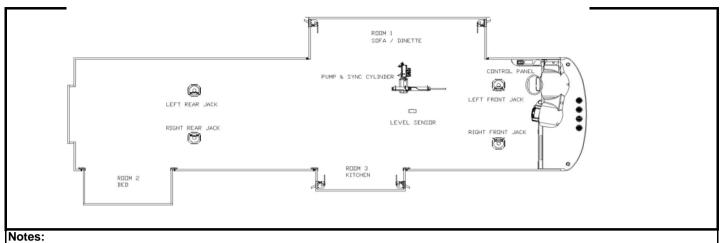

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8313				
Pump	7-Function, 2 Rooms & Jacks	1		7301BR				
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476				
Hose, 180	Pump to Jack, Right Front	2	White	2470				
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479				
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartment			
Hose, 108	Sync cylinder to front slide, Room 1	2	Green	2464	95 / Drivers Side			
Hose, 108	Sync cylinder to rear slide, Room 1	2	Green	2464	166 / Drivers Side			
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A			
Hose, 420	Pump to Room 2	2	Purple	2485	350 / Passenger Side			
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A			
Travel Clamp	Two per Slide	4		HWH	N/A			
		Options						
4	Add this floornian for MACOOT starting with the	000000000000	***********************	/24/06				
2	Add this floorplan for MY2007 starting with the							
	Change name from 36B to 35B still starting			1/00				
3	Chg'd sync cylinder p/n to 7387, was 7351, see ECN-4237 12-8-06							

36E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

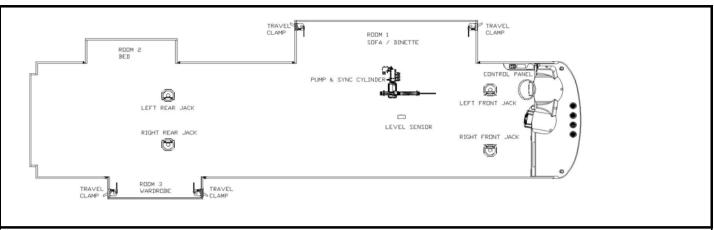


- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8288			
Pump	7-Function, 3 Rooms & Jacks	1		7301BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.		
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474			
Hose, 168	Pump to Jack, Right Front	2	White	2469			
Hose, 252	Pump to Jack, Right Rear	2	Yellow	2587			
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartment		
Hose, 108	Sync cylinder to front slide, Room 1	2	Green	2464	95 / Drivers Side		
Hose, 108	Sync cylinder to rear slide, Room 1	2	Green	2464	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side		
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	4		HWH	N/A		
		Options					
		Davidalay -					
1		Revisions	mn to Door	2" (addandura t	to original ECN 2706)		
2	Flow divider replaces sync cylinder, add 90 f Windsport now has it's own chart starting wi	th the cohes	IIIP to Koom	3 (addendum t	10 Oliginal ECN 3706)		
3	Chg'd sync cylinder p/n to 7387, was 7351, s			1 04/24/00, CH-C	7148 (WITZUUT)		
3	Crig a sync cylinaer p/n to 7367, was 7351, s	SEE EUN-42	31 12-6-06				

36F MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)


STANDARD ON THIS UNIT

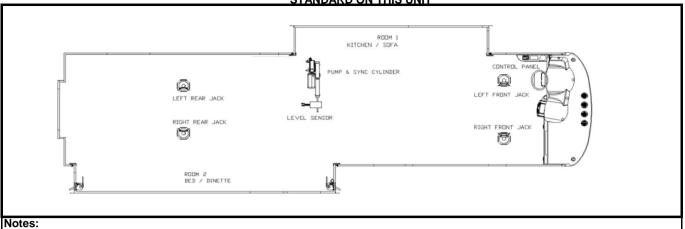

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8366	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Level Controller	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted inside pump compartment	1		7397	hoses where they attach to
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	the slide mechanism.
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	
Hose, 264	Pump to Jack, Right Front	2	White	2476	
Hose, 204	Pump to Jack, Right Rear	2	Yellow	2472	
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388	
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side
Slide Unit	Room 1 - 24" above floor slide	1		7369	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			

36K MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

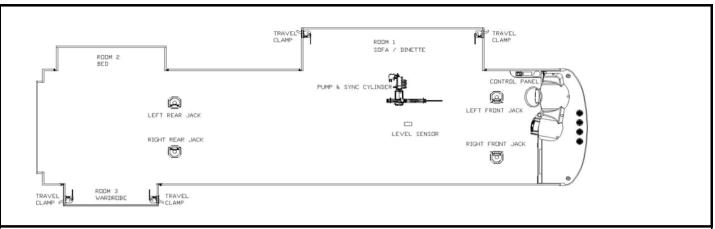


Notes:

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8289			
Pump	7-Function, 3 Rooms & Jacks	1		7301BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476			
Hose, 180	Pump to Jack, Right Front	2	White	2470			
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479			
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartment		
Hose, 108	Sync cylinder to front slide, Room 1	2	Green	2464	95 / Drivers Side		
Hose, 108	Sync cylinder to rear slide, Room 1	2	Green	2464	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 372	Pump to Room 2	2	Purple	2481	340 / Drivers Side		
Hose w/90, 372	Pump to Room 3	2	Gray	2481	323 / Passenger Side		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	4		HWH	N/A		
		Ontions					
		Options	I	Π	Т		
		Revisions					
1	Flow divider replaces sync cylinder, add 90 f						
2	Windsport now has it's own chart starting wit			d 04/24/06, CH-0	0149 (MY2007)		
3	Chg'd sync cylinder p/n to 7387, was 7351, see ECN-4237 12-8-06						


36R MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

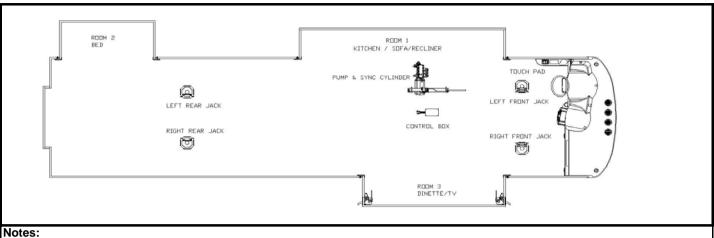

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

em, Length	Description / Location	Qty	Color	Vendor PN	Measuring from inside
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the left of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
ync Cylinder	Mounted behind pump compartment	1		7397	
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 240	Pump to Jack, Right Rear	2	Yellow	2475	
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartme
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
ravel Clamp	Two per Slide	2		HWH	N/A
Options					
<u> </u>					


36Z MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

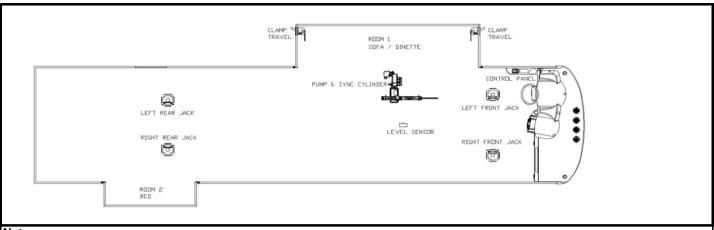

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8290			
Pump	6-Function, 2 Rooms & Jacks	1		7243BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476			
Hose, 180	Pump to Jack, Right Front	2	White	2470			
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479			
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartment		
Hose, 108	Sync cylinder to front slide, Room 1	2	Green	2464	95 / Drivers Side		
Hose, 108	Sync cylinder to rear slide, Room 1	2	Green	2464	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side		
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	2		HWH	N/A		
		Options					
		Revisions	. = 4 4				
1	Flow divider replaces sync cylinder (addende				24 40 (N. 1) (20 27)		
2	Windsport now has it's own chart starting wi			1 04/24/06, CH-0)149 (MY2007)		
3	Chg'd sync cylinder p/n to 7387, was 7351, s	see ECN-42	37 12-8-06				


38E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

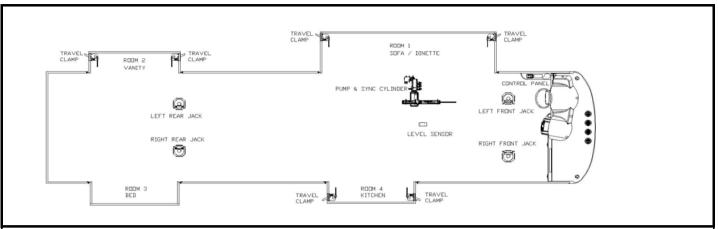

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8291			
Pump	8-Function, 4 Rooms & Jacks	1		7302BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478			
Hose, 180	Pump to Jack, Right Front	2	White	2470			
Hose, 324	Pump to Jack, Right Rear	2	Yellow	2480			
Hose, 36	Pump to sync cylinder	2	Green	2458	Inside pump compartment		
Hose, 108	Sync cylinder to front slide, Room 1	2	Green	2464	95 / Drivers Side		
Hose, 108	Sync cylinder to rear slide, Room 1	2	Green	2464	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, 372	Pump to Room 2	2	Purple	2481	356 / Drivers Side		
Hose, 396	Pump to Room 3	2	Gray	2483	344 / Passenger Side		
Hose w/90, 108	Pump to Room 4	2	Red	2464	160 / Passenger Side		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	6		HWH	N/A		
		Options					
		Davidalar -					
1		Revisions	mn to Door	4" (addand: 4	e original ECN 2706)		
2	Flow divider replaces sync cylinder, add 90 f Windsport now has it's own chart starting wi	th the seker	TILL TO KOOM	4 (addendum 1	.0 011ginal ECN 3706)		
3				1 U4/24/U0, UH-L	7149 (IVI12007)		
3	3 Chg'd sync cylinder p/n to 7387, was 7351, see ECN-4237 12-8-06						


39A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

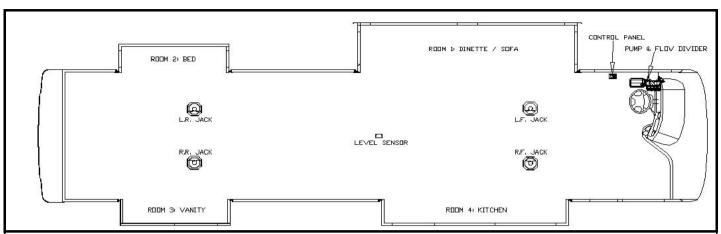

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		D '			
		Revisions	CN #2045		
1	Beginning with release of 1/23/06 and docum			fitting ohin lease	
1	ECN#4099 Equalizer standardize sizes & re	numbers pa	aris, 90 deg 1	nuing ship loose	;


38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

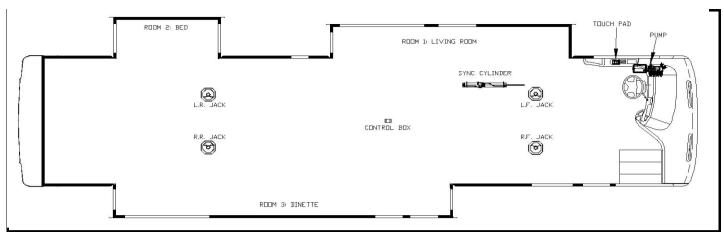

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
 - 4) Room #3 will have a non-powered slide mechanism in center of room
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Nit	Item, Length	Description / Location	Qty	Color	Vendor PN	
Sack		,	1			
Touch Pad Located to the left of the drivers seat Control Box Attached to bottom of structure 1 2318 location of the hydraulic Sync Cylinder Mounted behind LP tank 1 7351 hoses where they attach to Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 396 Pump to Jack, Left Rear 2 Orange 2483 Hose, 144 Pump to Jack, Right Front 2 White 2483 Hose, 144 Pump to Jack, Right Rear 2 Yellow 2483 Hose, 144 Pump to Jack, Right Rear 2 White 2486 Hose, 396 Pump to Jack, Right Rear 2 Gray 2467 Mounts to bracket on structure Hose w90, 432 Sync cylinder to front slide, Room 3 2 Gray 2486 103 / Passenger side Hose w90, 432 Sync cylinder to rear slide, Room 3 2 Gray 2486 350 / Passenger side Pump to Room 1 N/A Green Hose, 480 Pump to Room 1 2 Green 2469 146 / Drivers Side Pump to Generator Slide N/A Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 4 HWH N/A	Pump		1		7319	
Control Box Sync Cylinder Mounted behind LP tank 1 7351 Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 396 Pump to Jack, Left Rear 2 Orange 2483 Hose, 144 Pump to Jack, Right Front 2 White 2467 Hose, 396 Pump to Jack, Right Front 2 White 2467 Hose, 144 Pump to Jack, Right Rear 2 Yellow 2483 Hose, 144 Pump to Synchronizing cylinder 2 Gray 2467 Mounts to bracket on structure Hose w90, 432 Sync cylinder to front slide, Room 3 2 Gray 2486 103 / Passenger side Hose w90, 432 Sync cylinder to rear slide, Room 3 2 Gray 2486 350 / Passenger side Hose w90, 168 Pump to Room 1 N/A Green Hose, 480 Pump to Room 1 2 Green 2469 146 / Drivers Side Hose, 480 Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) A HWH N/A	Jack		4		7134	
Sync Cylinder	Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Hose, 144		Attached to bottom of structure	1		2319	
Hose, 396	Sync Cylinder	Mounted behind LP tank	1		7351	hoses where they attach to
Hose, 144	Hose, 144	Pump to Jack, Left Front		Brown	2467	the slide mechanism.
Hose, 396 Pump to Jack, Right Rear 2 Yellow 2483 Hose, 144 Pump to synchronizing cylinder 2 Gray 2467 Mounts to bracket on structure Hose w90, 432 Sync cylinder to front slide, Room 3 2 Gray 2486 103 / Passenger side Hose w90, 432 Sync cylinder to rear slide, Room 3 2 Gray 2486 350 / Passenger side Pump to Room 1 N/A Green Hose w90, 168 Pump to Room 1 2 Green 2469 146 / Drivers Side Hose, 480 Pump to Room 2 2 Purple 2490 345 / Drivers Side Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Travel Clamp Options		Pump to Jack, Left Rear		Orange	2483	
Hose, 144 Pump to synchronizing cylinder 2 Gray 2467 Mounts to bracket on structure Hose w90, 432 Sync cylinder to front slide, Room 3 2 Gray 2486 103 / Passenger side Hose w90, 432 Sync cylinder to rear slide, Room 3 2 Gray 2486 350 / Passenger side Pump to Room 1 N/A Green Hose w90, 168 Pump to Room 1 2 Green 2469 146 / Drivers Side Hose, 480 Pump to Room 2 2 Purple 2490 345 / Drivers Side Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Travel Clamp Options	Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose w90, 432 Sync cylinder to front slide, Room 3 2 Gray 2486 350 / Passenger side Hose w90, 432 Sync cylinder to rear slide, Room 3 2 Gray 2486 350 / Passenger side Pump to Room 1 N/A Green Hose w90, 168 Pump to Room 1 2 Green 2469 146 / Drivers Side Hose, 480 Pump to Room 2 2 Purple 2490 345 / Drivers Side Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Options	Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose w90, 432 Sync cylinder to rear slide, Room 3 2 Gray 2486 350 / Passenger side Pump to Room 1 N/A Green Hose w90, 168 Pump to Room 1 2 Green 2469 146 / Drivers Side Hose, 480 Pump to Room 2 2 Purple 2490 345 / Drivers Side Pump to Generator Slide N/A Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Options Options	Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Pump to Room 1	Hose w90, 432	Sync cylinder to front slide, Room 3		Gray	2486	103 / Passenger side
Hose w90, 168	Hose w90, 432	Sync cylinder to rear slide, Room 3	2	Gray	2486	350 / Passenger side
Hose, 480 Pump to Room 2 Pumple 2490 345 / Drivers Side Pump to Generator Slide N/A Travel Clamp (two per slide, except the bed slide) Options Options		Pump to Room 1	N/A	Green		
Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Options	Hose w90, 168	Pump to Room 1	2	Green	2469	146 / Drivers Side
Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Options	Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side
Travel Clamp (two per slide, except the bed slide) 4 HWH N/A Options				·		
Options Options		Pump to Generator Slide	N/A			N/A
	Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
Revisions			Options			
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
			Revisions			
					·	


39B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

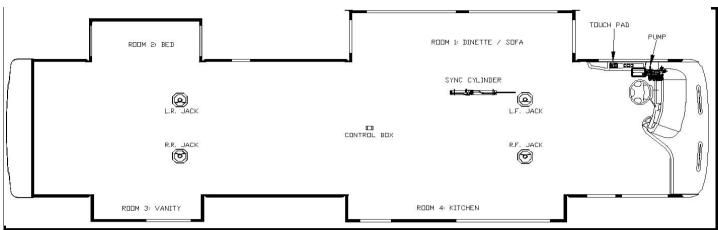

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Name	Item, Length	Description / Location	Qty	Color	Vendor PN			
Touch Pad	Kit	(Items listed below)	1		8294			
Touch Pad	Pump	8-Function, 4 Rooms & Jacks	1		7302			
Control Box	Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Nose Subset Nose Nose	Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Hose, 144	Control Box	Attached to bottom of structure	1		2319	location of the hydraulic		
Hose, 396	Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Hose, 396	Pump to Jack, Left Rear		Orange	2483			
Hose, 144	Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose w90, 168	Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483			
Hose w90, 168	Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Pump to Room 1	Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side		
Hose, 480	Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side		
Hose w90, 432		Pump to Room 1	N/A	Green				
Hose w90, 228 Pump to Room 4 2 Red 2474 155 / Passenger Side Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose UPDATE JPG		Pump to Room 2		Purple	2490	340 / Drivers Side		
Pump to Generator Slide N/A N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose UPDATE JPG	Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side		
Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose UPDATE JPG	Hose w90, 228	Pump to Room 4		Red	2474	155 / Passenger Side		
Options Provisions Revisions Beginning with release of 1/23/06 and documented on ECN #3845 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose UPDATE JPG		Pump to Generator Slide	N/A			N/A		
Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG	Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			Ontions					
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			Орионо					
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG								
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			Povisions					
1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG				CN #3845				
2 UPDATE JPG	1				fitting shin loose	1		
			mannoers pe	ario, ou deg	inting ship loose	•		
	3							


39C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

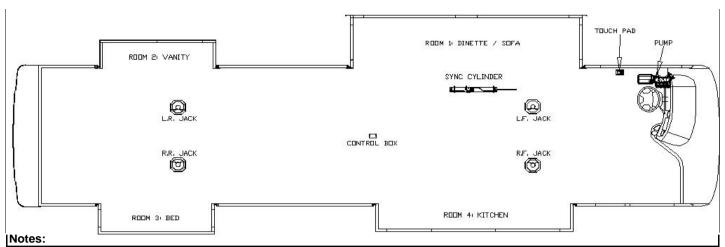

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8293			
Pump	8-Function, 4 Rooms & Jacks	1		7302			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Hose w90, 432	Pump to Room 2	2	Purple	2486	350 / Drivers Side		
Hose, 480	Pump to Room 3	2	Gray	2490	345 / Passenger Side		
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side		
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
		_					
		Revisions					
	Beginning with release of 1/23/06 and docur						
1	ECN#4099 Equalizer standardize sizes & re	enumbers pa	arts, 90 deg 1	fitting ship loose			
2	UPDATE JPG						
3	Updated per ECN #4237						


39D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

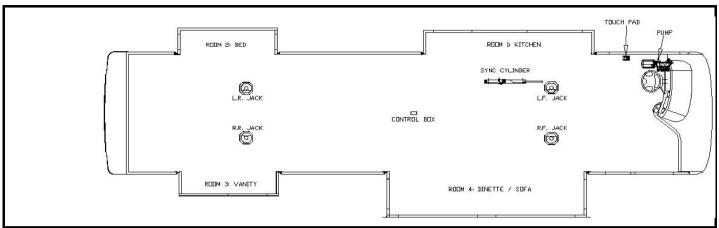

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8292		
Pump	8-Function, 4 Rooms & Jacks	1		7302		
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic	
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to	
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.	
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483		
Hose, 144	Pump to Jack, Right Front	2	White	2467		
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483		
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure	
Hose w90, 168	Pump to Room 1	2	Green	2469	149 / Drivers side	
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side	
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side	
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side	
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side	
	Pump to Generator Slide	N/A			N/A	
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A	
		Options				
		Davida ar -				
		Revisions	CN #2045			
1	Beginning with release of 1/23/06 and docur Equalizer lengthened hosepart #2415 (wa			omail on 4/27\		
1 2	ECN#4099 Equalizer standardize sizes & re					
3	UPDATE JPG	munibers pa	aits, 90 deg	inting ship 100se	•	
J	JUPDATE JPG					


39E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

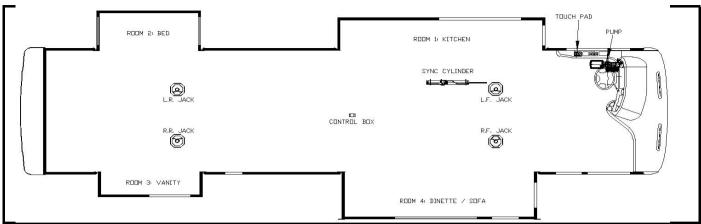

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8315	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
Sync Cylinder	Mounted behind LP tank	1		7351	
		Options	ı	l	
		Revisions			
1	ECN#4099 Equalizer standardize sizes & re		arts 90 dea	fitting ship loos	20
2	UPDATE JPG	chambers p	aris, so ucy	i maing amp 100a	
3	Updated per ECN #4237				
	ορααίου ροι Εσιν ππεσι				
	I .				


39F Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

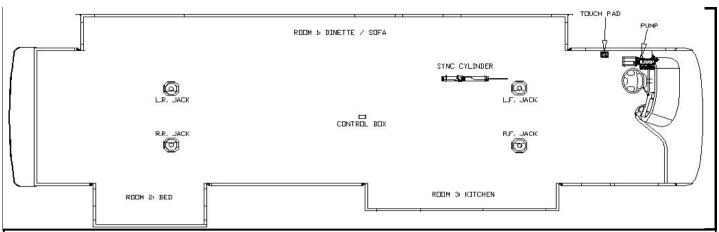

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
 - 4) Room #1 will have a non-powered slide mechanism in center of room
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8340	
Pump	7-Function, 4 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Passenger Side
Hose w90, 228	Pump to Room 3	2	Gray	2474	146 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	UPDATE JPG				
2	Updated per ECN #4237				


39G Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

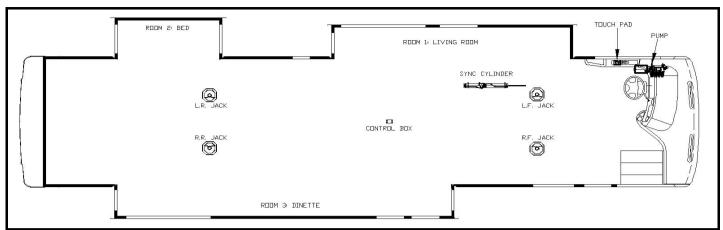

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
 - 4) Room #1 will have a non-powered slide mechanism in center of room
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8354	
Pump	7-Function, 3 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	205 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	350 / Passenger side
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	Corrected picture			·	
2	Corrected hose notes for room #3 & #1	.2-5-07			


36B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

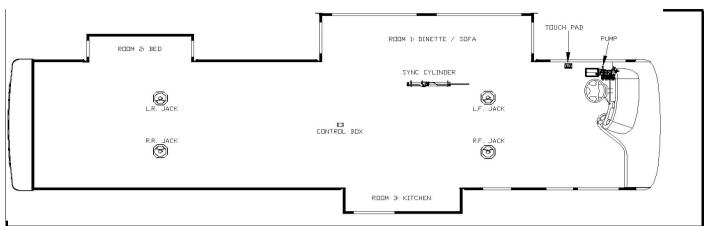

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1		8310	1	
Pump	7-Function, 3 Rooms & Jacks	1		7319	1	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic	
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.	
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481		
Hose, 144	Pump to Jack, Right Front	2	White	2467	1	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	1	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side	
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side	
	Pump to Room 1	N/A	Green			
Slide Unit	Room 1 - 36" flush floor slide	2		7164D		
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side	
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960		
Hose w90, 204	Pump to Room 3	2	Red	2472	146 / Passenger Side	
Slide Unit	Room 3 - 18" above floor slide	1		7135		
	Pump to Generator Slide	N/A			N/A	
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A	
		Options				
		Davidalas				
Revisions FONW 4400						
1	Added equalizer slide units to chart ECN# 4	4438				


38C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

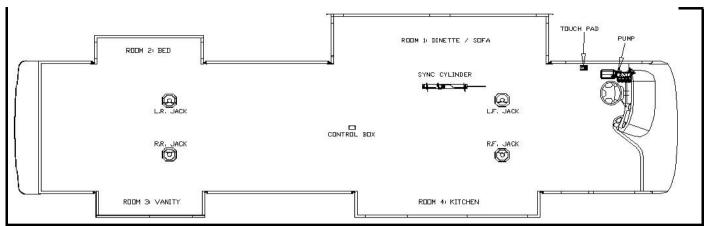

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 204	Pump to Room 4	2	Red	2472	146 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4	1438			


38D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

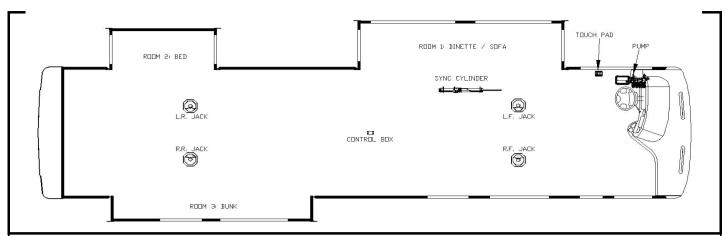

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.01	8347	1
Pump	7-Function, 3 Rooms & Jacks	<u> </u>		7319	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
·	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	-
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4	438			


38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

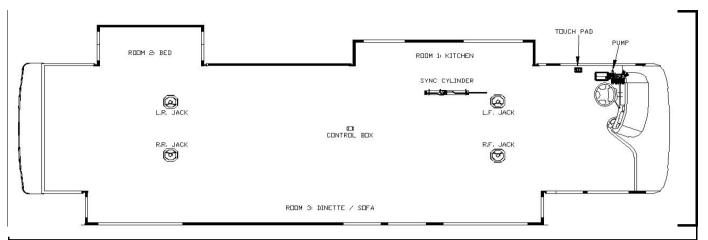

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 3	2	Green	2469	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 3	2	Green	2486	350 / Drivers side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
	Pump to Room 1	N/A	Green		
Hose w90, 168	Pump to Room 1	2	Green	2469	146 / Passenger Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	_
Hose, 480	Pump to Room 2	2	Gray	2490	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		_			
					_
		Revisions			
1	Added equalizer slide units to chart ECN# 4	1438			


39A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

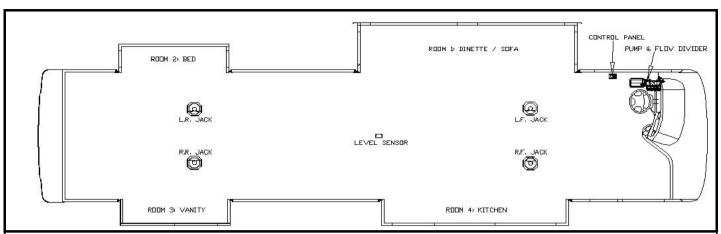

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	Coloi	8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	the since mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
11000 1100, 100	Pump to Room 1	N/A	Green	2100	100 / Billions sids
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side
	Pump to Generator Slide	N/A	1100		N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
	(
		Options			
		-			
		Revisions			
	Beginning with release of 1/23/06 and docun				
1	ECN#4099 Equalizer standardize sizes & re	numbers p	arts, 90 deg 1	fitting ship loose)


39B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

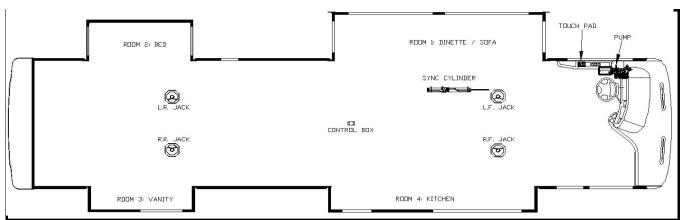

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Itom Longth	Description / Legation	Otv	Color	Vendor PN				
Item, Length Kit	Description / Location (Items listed below)	Qty 1	Color	8294				
Pump	8-Function, 4 Rooms & Jacks	<u> </u>		7302				
Jack		<u> </u>		7134	Measuring from inside of			
	17,000 lbs, 18" Stroke				<u> </u>			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1	-	7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Slide Unit	Room 1 - 36" flush floor slide	2		7164D				
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960				
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 228	Pump to Room 4	2	Red	2474	155 / Passenger Side			
Slide Unit	Room 4 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
		Revisions						
	Beginning with release of 1/23/06 and docum		CN #3845					
1	ECN#4099 Equalizer standardize sizes & re			fitting ship loose	2			
2	UPDATE JPG	manibolo p	a. 15, 55 dog	many only loose	•			
3	Updated per ECN #4237							
	Opoaled per EON #4231							


39C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

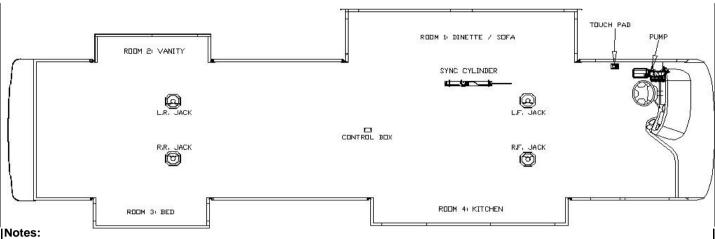

- Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1	00101	8293			
Pump	8-Function, 4 Rooms & Jacks	1		7302			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat			2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Hose w90, 432	Pump to Room 2	2	Purple	2486	350 / Drivers Side		
Hose, 480	Pump to Room 3	2	Gray	2490	345 / Passenger Side		
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side		
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
		Revisions	ON #0045				
	Beginning with release of 1/23/06 and docum	nented on E	CN #3845	Cotta a alata I.			
1	ECN#4099 Equalizer standardize sizes & re	numbers pa	arts, 90 deg 1	inting snip loose	9		
3	UPDATE JPG						
3	Updated per ECN #4237						


39D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

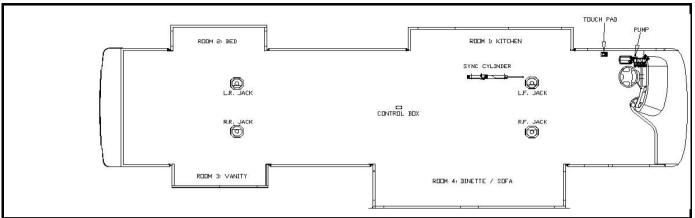

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8292			
Pump	8-Function, 4 Rooms & Jacks	1		7302			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483			
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure		
Hose w90, 168	Pump to Room 1	2	Green	2469	149 / Drivers side		
Slide Unit	Room 1 - 18" above floor slide	1		7135			
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960			
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135			
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side		
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side		
Slide Unit	Room 4 - 36" flush floor slide	2		7164D			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
			<u> </u>				
		Revisions	TON 1100.45				
	Beginning with release of 1/23/06 and docur						
1	Equalizer lengthened hosepart #2415 (wa						
2	ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose						
ა	UPDATE JPG						


39E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

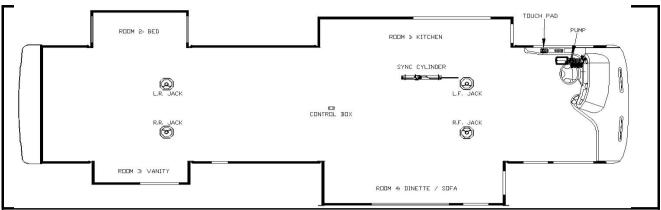

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8315				
Pump	8-Function, 4 Rooms & Jacks	1		7302				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure			
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960				
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135	-			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side			
Slide Unit	Room 1 - 24" flush floor slide	2		7369				
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side			
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side			
Slide Unit	Room 4 - 24" flush floor slide	2		7369				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options	•					
		Revisions						
1	ECN#4099 Equalizer standardize sizes & re		arts, 90 deg	fitting ship loose				
2	UPDATE JPG			g 5.11p 10000	-			
3	Updated per ECN #4237							
3	Added equalizer slide units to chart ECN# 4	438						
	Displaced equalizer state utility to trial LECHT ++50							


39F Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

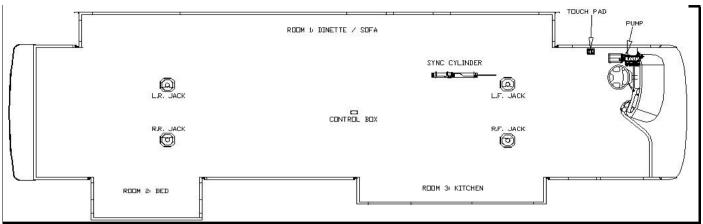

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8340				
Pump	7-Function, 4 Rooms & Jacks	1		7319				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 432	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side			
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side			
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388				
Slide Unit	Room 1 - 24" flush floor slide (angled)	1		7384	Slave			
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960				
Hose w90, 228	Pump to Room 3	2	Gray	2474	146 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
		Options						
		D						
4		Revisions						
2	UPDATE JPG Updated per ECN #4237							
3	Added equalizer slide units to chart ECN# 4	1120						
<u> </u>	Audeu equalizer slide units to chaft ECN# 2	+430						


39G Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

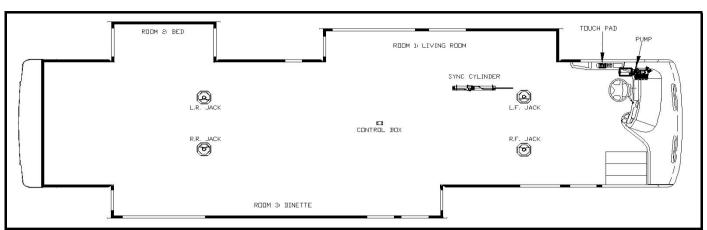

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	1	00.0.	8354		
Pump	7-Function, 3 Rooms & Jacks	1		7319		
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of	
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end	
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic	
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to	
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.	
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484		
Hose, 144	Pump to Jack, Right Front	2	White	2467	1	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484		
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side	
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side	
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388		
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	205 / Passenger side	
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	350 / Passenger side	
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388		
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side	
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960		
	Pump to Generator Slide	N/A			N/A	
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure	
		0 4'				
	ı	Options				
					1	
		Revisions				
1	Corrected picture					
2	Corrected hose notes for room #3 & #1	3-5-07				
3	Added equalizer slide units to chart ECN# 4	1438				


36B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

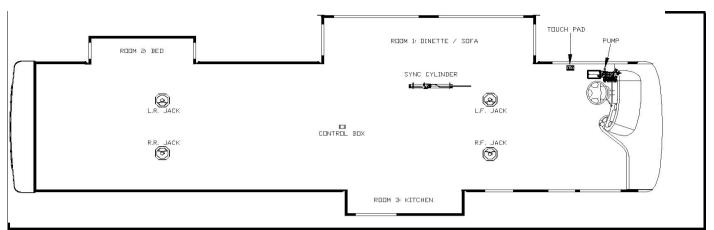

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8310	1
Pump	7-Function, 3 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 204	Pump to Room 3	2	Red	2472	146 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4	4438			


38C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

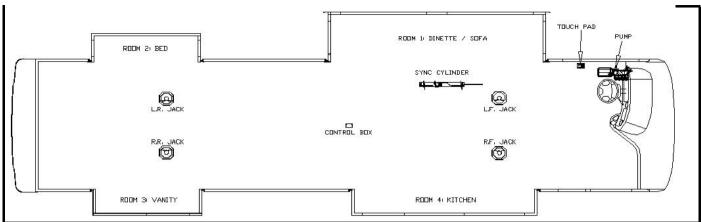

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 204	Pump to Room 4	2	Red	2472	146 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4	1438			


38D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

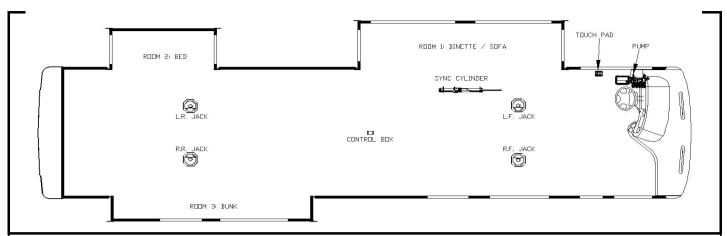

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.01	8347	1
Pump	7-Function, 3 Rooms & Jacks	<u> </u>		7319	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 432	Pump to Room 2	2	Purple	2486	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4	438			


38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

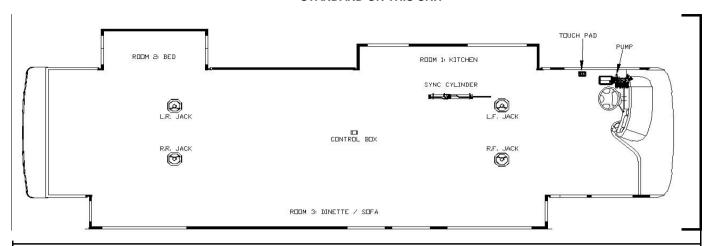

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	Color	8350	
Pump	8-Function, 4 Rooms & Jacks	<u>'</u> 1		7302	
Jack	,	4		7134	Measuring from inside of
Touch Pad	17,000 lbs, 18" Stroke	<u>4</u> 1			_
	Located to the left of the drivers seat	-		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1	D	7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 3	2	Gray	2469	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 3	2	Gray	2486	350 / Drivers side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
	Pump to Room 1	N/A	Green		
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Passenger Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	-
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	·	143960	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
			İ		
			1		
			1		
		Revisions	<u> </u>		
1	Added equalizer slide units to chart ECN# 4				
<u> </u>	riadoa oqualizor silae ariito to oriali. Lorum -	1700			
]				


39A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

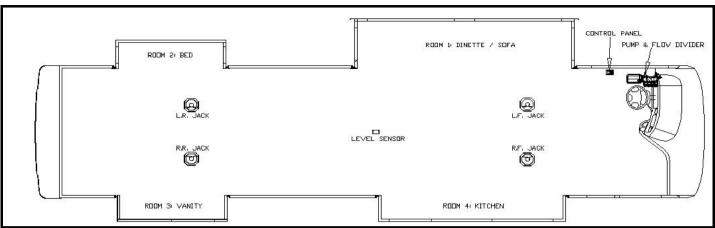

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
			<u> </u>		
		Revisions			
	Beginning with release of 1/23/06 and documents				
1	ECN#4099 Equalizer standardize sizes & re	numbers p	arts, 90 deg	titting ship loose	


39B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

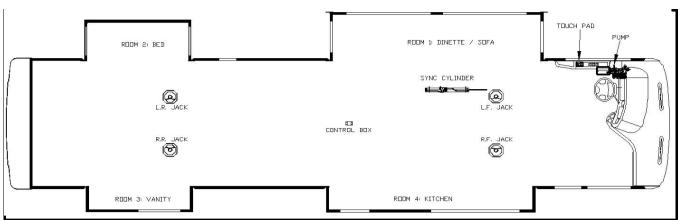

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Nit	16	Description (I)	01	1 0.1	. Versile Bil	
Pump	Item, Length	Description / Location	Qty	Color	Vendor PN	
Jack						
Touch Pad Located to the left of the drivers seat 1 2318 Control Box Attached to bottom of structure 1 2319 Location of the hydraulic Sync Cylinder Mounted behind LP tank 1 7387 Location of the hydraulic hoses where they attach to Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Location of the hydraulic hoses where they attach to Hose, 396 Pump to Jack, Left Rear 2 Orange 2483 Location of the slide mechanism. Control Hose, 396 Pump to Jack, Right Front 2 White 2467 Location of the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hoses where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the hydraulic hose where they attach to the slide mechanism. Location of the slide mechan			-			
Control Box						_
Sync Cylinder			-			*
Hose, 144			-			-
Hose, 396			•			hoses where they attach to
Hose, 144	,	Pump to Jack, Left Front				the slide mechanism.
Hose, 396		Pump to Jack, Left Rear	2	Orange		
Hose, 144	Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose w90, 168	Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose w90, 168	Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Slide Unit	Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Slide Unit	Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
Hose, 480		Pump to Room 1	N/A	Green		
Slide Unit	Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Slide Unit	Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side
Hose w90, 432			1		143960	
Slide Unit Room 3 - 18" above floor slide 1 7135 Hose w90, 228 Pump to Room 4 2 Red 2474 155 / Passenger Side Slide Unit Room 4 - 18" above floor slide 1 7135 Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG		` ' ' '	2	Gray	2486	365 / Passenger Side
Hose w90, 228	Slide Unit	Room 3 - 18" above floor slide	1	<u> </u>	7135	Ĭ
Slide Unit Room 4 - 18" above floor slide 1 7135 Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG	Hose w90, 228		2	Red		155 / Passenger Side
Pump to Generator Slide N/A N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			1			ŭ
Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			N/A			N/A
Options Revisions Beginning with release of 1/23/06 and documented on ECN #3845 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose UPDATE JPG	Travel Clamp				HWH	
Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG		(
Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Revisions Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			Options			
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG				1		
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG				1		
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG				1		
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG						
Beginning with release of 1/23/06 and documented on ECN #3845 1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG			Revisions			1
1 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 2 UPDATE JPG				CN #3845		
2 UPDATE JPG	1				fitting ship loose	9
			p	, g	3 :p	
3 IUDUATEG DEFEUN #423/	3	Updated per ECN #4237				


39C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

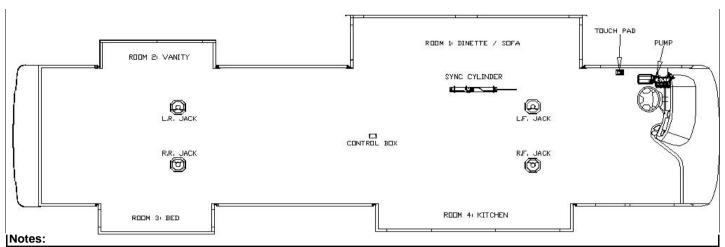

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8293				
Pump	8-Function, 4 Rooms & Jacks	1	1	7302				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Hose w90, 432	Pump to Room 2	2	Purple	2486	350 / Drivers Side			
Hose, 480	Pump to Room 3	2	Gray	2490	345 / Passenger Side			
Hose w90, 228	Pump to Room 4	2	Red	2474	146 / Passenger Side			
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
			ļ					
			-					
		Davidalas						
		Revisions	CNI #2045					
1	Beginning with release of 1/23/06 and docur ECN#4099 Equalizer standardize sizes & re			fitting ohin lessa				
2	UPDATE JPG	enumbers p	aris, 90 deg	nuing snip idose	,			
3								
<u> </u>	3 Updated per ECN #4237							


39D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

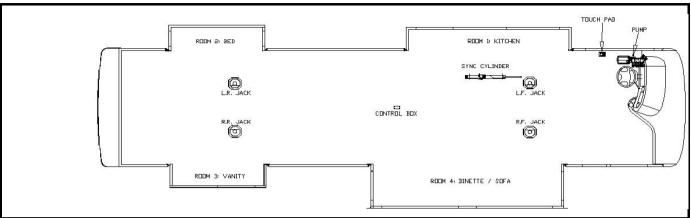

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8292			
Pump	8-Function, 4 Rooms & Jacks	1		7302			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483			
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure		
Hose w90, 168	Pump to Room 1	2	Green	2469	149 / Drivers side		
Slide Unit	Room 1 - 18" above floor slide	1		7135			
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960			
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135			
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side		
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side		
Slide Unit	Room 4 - 36" flush floor slide	2		7164D			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
			<u> </u>				
		Revisions	TON 1100.45				
	Beginning with release of 1/23/06 and docur						
1	Equalizer lengthened hosepart #2415 (wa						
3	2 ECN#4099 Equalizer standardize sizes & renumbers parts, 90 deg fitting ship loose 3 UPDATE JPG						
ა	IUPDATE JPG						


39E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

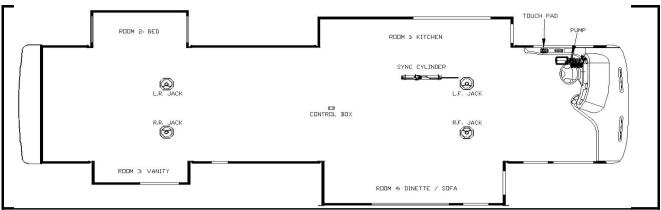

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8315	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	-
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Slide Unit	Room 1 - 24" flush floor slide	2		7369	
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7369	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options	•		
		Revisions			
1	ECN#4099 Equalizer standardize sizes & re		arts, 90 deg	fitting ship loose	
2	UPDATE JPG			g 5.11p 10000	-
3	Updated per ECN #4237				
3	Added equalizer slide units to chart ECN# 4	438			


39F Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

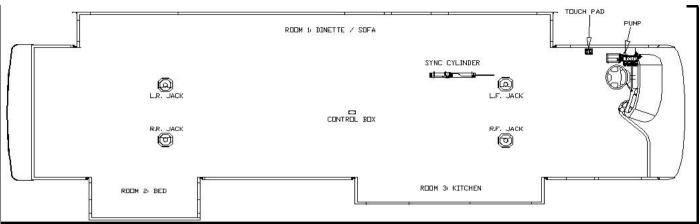

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8340				
Pump	7-Function, 4 Rooms & Jacks	1		7319				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	1			
Hose, 144	Pump to Jack, Right Front	2	White	2467	1			
Hose, 420	Pump to Jack, Right Rear	2	Yellow	2485				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 432	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side			
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side			
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388				
Slide Unit	Room 1 - 24" flush floor slide (angled)	1		7384	Slave			
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960				
Hose w90, 228	Pump to Room 3	2	Gray	2474	146 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
		Options						
					,			
			ļ					
		D						
4		Revisions						
1	UPDATE JPG							
3	Updated per ECN #4237 Added equalizer slide units to chart ECN# 4	1120						
<u>ა</u>	Added equalizer slide units to chart ECN# 4	4430						


39G Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

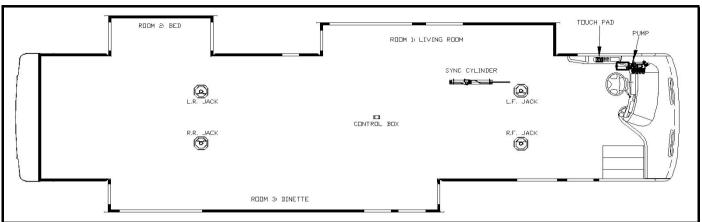

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8354	
Pump	7-Function, 3 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	205 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	350 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	Ī
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
		9 (1			
		Options	Ī		
		Revisions			
1	Corrected picture				
2	Corrected hose notes for room #3 & #1				
3	Added equalizer slide units to chart ECN# 4	1438			
			_	_	_


42A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

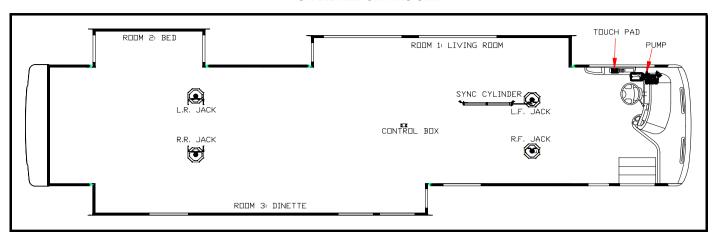

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8373	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure
		Options			
		Options	I		
		Revisions			


36B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

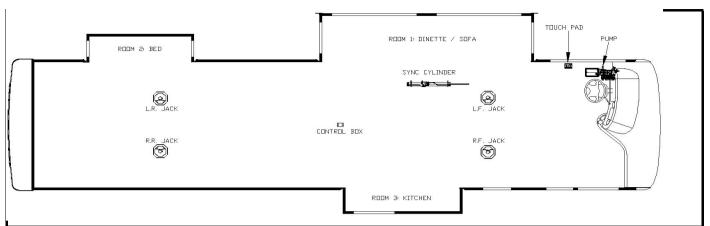

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8310	1
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 204	Pump to Room 3	2	Red	2472	146 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4		100:-		
2	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07	


38C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

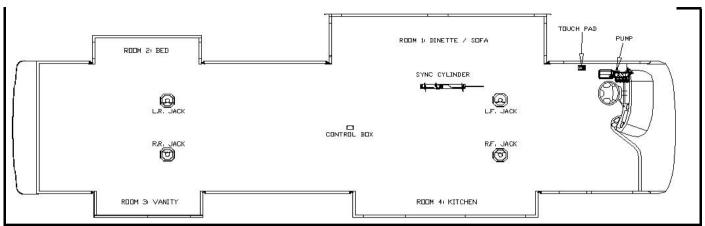

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 204	Pump to Room 4	2	Red	2472	146 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Dovioi en e			
1	Added equalizer slide units to chart ECN# 4	Revisions			
2	Corrected bed slide Vendor Part No. Was		JS 8-15	07	
	Corrected bed slide Veridor Fait No. Was	143300	JO 0-13	-01	
	l				


38D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

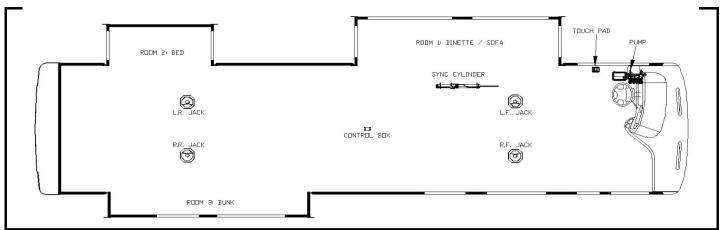

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	COIOI	8347	
Pump	7-Function, 3 Rooms & Jacks	<u>'</u> 1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	<u> </u>		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	<u> </u>		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	tile slide mediameni.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 384	Pump to Jack, Right Rear	2	Yellow	2482	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 432	Pump to Room 2	2	Purple	2486	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	'	134998	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options	1		
		Revisions			
1	Added equalizer slide units to chart ECN# 4				
2	Corrected bed slide Vendor Part No. Was 1		JS 8-15-	07	

38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

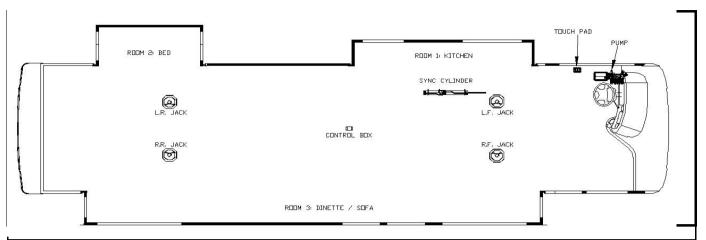


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 4 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Green	2486	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 3	2	Green	2486	350 / Drivers side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
	Pump to Room 1	N/A	Green		
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Passenger Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	
Hose, 480	Pump to Room 2	2	Gray	2490	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		01'			
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4	438			
2	Corrected bed slide Vendor Part No. Was 1		JS 8-15-	07	

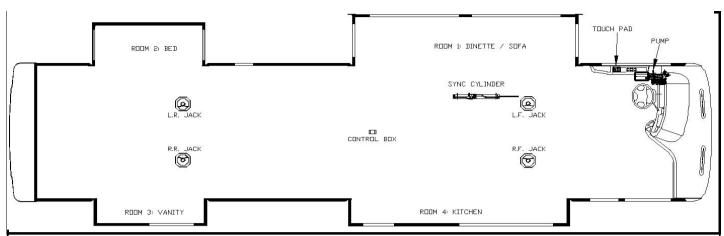


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
	(Items listed below)	1		8294				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Slide Unit	Room 1 - 36" flush floor slide	2		7164D				
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 228	Pump to Room 4	2	Red	2474	155 / Passenger Side			
Slide Unit	Room 4 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
		Revisions						
	Beginning with release of 1/23/06 and docum		CN #3845					
	ECN#4099 Equalizer standardize sizes & re			fitting ship loose				
	UPDATE JPG		, - 3	<u> </u>				
	Updated per ECN #4237							

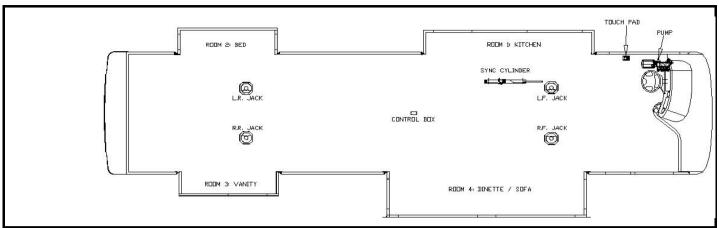


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8292				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure			
Hose w90, 168	Pump to Room 1	2	Green	2469	149 / Drivers side			
Slide Unit	Room 1 - 18" above floor slide	1		7135				
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side			
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side			
Slide Unit	Room 4 - 36" flush floor slide	2		7164D				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options	_					
		Davidalaria						
		Revisions	CNI #2045					
1	Beginning with release of 1/23/06 and docum			omoil on 4/27\				
2	Equalizer lengthened hosepart #2415 (wa ECN#4099 Equalizer standardize sizes & re							
3		numbers p	aris, 90 deg	nuing ship loose	;			
J	UPDATE JPG							

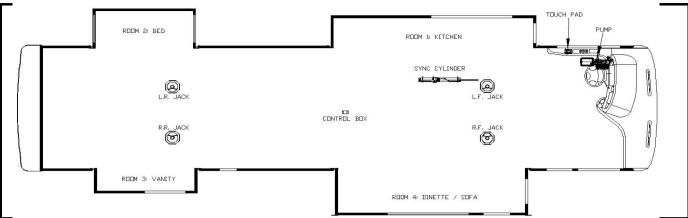


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8315	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Slide Unit	Room 1 - 24" flush floor slide	2		7369	
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7369	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		o punding	I		
		Revisions			
1	ECN#4099 Equalizer standardize sizes & re	enumbers p	arts, 90 deg	fitting ship loos	е
2	UPDATE JPG			·	
3	Updated per ECN #4237				
3	Added equalizer slide units to chart ECN# 4	1438			

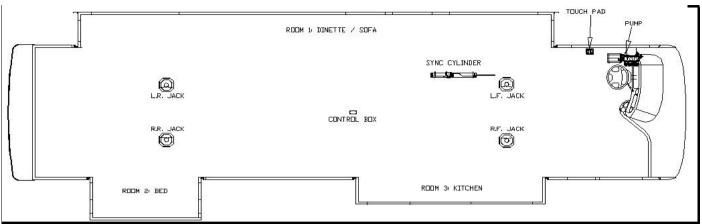


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8340			
Pump	7-Function, 4 Rooms & Jacks	1		7319BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 420	Pump to Jack, Right Rear	2	Yellow	2485			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 432	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side		
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side		
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388			
Slide Unit	Room 1 - 24" flush floor slide (angled)	1		7384	Slave		
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 228	Pump to Room 3	2	Gray	2474	146 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
		Options					
		Revisions					
1	UPDATE JPG						
2	Updated per ECN #4237			-			
3	Added equalizer slide units to chart ECN# 4			-			
4	Corrected bed slide Vendor Part No. Was 143960 JS 8-15-07						

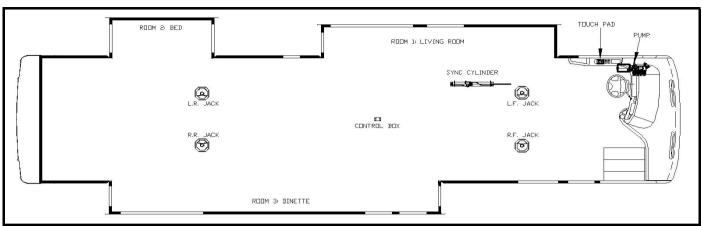


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8354			
Pump	7-Function, 3 Rooms & Jacks	1		7319BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side		
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388			
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	205 / Passenger side		
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	350 / Passenger side		
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388			
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure		
		Options					
					T		
		Revisions					
1	Corrected picture						
2	Corrected hose notes for room #3 & #1						
3	Added equalizer slide units to chart ECN# 4438						
4	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07			

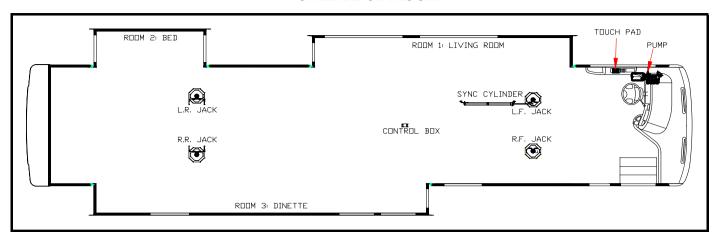


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8373				
Pump	7-Function, 3 Rooms & Jacks	1		7319BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484				
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side			
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388				
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side			
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side			
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388				
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure			
		9 (1						
		Options						
		Revisions						
1	Updated before intial quote. JES	8-9-07						
2	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07				

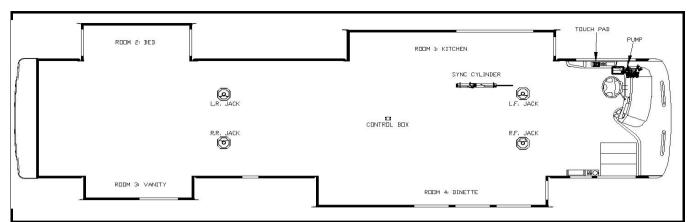


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the rane.
 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 4) Hoses marked w90 will have the 90 deg fitting shipped loose. Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8379	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 516	Pump to Room 3	2	Gray	2491	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	_
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
,	, , , , , , , , , , , , , , , , , , , ,				
		Options			
			1		
			<u> </u>		
		Revisions			

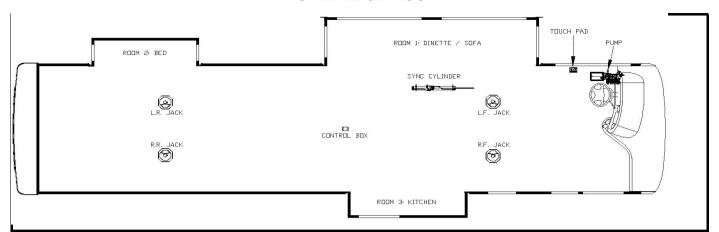


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8310				
Pump	7-Function, 3 Rooms & Jacks	1		7319BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.			
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481				
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Slide Unit	Room 1 - 36" flush floor slide	2		7164D				
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 204	Pump to Room 3	2	Red	2472	146 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
		Options						
		Revisions						
1	Added equalizer slide units to chart ECN#							
2	Corrected bed slide Vendor Part No. Was	143960	JS 8-15	-07				

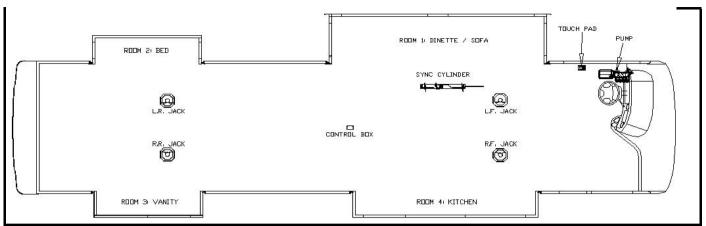


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8278				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.			
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481				
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Slide Unit	Room 1 - 36" flush floor slide	2		7164D				
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 204	Pump to Room 4	2	Red	2472	146 / Passenger Side			
Slide Unit	Room 4 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
			<u> </u>					
		Revisions						
1	Added equalizer slide units to chart ECN# 4		10.0.1=	07				
2	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07				

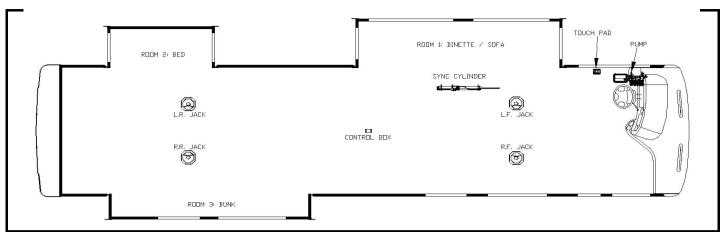


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8347	1
Pump	7-Function, 3 Rooms & Jacks	<u> </u>		7319BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 384	Pump to Jack, Right Rear	2	Yellow	2482	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 432	Pump to Room 2	2	Purple	2486	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Revisions			
1	Added equalizer slide units to chart ECN# 4				
2	Corrected bed slide Vendor Part No. Was 1		JS 8-15-	07	

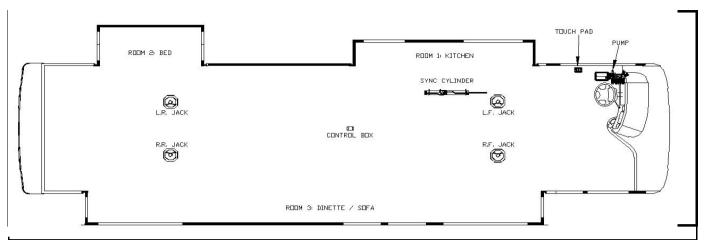


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 4 Rooms & Jacks	1		7319BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 3	2	Gray	2486	350 / Drivers side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
	Pump to Room 1	N/A	Green		
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Passenger Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	Ţ.
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
	1	Options	T		
		Revisions			
1	Added equalizer slide units to chart ECN# 4				
2	Corrected bed slide Vendor Part No. Was 1	43960	JS 8-15-	-07	

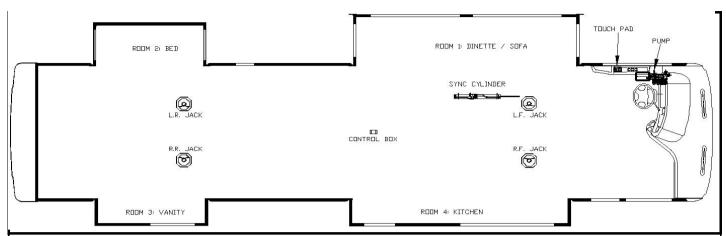


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7164D	
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 228	Pump to Room 4	2	Red	2474	155 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Оршона			
		Revisions			
	Beginning with release of 1/23/06 and docun		CN #3845		
1	ECN#4099 Equalizer standardize sizes & re			fitting ship loose	1
2	UPDATE JPG		, 00 009 1	g cp .3000	
3	Updated per ECN #4237				

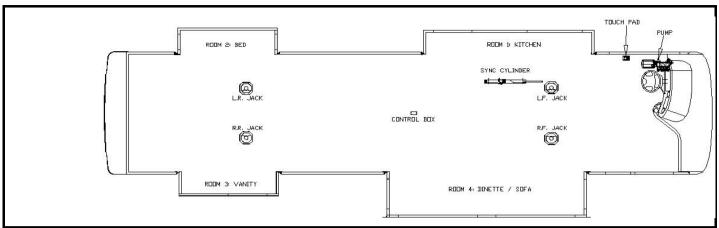


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8292				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure			
Hose w90, 168	Pump to Room 1	2	Green	2469	149 / Drivers side			
Slide Unit	Room 1 - 18" above floor slide	1		7135				
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135	-			
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side			
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side			
Slide Unit	Room 4 - 36" flush floor slide	2		7164D				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
		Revisions						
	Beginning with release of 1/23/06 and docum		CN #3845					
1	Equalizer lengthened hosepart #2415 (wa			email on 4/27)				
2	ECN#4099 Equalizer standardize sizes & re				<u> </u>			
3	UPDATE JPG		, 00 d0g	g criip 10000				
	ווי שאוב אי ט							

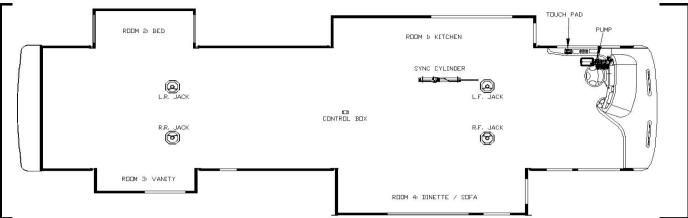


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8315				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	1			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure			
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side			
Slide Unit	Room 1 - 24" flush floor slide	2		7369				
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side			
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side			
Slide Unit	Room 4 - 24" flush floor slide	2		7369				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
		Revisions						
1	ECN#4099 Equalizer standardize sizes & re		arts, 90 deg	fitting ship loos	e			
2	UPDATE JPG	airiib 010 p	, 00 dog	19 01119 1000	<u>-</u>			
3	Updated per ECN #4237							
3	Added equalizer slide units to chart ECN# 4438							
	Induced equalizer slide utilis to chart. Lory# 4400							

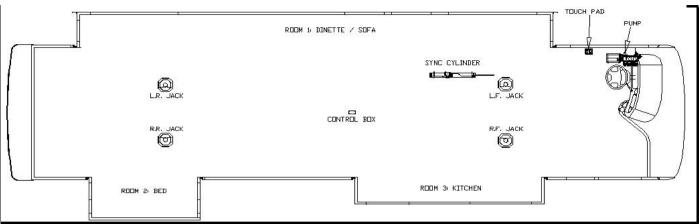


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8340			
Pump	7-Function, 4 Rooms & Jacks	1		7319BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 420	Pump to Jack, Right Rear	2	Yellow	2485			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 432	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side		
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side		
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388			
Slide Unit	Room 1 - 24" flush floor slide (angled)	1		7384	Slave		
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 228	Pump to Room 3	2	Gray	2474	146 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135	_		
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
•							
		Options					
		Revisions					
1	UPDATE JPG						
2	Updated per ECN #4237						
3	Added equalizer slide units to chart ECN# 4	1438					
4	Corrected bed slide Vendor Part No. Was 143960 JS 8-15-07						

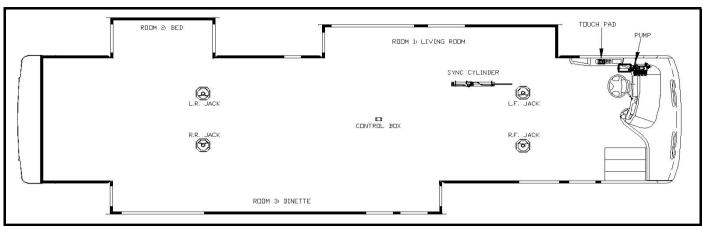


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Itom Longth	Description / Location	Otv	Color	Vendor PN	1			
Item, Length Kit	(Items listed below)	Qty	Color	8354	-			
Pump	7-Function, 3 Rooms & Jacks	1		7319BR				
Jack	17,000 lbs, 18" Stroke	4		7319BR 7134	Macauring from incide of			
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of			
					firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side			
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388				
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	205 / Passenger side			
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	350 / Passenger side			
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388				
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure			
		Options						
		Revisions						
1	Corrected picture				-			
2	Corrected hose notes for room #3 & #1	3-5-07						
3	Added equalizer slide units to chart ECN# 4	4438						
4	Corrected bed slide Vendor Part No. Was 143960 JS 8-15-07							

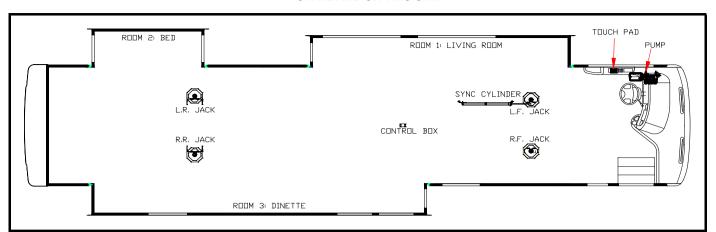


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8373	1
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	1
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure
		0			
		Options			
		Revisions			
1		8-9-07	10.0 :=		
2	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07	

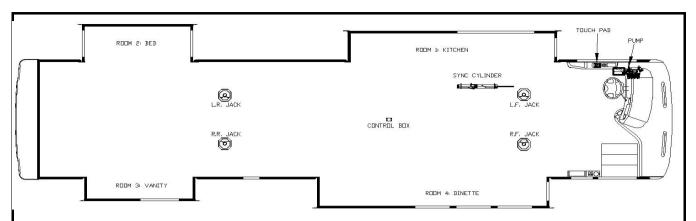


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full let3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows. Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8379	-
Pump	8-Function, 4 Rooms & Jacks	1	+	7302BR	-
Jack	17,000 lbs, 18" Stroke	4	1	7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1	+	2318	firewall, this is the end
Control Box	Attached to bottom of structure	1	1	2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2	+	7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	the shae meenamem.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	4
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	120 / 2111010 0100
Hose w90, 516	Pump to Room 3	2	Gray	2491	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide		<u> </u>	7135	io i / i dossiigoi sido
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
,					
		Options			•
					1
			+		
			+		
			+		
			+		
			+		
			1		<u> </u>
		Revisions			

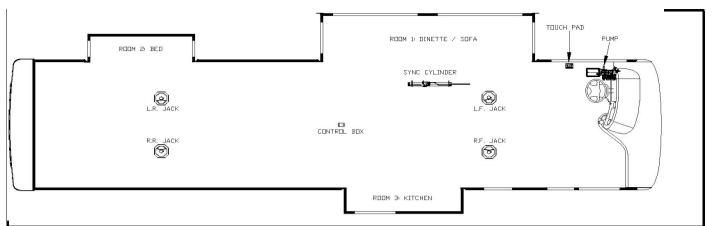


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8310	1		
Pump	7-Function, 3 Rooms & Jacks	1		7319BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.		
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481			
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Slide Unit	Room 1 - 36" flush floor slide	2		7164D			
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 204	Pump to Room 3	2	Red	2472	146 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
		Options					
		Revisions					
1							
2	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07			

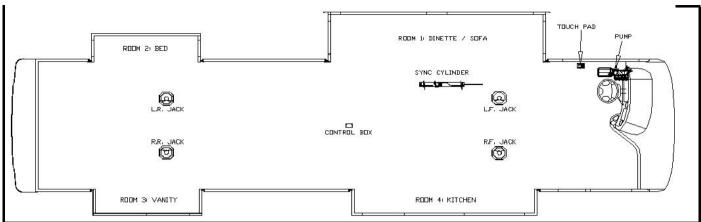


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8278			
Pump	8-Function, 4 Rooms & Jacks	1		7302BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.		
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 372	Pump to Jack, Right Rear	2	Yellow	2481			
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Slide Unit	Room 1 - 36" flush floor slide	2		7164D			
Hose, 420	Pump to Room 2	2	Purple	2485	325 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135			
Hose w90, 204	Pump to Room 4	2	Red	2472	146 / Passenger Side		
Slide Unit	Room 4 - 18" above floor slide	1		7135			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
			<u> </u>				
		Revisions					
1	Added equalizer slide units to chart ECN# 4		10.0.1=	07			
2	Corrected bed slide Vendor Part No. Was 1	143960	JS 8-15	-07			

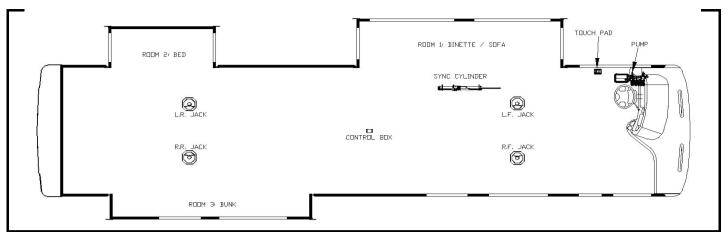


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN					
Kit	(Items listed below)	1		8347					
Pump	7-Function, 3 Rooms & Jacks	1		7319BR					
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of				
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end				
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic				
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to				
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.				
Hose, 372	Pump to Jack, Left Rear	2	Orange	2481					
Hose, 144	Pump to Jack, Right Front	2	White	2467					
Hose, 384	Pump to Jack, Right Rear	2	Yellow	2482					
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure				
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side				
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side				
	Pump to Room 1	N/A	Green						
Slide Unit	Room 1 - 36" flush floor slide	2		7164D					
Hose, 432	Pump to Room 2	2	Purple	2486	325 / Drivers Side				
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998					
Hose w90, 456	Pump to Room 3	2	Gray	2488	355 / Passenger Side				
Slide Unit	Room 3 - 18" above floor slide	1		7135					
	Pump to Generator Slide	N/A							
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A				
		Options							
		D							
4		Revisions							
1	Added equalizer slide units to chart ECN# 4		10 0 45	07					
2	Corrected bed slide Vendor Part No. Was 1	4390U	JS 8-15-	U/					

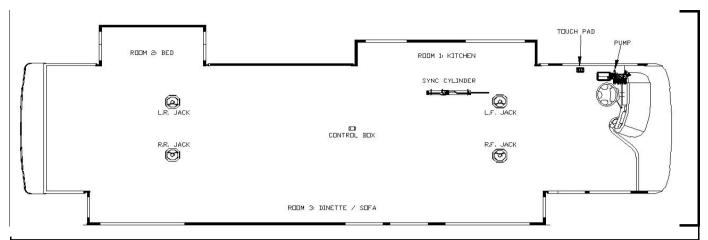


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 4 Rooms & Jacks	1		7319BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Drivers side
Hose w90, 432	Sync cylinder to rear slide, Room 3	2	Gray	2486	350 / Drivers side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
	Pump to Room 1	N/A	Green		
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Passenger Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	Ţ.
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
	1	Options	T		
		Revisions			
1	Added equalizer slide units to chart ECN# 4				
2	Corrected bed slide Vendor Part No. Was 1	43960	JS 8-15-	-07	

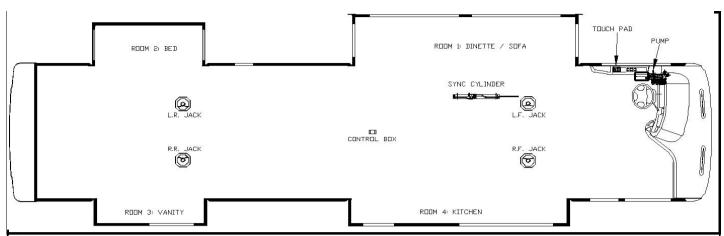


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8294				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Slide Unit	Room 1 - 36" flush floor slide	2		7164D				
Hose, 480	Pump to Room 2	2	Purple	2490	340 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 432	Pump to Room 3	2	Gray	2486	365 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 228	Pump to Room 4	2	Red	2474	155 / Passenger Side			
Slide Unit	Room 4 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
	,	Options	T					
		Davisians	<u> </u>					
	Revisions Beginning with release of 1/23/06 and documented on ECN #3845							
1	ECN#4099 Equalizer standardize sizes & re			fitting chin loose	_			
2	UPDATE JPG	numbers p	aris, 90 deg	inting strip 10056	7			
3	Updated per ECN #4237							
J	Opuated per ECN #4237							

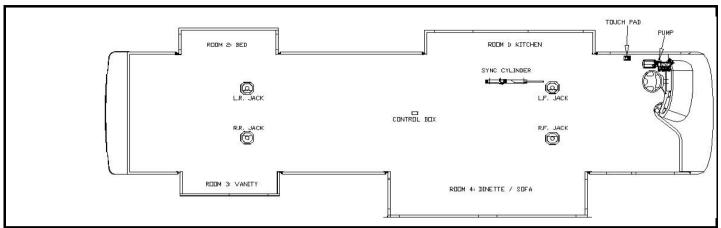


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN						
Kit	(Items listed below)	1		8292	1					
Pump	8-Function, 4 Rooms & Jacks	1		7302BR						
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of					
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end					
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic					
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to					
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.					
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483						
Hose, 144	Pump to Jack, Right Front	2	White	2467						
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483						
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure					
Hose w90, 168	Pump to Room 1	2	Green	2469	149 / Drivers side					
Slide Unit	Room 1 - 18" above floor slide	1		7135						
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side					
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998						
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side					
Slide Unit	Room 3 - 18" above floor slide	1		7135						
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side					
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side					
Slide Unit	Room 4 - 36" flush floor slide	2		7164D						
	Pump to Generator Slide	N/A			N/A					
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A					
		Options								
		Revisions								
	Beginning with release of 1/23/06 and docur									
1	Equalizer lengthened hosepart #2415 (wa									
2	ECN#4099 Equalizer standardize sizes & re	numbers p	arts, 90 deg	fitting ship loose	9					
3	UPDATE JPG			UPDATE JPG						

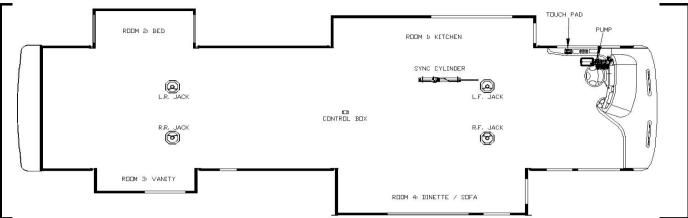


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8315				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	2	Yellow	2483				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure			
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side			
Slide Unit	Room 1 - 24" flush floor slide	2		7388				
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side			
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side			
Slide Unit	Room 4 - 24" flush floor slide	2		7388				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options	1					
			1					
			1					
			1					
		Revisions						
1	ECN#4099 Equalizer standardize sizes & re		arts, 90 deg	fitting ship loos	e			
2	UPDATE JPG		-ao, oo dog	ig omp lood	<u> </u>			
3	Updated per ECN #4237							
3	Added equalizer slide units to chart ECN# 4	1438						
	Indued equalizer since units to chart. Lord# 4450							

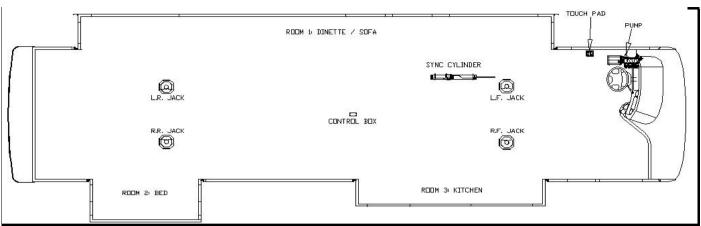


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1	00101	8340			
Pump	7-Function, 4 Rooms & Jacks	1		7319BR	-		
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	<u> </u>		7397	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 396	Pump to Jack, Left Rear	2	Orange	2483			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 420	Pump to Jack, Right Rear	2	Yellow	2485			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 432	Sync cylinder to front slide, Room 1	2	Green	2486	103 / Drivers side		
Hose w90, 432	Sync cylinder to rear slide, Room 1	2	Green	2486	350 / Drivers side		
Slide Unit	Room 1 - 24" flush floor slide (angled)	2	0.00	7388	330 / 2.113.3 3.33		
Slide Unit	Room 1 - 24" flush floor slide (angled)			7384	Slave		
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Passenger Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	<u> </u>		
Hose w90, 228	Pump to Room 3	2	Gray	2474	146 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135	Ĭ		
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
		Options					
		Revisions					
1	UPDATE JPG						
2	Updated per ECN #4237						
3	Added equalizer slide units to chart ECN# 4438						
4	Corrected bed slide Vendor Part No. Was 143960 JS 8-15-07						

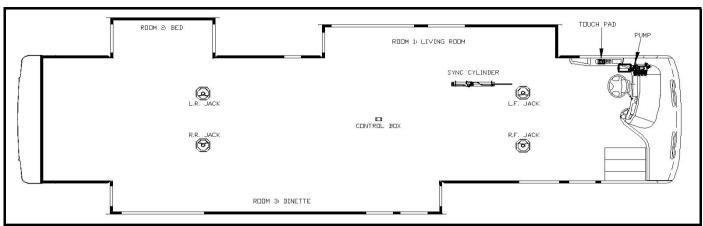


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #2 require 90 degree swivel elbows.
- 4) Room #1 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Itam Langth	Description / Leasting	044	Calar	Vander DN				
Item, Length	Description / Location	Qty	Color	Vendor PN	-			
Kit	(Items listed below)	1		8354	-			
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	M			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484				
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side			
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388				
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	205 / Passenger side			
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	350 / Passenger side			
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388				
Hose, 480	Pump to Room 2	2	Purple	2490	345 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	·	134998				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure			
,			<u> </u>					
		Options						
		Revisions						
1	Corrected picture							
2	Corrected hose notes for room #3 & #1	3-5-07						
3	Added equalizer slide units to chart ECN# 4	1438						
4	Corrected bed slide Vendor Part No. Was 143960 JS 8-15-07							

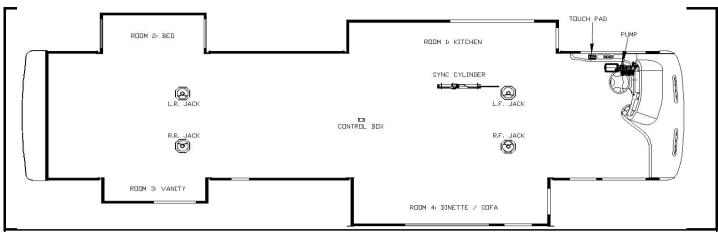


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8393	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	(Room 1)Mounted behind LP tank	1		7511	hoses where they attach to
Sync Cylinder	(Room 4)Mounted behind LP tank	1		7397	the slide mechanism.
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	1
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	1
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	385 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 432	Pump to Room 3	2	Gray	2486	363 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	116 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	210 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	195 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options	•		
		Revisions			
		I/EAISIO[12			

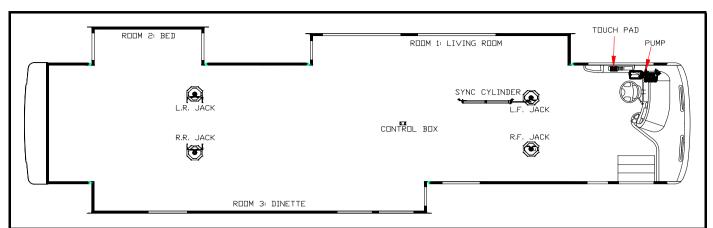

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8373	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure
		Options			
		Options			
		Revisions			
1		8-9-07			
2	Corrected bed slide Vendor Part No. Was 1		JS 8-15	-07	

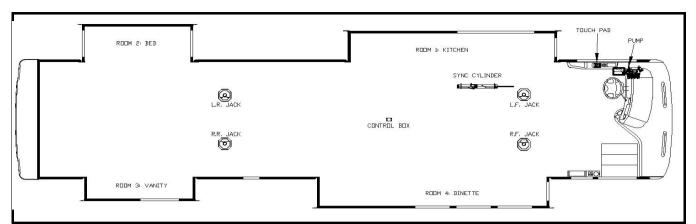

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full let3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows. Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8379	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	2	Yellow	2484	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	<u> </u>	134998	
Hose w90, 516	Pump to Room 3	2	Gray	2491	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	Ĭ
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
,					
		Options			
			ļ		
		D			
		Revisions			


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

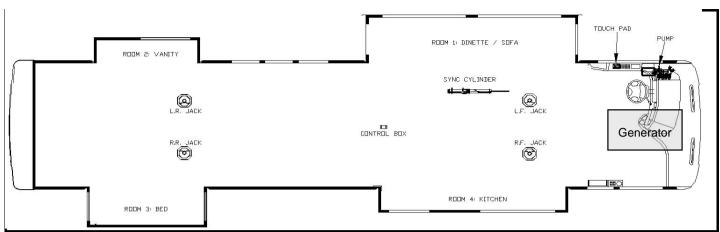

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 /Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40F Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

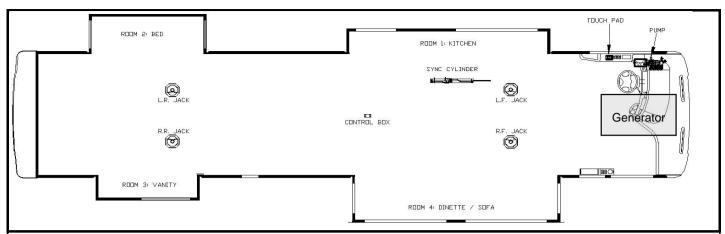

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
	Pump to Room 4	N/A	Red		
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

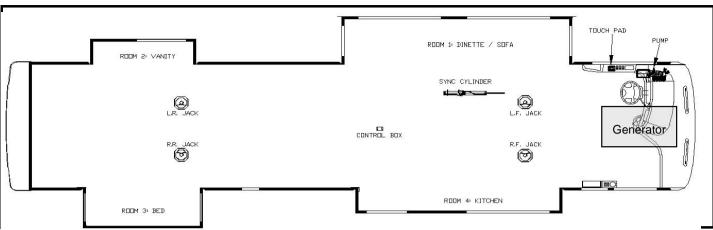

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40H MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

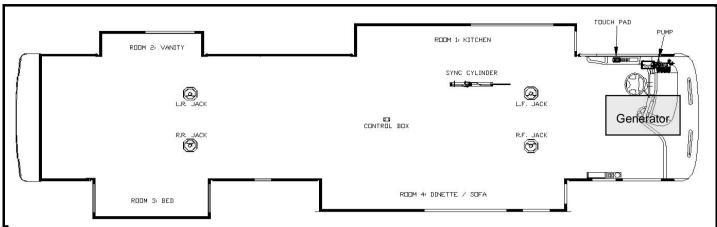

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Slide Unit	Room 2-18" above floor slide)	1		7469	
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Slide Unit	Room 3-30" Bed slide (Lippert)	1		134998	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Slide Unit	Room 1-24" flush floor slide (angled)	2		7477	
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Slide Unit	Room 4-24" flush floor slide (angled)	2		7477	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			T
			 		
		Revisions			
					·


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

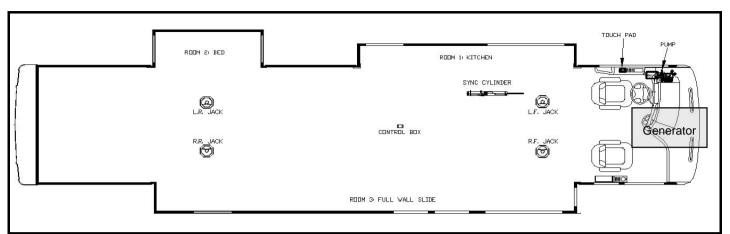

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
 - 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Grey	2467	Mounts to bracket on structure
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 288	Sync cylinder to front slide, Room 3	2	Grey	2478	90 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 3	2	Grey	2478	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Davidalana			
4		Revisions	0.45	07 10	
1	Corrected the bed slide Vendor Part No. Wa	as 143900.	გ-15-	07 JS	
	l .				


43B Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

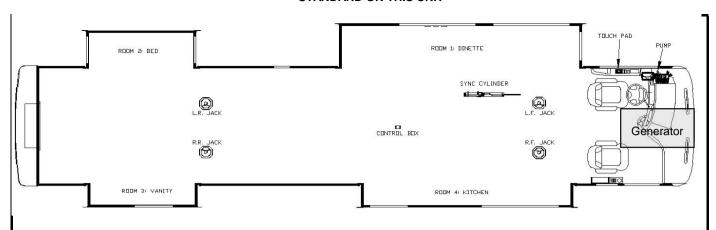

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8364	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 1	2	Green	2473	110 / Drivers Side
Hose w90, 216	Sync cylinder to rear slide, Room 1	2	Green	2473	256 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose w90, 204	Pump to Room 4	2	Red	2472	164 / Passenger side
Slide Unit	Room 4 - 18" above floor slide	1		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		- Срисио			
		Revisions			
1	Corrected the bed slide Vendor Part No. Wa		0 15	-07 JS	
2	Chg'd Room 1 Sync cylinder hose lengths fr				8-31-07 KK
	Oliga Room i Sylic Cyllilael 1103e lengtiis II	0111 Z / U (F	14 2411) 10 2	. 10 (FIN 2473).	0-01-01 KK


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

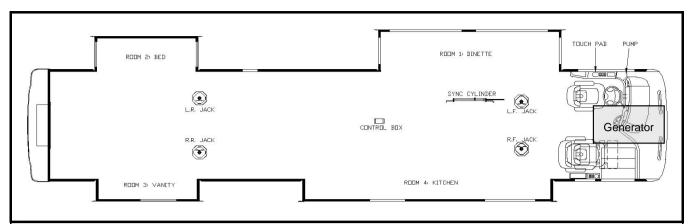

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8377	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank, Room 1	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank, Room 4	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	187 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 456	Pump to Room 3	2	Grey	2488	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 180	Pump to synchronizing cylinder	2	Red	2470	Mounts to bracket on structure
Hose w90, 228	Sync cylinder to front slide, Room 4	2	Red	2474	135 / Passenger Side
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	220 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	2		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Davislana			
		Revisions			


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

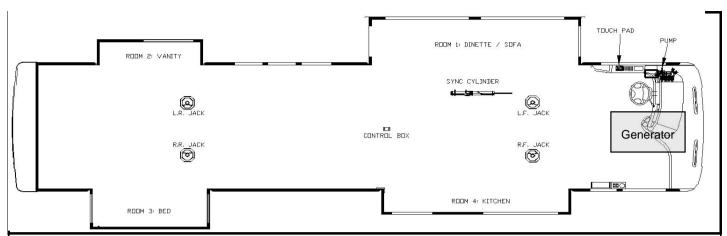

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	1
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	1
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 /Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
 					


40F MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

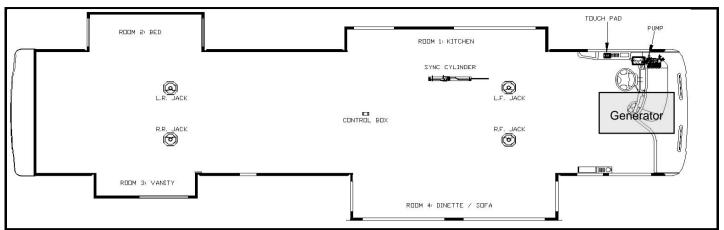

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	COIOI	8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
,	Pump to Room 4	N/A	Red		Ğ
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

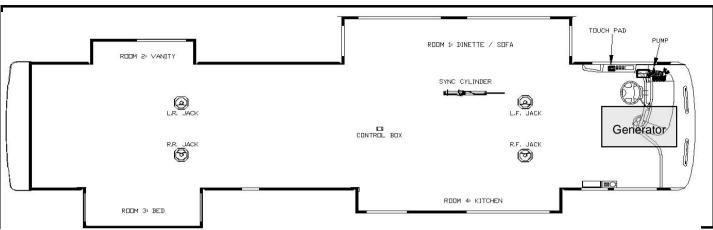

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40H MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

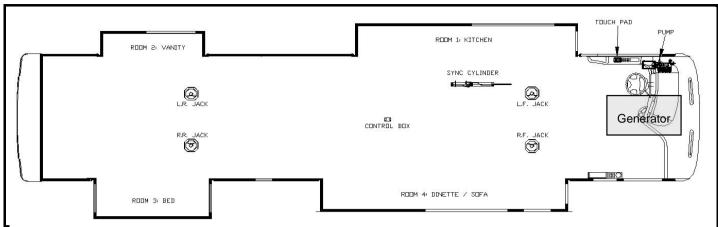

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

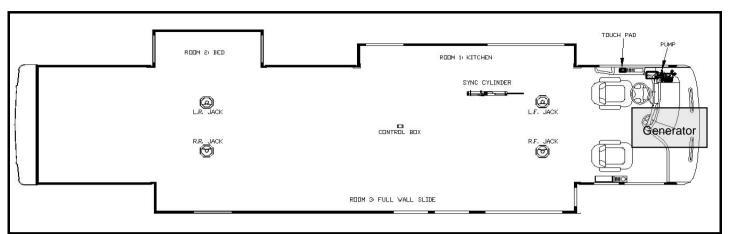

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
 - 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Grey	2467	Mounts to bracket on structure
Hose, 168	Pump to Room 1	2	Green	2490	165 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose w90, 432	Pump to Room 2	2	Purple	2486	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 204	Sync cylinder to front slide, Room 3	2	Grey	2469	90 / Passenger side
Hose w90, 204	Sync cylinder to rear slide, Room 3	2	Grey	2469	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
					-


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

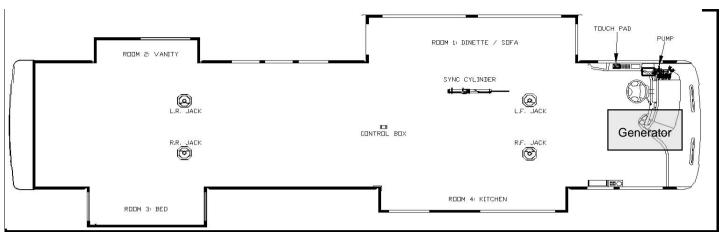

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 /Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40F Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

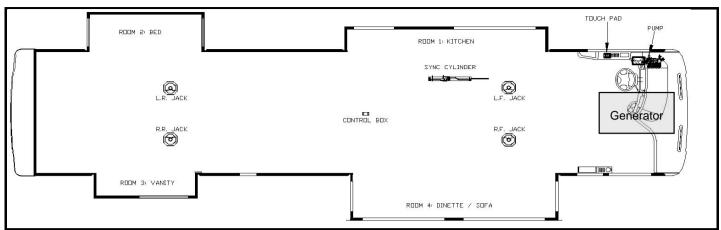

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
	Pump to Room 4	N/A	Red		
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

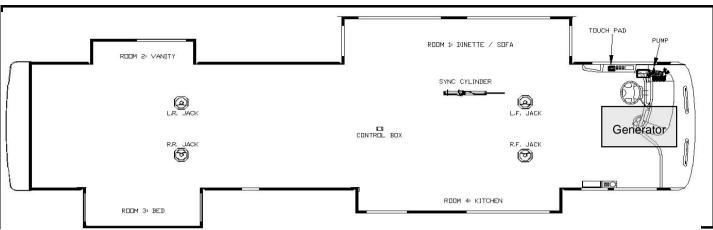

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
<u> </u>					
		Revisions			


40H MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

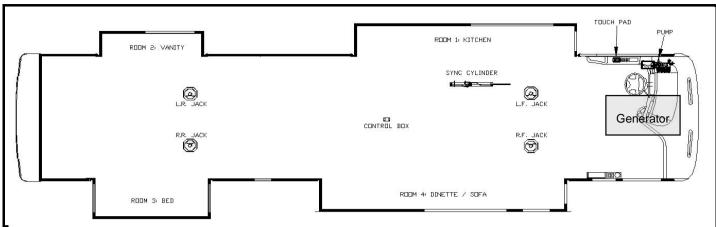

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
				<u> </u>	
		Revisions			


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

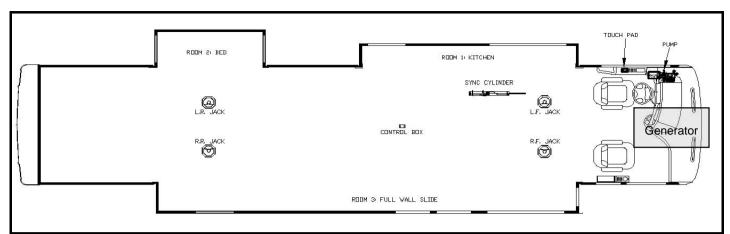

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Grey	2467	Mounts to bracket on structure
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 288	Sync cylinder to front slide, Room 3	2	Grey	2478	90 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 3	2	Grey	2478	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

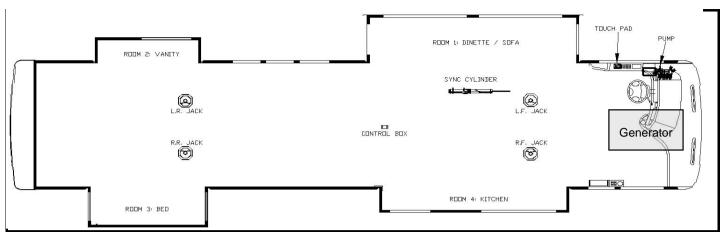

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 /Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40F Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

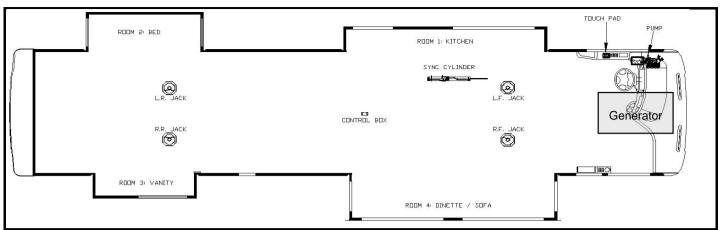

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	33.31	8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
	Pump to Room 4	N/A	Red		
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		D			
		Revisions			
1					


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

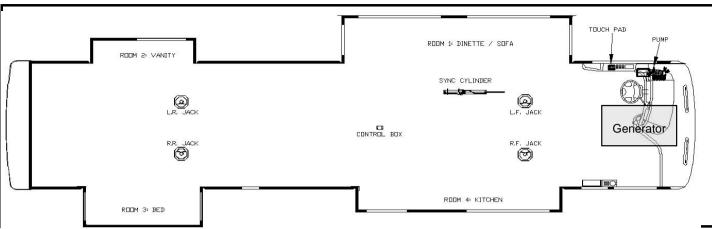

- Notes:
 - 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
·	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40H Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

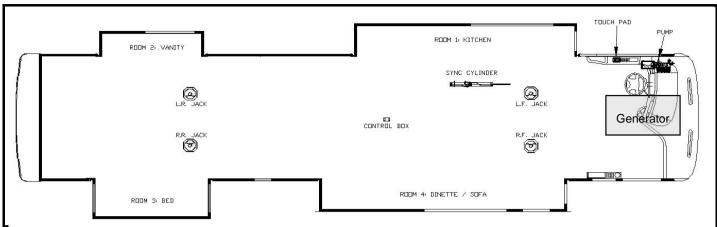

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Davisiers			
		Revisions			
	<u>l</u>				


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

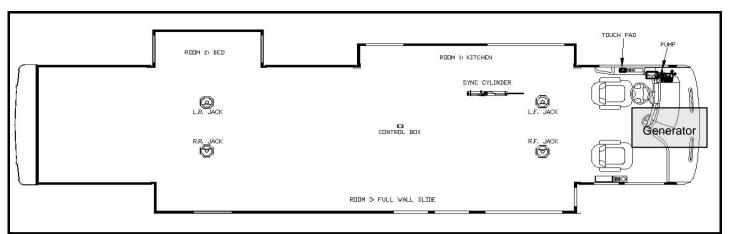

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Grey	2467	Mounts to bracket on structure
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 288	Sync cylinder to front slide, Room 3	2	Grey	2478	90 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 3	2	Grey	2478	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			


43B Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

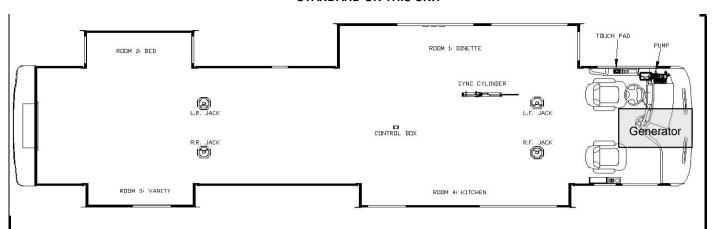

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8364	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 276	Sync cylinder to front slide, Room 1	2	Green	2477	110 / Drivers Side
Hose w90, 276	Sync cylinder to rear slide, Room 1	2	Green	2477	256 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 432	Pump to Room 2	2	Purple	2486	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		143960	
Hose w90, 432	Pump to Room 3	2	Grey	2486	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose w90, 204	Pump to Room 4	2	Red	2472	164 / Passenger side
Slide Unit	Room 4 - 18" above floor slide	1		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1					


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

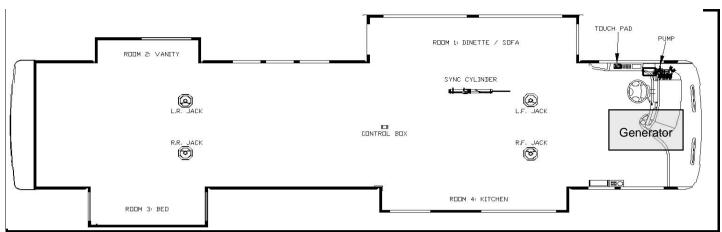

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 /Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			_
			ļ		
		Revisions			L
		Kevisions			
ı					


40F Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

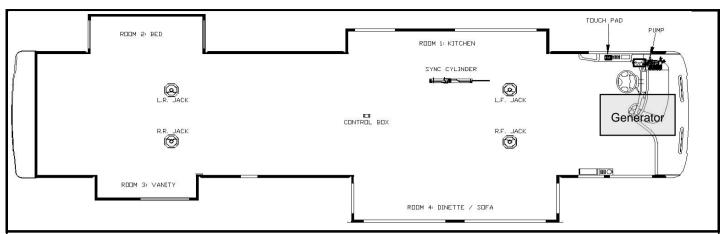

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
	Pump to Room 4	N/A	Red		
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

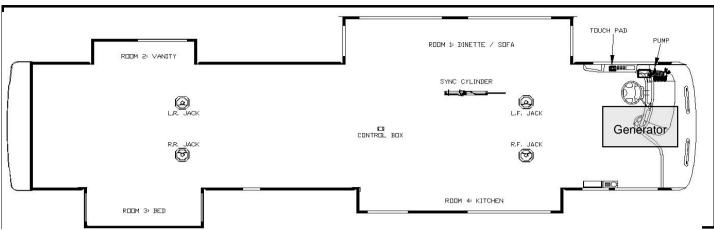

- Notes:
 - 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		.			
		Revisions			
<u> </u>					


40H MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

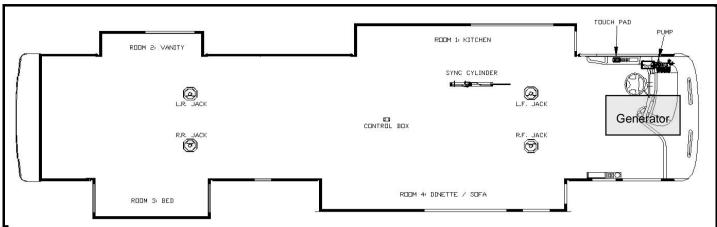

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

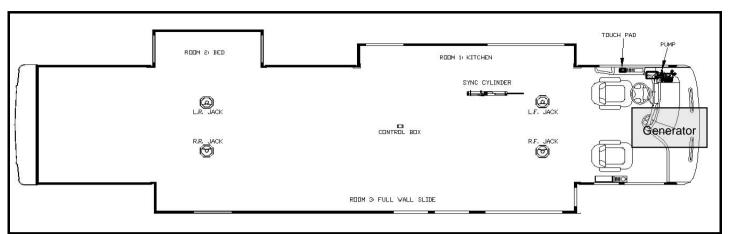

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
 - 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Grey	2467	Mounts to bracket on structure
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 288	Sync cylinder to front slide, Room 3	2	Grey	2478	90 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 3	2	Grey	2478	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	Corrected the bed slide Vendor Part No. Wa		8-15-	07 JS	
	The state and state of the stat		0 10	<u> </u>	
		·			


43B Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

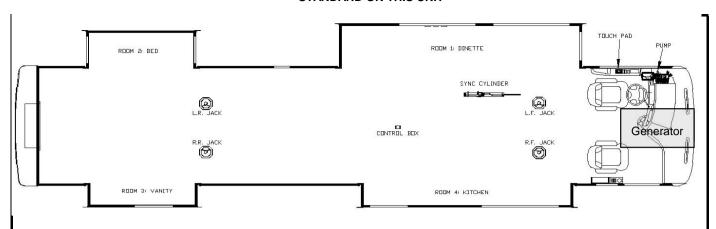

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8364	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 1	2	Green	2473	110 / Drivers Side
Hose w90, 216	Sync cylinder to rear slide, Room 1	2	Green	2473	256 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 480	Pump to Room 2	2	Purple	2490	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose w90, 204	Pump to Room 4	2	Red	2472	164 / Passenger side
Slide Unit	Room 4 - 18" above floor slide	1		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Davisiana			
1	Corrected the bed slide Vendor Part No. W	Revisions	0 15	-07 JS	
2	Chg'd Room 1 Sync cylinder hose lengths fr				8-31-07 KK
	Chig a Room i Sync cyllilaet nose lengths if	0111 Z / 0 (F	14 2411) 10 2	. 10 (FIN 24/3).	0-31-01 KK


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

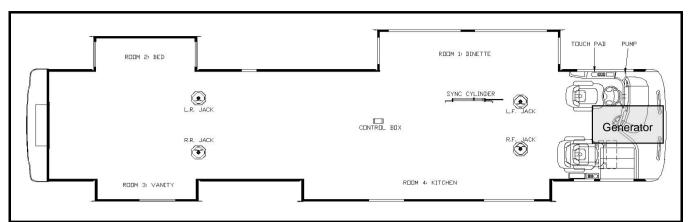

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8377	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank, Room 1	1		7387	hoses where they attach to
Sync Cylinder	Mounted behind LP tank, Room 4	1		7511	the slide mechanism.
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	187 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 432	Pump to Room 2	2	Purple	2486	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 432	Pump to Room 3	2	Grey	2486	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 180	Pump to synchronizing cylinder	2	Red	2470	Mounts to bracket on structure
Hose w90, 228	Sync cylinder to front slide, Room 4	2	Red	2474	135 / Passenger Side
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	220 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	2		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
			· · · · · · · · · · · · · · · · · · ·		


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

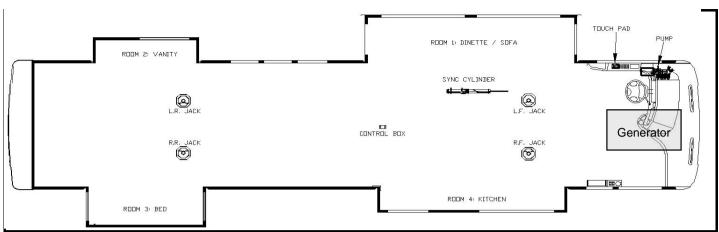

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 /Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		.			
		Revisions			


40F Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

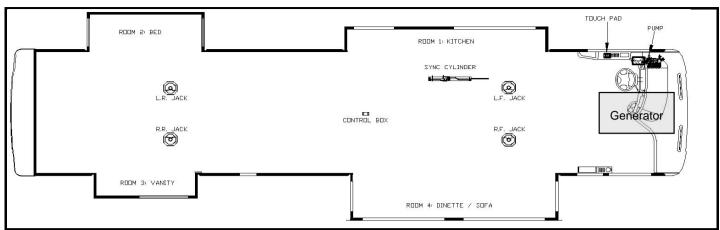

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
	Pump to Room 4	N/A	Red		
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

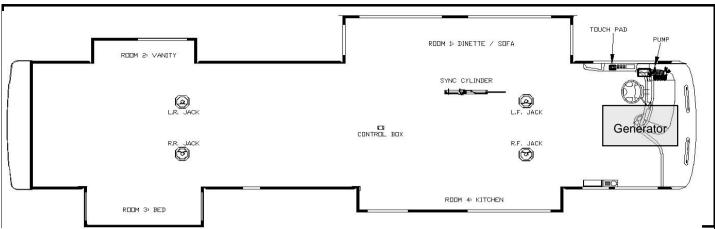

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		D			
		Revisions			


40H MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

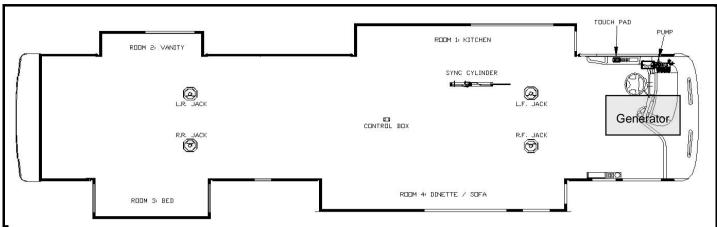

- Notes:
 - 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Slide Unit	Room 2-18" above floor slide)	1		7469	
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Slide Unit	Room 3-30" Bed slide (Lippert)	1		134998	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Slide Unit	Room 1-24" flush floor slide (angled)	2		7477	
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Slide Unit	Room 4-24" flush floor slide (angled)	2		7477	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
i					


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

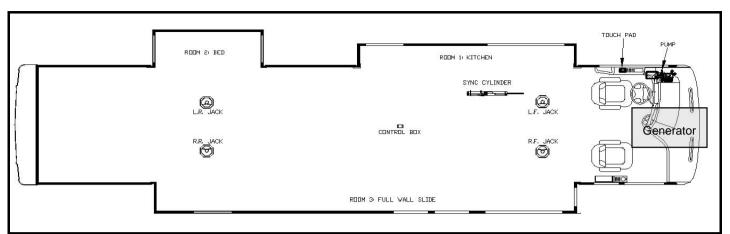

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
 - 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8360			
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490			
Hose, 144	Pump to synchronizing cylinder	2	Grey	2467	Mounts to bracket on structure		
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side		
Slide Unit	Room 1 - 18" above floor slide	1		7469			
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 288	Sync cylinder to front slide, Room 3	2	Grey	2478	90 / Passenger side		
Hose w90, 288	Sync cylinder to rear slide, Room 3	2	Grey	2478	378 / Passenger side		
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477			
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave		
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
		Options					
		Revisions					
1 Corrected the bed slide Vendor Part No. Was 143960. 8-15-07 JS							
	The state and state of the stat		0 10	<u> </u>			
		·					


43B Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

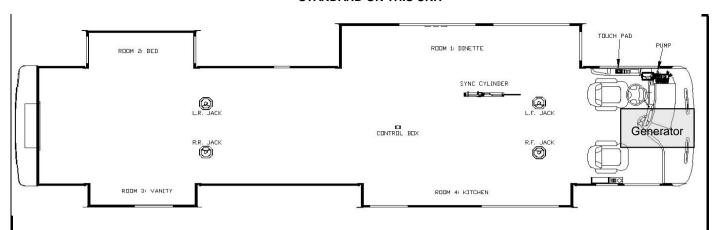

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8364			
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490			
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure		
Hose w90, 216	Sync cylinder to front slide, Room 1	2	Green	2473	110 / Drivers Side		
Hose w90, 216	Sync cylinder to rear slide, Room 1	2	Green	2473	256 / Drivers Side		
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481			
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side		
Slide Unit	Room 3 - 18" above floor slide	1		7469			
Hose w90, 204	Pump to Room 4	2	Red	2472	164 / Passenger side		
Slide Unit	Room 4 - 18" above floor slide	1		7469			
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
		- Срисио					
		Povisions					
Revisions 1 Corrected the bed slide Vendor Part No. Was 143960. 8-15-07 JS							
2	Chg'd Room 1 Sync cylinder hose lengths fr				8-31-07 KK		
	Oliga Room i Sylic Cyllilael 1103e lengtiis II	0111 Z / U (F	14 2411) 10 2	. 10 (FIN 2473).	0-01-01 KK		


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

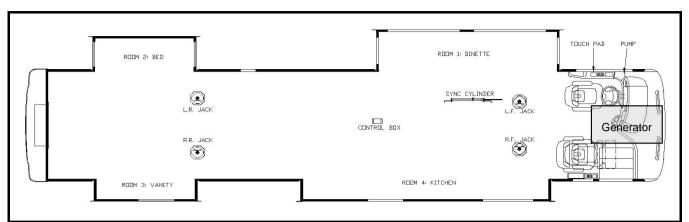

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Measuring from inside of							
firewall, this is the end							
location of the hydraulic							
oses where they attach to							
the slide mechanism.							
the slide mechanism.							
ounts to bracket on structure							
99 / Drivers Side							
187 / Drivers Side							
408 / Drivers Side							
408 / Passenger side							
ounts to bracket on structure							
135 / Passenger Side							
220 / Passenger Side							
Inside generator tray							
N/A							
Revisions							


40E MandalayEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

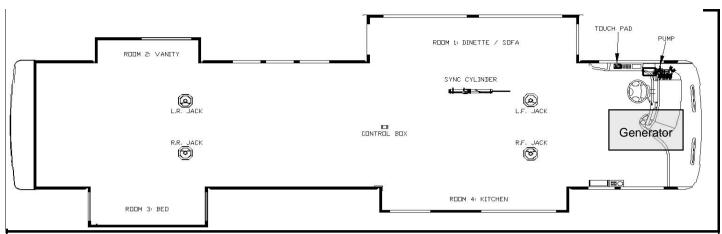

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	33.61	8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	1	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	1	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Passenger Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Drivers Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
İ					


40F Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

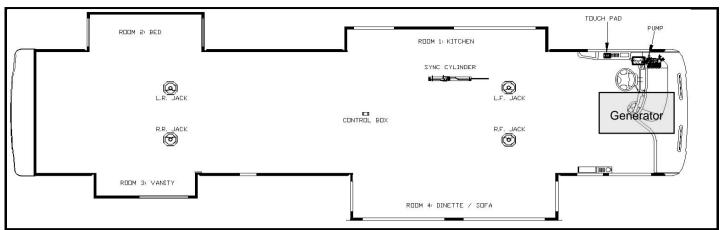

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 4	1	Green	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	1	Green	2469	196 / Passenger side
Hose w90, 168	Pump to Room 1	2	Green	2469	151 / Driver Side
Hose, 480	Pump to Room 2	2	Purple	2490	353 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	386 / Passenger Side
	Pump to Room 4	N/A	Red		
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

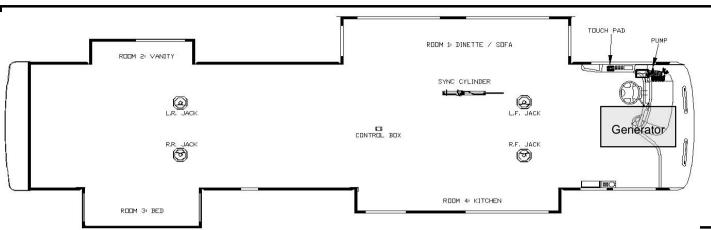

- Notes:
 - 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8278	
Pump	9-Function, 4 Rooms, & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	1	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	1	Green	2469	201 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Hose, 60	Pump to Generator Slide	2			Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		D!'			
		Revisions			


40H Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

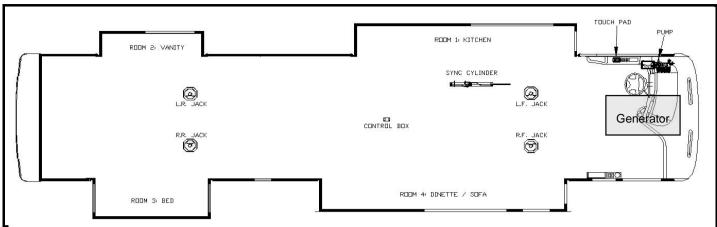

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8357	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	2	Yellow	2490	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose, 480	Pump to Room 2	2	Purple	2490	325 / Drivers Side
Hose w90, 432	Pump to Room 3	2	Gray	2486	355 / Passenger Side
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	95 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	180 / Drivers Side
Hose w90, 168	Sync cylinder to front slide, Room 4	2	Red	2469	103 / Passenger side
Hose w90, 168	Sync cylinder to rear slide, Room 4	2	Red	2469	196 / Passenger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		D			
		Revisions			


32R WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

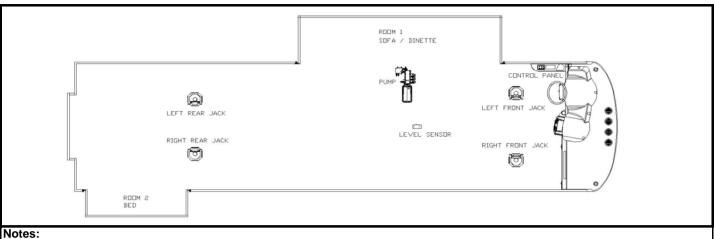

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8308	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 288	Pump to Jack, Right Rear	2	Yellow	2478	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		.			
4		Revisions	- D 1 1	tion or with the time.	- did
1	New chart for Windsport for MY2007 due to	raux riat o	n Km 1, star	ting with the sch	nedule released 04/24/06.
	<u> </u>				


34B WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

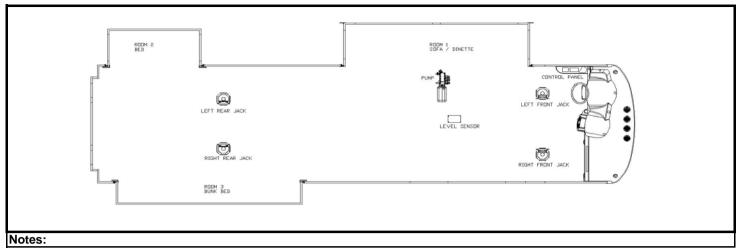

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2567	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			


35B WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

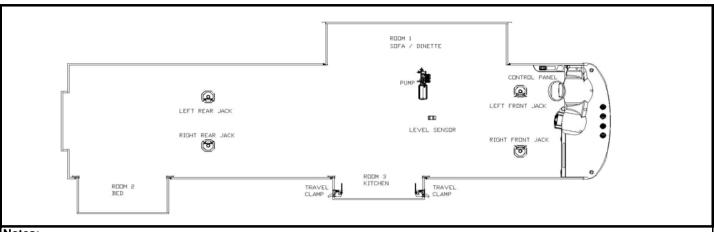

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8314	
Pump	7-Function, 2 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 420	Pump to Room 2	2	Purple	2485	350 / Passenger Side
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		-			
		Options	ı		
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1 star	ting with the sch	edule released 04/24/06
2	Change name from 36B to 35B still starting				edule released 04/24/00.
	Change hame from 500 to 500 5tm starting	WIGH GIO I GIO	400 01 0 4 /2-	1700	
L	<u>L</u>				


36E WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

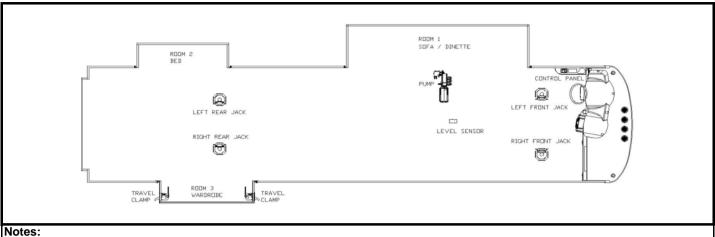

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8309	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Davisiana			
1	New chart for Windsport for MY2007 due to	Revisions	n Dm 1 star	ting with the seh	adula relegand 04/24/06
1	inew chart for windsport for MY2007 due to	raux riat 0	n Km 1, star	ung with the sch	ledule released 04/24/06.


36R WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

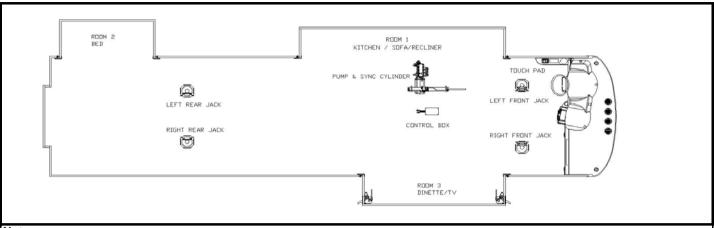

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
			<u> </u>		

36Z WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

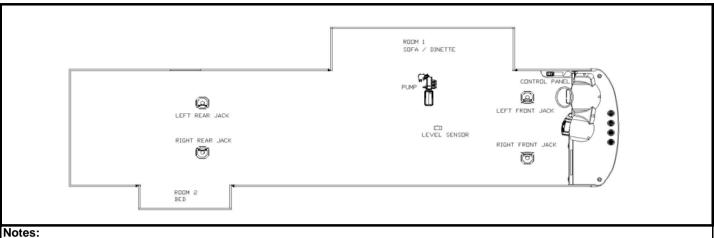

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	<u>Qty</u> 1	Color	8307	
Pump	6-Function, 2 Rooms & Jacks	<u> </u>		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	 1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2319	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	the slide mechanism.
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 300	Pump to Jack, Right Rear	2	Yellow	2479	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	rtcu	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Traver Clamp	i wo per olide	11/71		110011	IV/A
		Options			
	Г	• pilolio	1		
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
	·		-	-	

31D WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

FOR 30Q WINDSPORT

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	,			
Pump	X-Function, X Rooms & Jacks				
Jack	12,000 lbs, 16" Stroke				Measuring from inside of
Control Panel	Located to the left of the drivers seat				firewall, this is the end
Level Sensor	Attached to bottom of structure				location of the hydraulic
Sync Cylinder	Mounted behind pump compartment				hoses where they attach to
Hose, N/A	Pump to Jack, Left Front				the slide mechanism.
Hose, N/A	Pump to Jack, Left Rear				
Hose, N/A	Pump to Jack, Right Front				
Hose, N/A	Pump to Jack, Right Rear				
Hose, N/A	Pump to sync cylinder				
Hose, N/A	Sync cylinder to front slide, Room 1				
Hose, N/A	Sync cylinder to rear slide, Room 1				
Hose, N/A	Pump to Room 1				
Hose, N/A	Pump to Room 2				
Hose, N/A	Pump to Room 3				
Hose, N/A	Pump to Room 4				
Hose, N/A	Pump to Generator Slide				
Travel Clamp	Two per Slide				
		Options			
				<u> </u>	
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, sta	rting with the sch	nedule released 04/24/06.

31D WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

FOR 31D WINDSPORT

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	٦.,	33.0.	7011001111	
Pump	X-Function, X Rooms & Jacks				
Jack	12,000 lbs, 16" Stroke				Measuring from inside of
Control Panel	Located to the left of the drivers seat				firewall, this is the end
Level Sensor	Attached to bottom of structure				location of the hydraulic
Sync Cylinder	Mounted behind pump compartment				hoses where they attach to
Hose, N/A	Pump to Jack, Left Front				the slide mechanism.
Hose, N/A	Pump to Jack, Left Rear				
Hose, N/A	Pump to Jack, Right Front				
Hose, N/A	Pump to Jack, Right Rear				
Hose, N/A	Pump to sync cylinder				
Hose, N/A	Sync cylinder to front slide, Room 1				
Hose, N/A	Sync cylinder to rear slide, Room 1				
Hose, N/A	Pump to Room 1				
Hose, N/A	Pump to Room 2				
Hose, N/A	Pump to Room 3				
Hose, N/A	Pump to Room 4				
Hose, N/A	Pump to Generator Slide				
Travel Clamp	Two per Slide				
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, sta	rting with the sch	edule released 04/24/06.

31H WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

FOR 31H WINDSPORT


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	,			
Pump	X-Function, X Rooms & Jacks				
Jack	12,000 lbs, 16" Stroke				Measuring from inside of
Control Panel	Located to the left of the drivers seat				firewall, this is the end
Level Sensor	Attached to bottom of structure				location of the hydraulic
Sync Cylinder	Mounted behind pump compartment				hoses where they attach to
Hose, N/A	Pump to Jack, Left Front				the slide mechanism.
Hose, N/A	Pump to Jack, Left Rear				
Hose, N/A	Pump to Jack, Right Front				
Hose, N/A	Pump to Jack, Right Rear				
Hose, N/A	Pump to sync cylinder				
Hose, N/A	Sync cylinder to front slide, Room 1				
Hose, N/A	Sync cylinder to rear slide, Room 1				
Hose, N/A	Pump to Room 1				
Hose, N/A	Pump to Room 2				
Hose, N/A	Pump to Room 3				
Hose, N/A	Pump to Room 4				
Hose, N/A	Pump to Generator Slide				
Travel Clamp	Two per Slide				
		Options			
				<u> </u>	
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, sta	rting with the sch	nedule released 04/24/06.

32E WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

FOR 32E WINDSPORT

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)				
Pump	X-Function, X Rooms & Jacks				
Jack	12,000 lbs, 16" Stroke				Measuring from inside of
Control Panel	Located to the left of the drivers seat				firewall, this is the end
Level Sensor	Attached to bottom of structure				location of the hydraulic
Sync Cylinder	Mounted behind pump compartment				hoses where they attach to
Hose, N/A	Pump to Jack, Left Front				the slide mechanism.
Hose, N/A	Pump to Jack, Left Rear				
Hose, N/A	Pump to Jack, Right Front				
Hose, N/A	Pump to Jack, Right Rear				
Hose, N/A	Pump to sync cylinder				
Hose, N/A	Sync cylinder to front slide, Room 1				
Hose, N/A	Sync cylinder to rear slide, Room 1				
Hose, N/A	Pump to Room 1				
Hose, N/A	Pump to Room 2				
Hose, N/A	Pump to Room 3				
Hose, N/A	Pump to Room 4				
Hose, N/A	Pump to Generator Slide				
Travel Clamp	Two per Slide				
		Options			
	ļ				
				ļ	
		Revisions		<u> </u>	
1	New chart for Windsport for MY2007 due to I		n Pm 1 stor	ting with the sch	andula released 04/24/06
1	THOW MAIL TO WITHUSPOTT TO INTIZOUT QUE TO I	dux i iai U	ii ixiii I, stai	mig with the SCI	100016 16160360 04/24/00.


32R WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

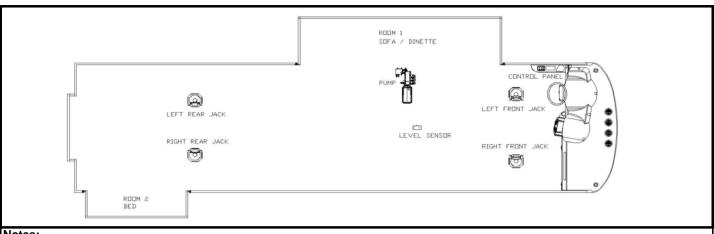

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	<u> </u>	COIOI	8308	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 288	Pump to Jack, Right Rear	2	Yellow	2478	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	1100	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		•			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.


34B WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

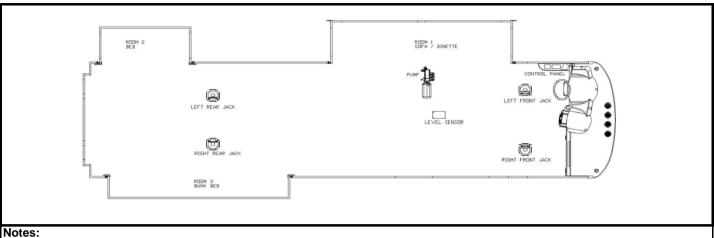

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			


34Y WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

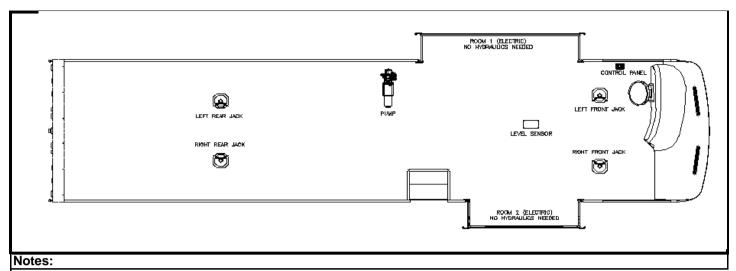

1) Jacks mount 2nd hole from top to top mounting plate hole.

Itana I an atla	Description / Leasting	01	0-1	I Van dan DN	
Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
		1		7239BR	
Pump	4-Function, Jacks Only				Measuring from back of
Jack Touch Pad	12,000 lbs, 16" Stroke Located to the left of the drivers seat	<u>4</u> 1		7214 2318	cab floor, this is the end
		<u> </u>		2730	location of the hydraulic
Control Box	Attached to bottom of structure	•			hoses where they attach to
Sync Cylinder	Mounted behind pump compartment	N/A	D	N/A	the slide mechanism.
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	2	White	2473	
Hose, 180	Pump to Jack, Right Rear	2	Yellow	2470	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
L.					<u> </u>


35B WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

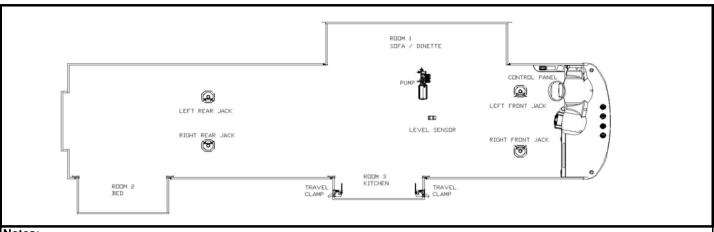

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8314	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 420	Pump to Room 2	2	Purple	2485	350 / Passenger Side
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
	N	F FI:	D 4 :	e ed d	1.04/04/00
1	New chart for Windsport for MY2007 due to				edule released 04/24/06.
2	Change name from 36B to 35B still starting v	with the rele	ease of 04/24	1/06	


36E WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

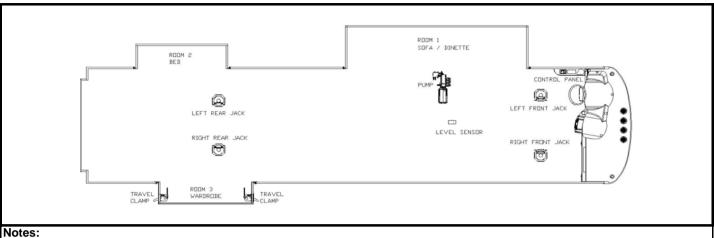

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	<u>Qty</u> 1	COIOI	8309	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	 1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the since mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 252	Pump to Jack, Right Rear	2	Yellow	2587	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	rtou	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
Travor oramp	1 we per chae			110011	14/7
		Options			
		Оршоно			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
	·		-	-	


36F WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

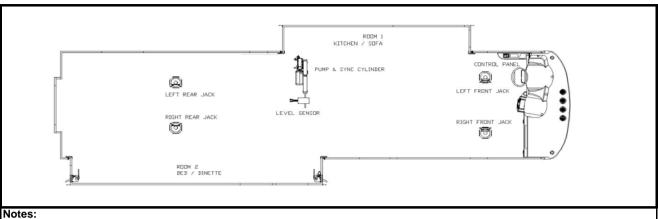

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8366	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Level Controller	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted inside pump compartment	1		7397	hoses where they attach to
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	the slide mechanism.
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	
Hose, 264	Pump to Jack, Right Front	2	White	2476	
Hose, 204	Pump to Jack, Right Rear	2	Yellow	2472	
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388	
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side
Slide Unit	Room 1 - 24" above floor slide	1		7369	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			


36R WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

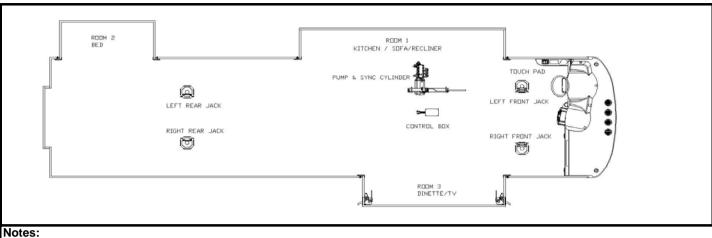

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Kit(Items listed below)18342Pump7-Function, 3 Rooms & Jacks17301BRJack12,000 lbs, 16" Stroke47214Touch PadLocated to the left of the drivers seat12318Control BoxAttached to bottom of structure12730Sync CylinderMounted behind pump compartment17397Hose, 120Pump to Jack, Left Front2Brown2465Hose, 240Pump to Jack, Left Rear2Orange2475Hose, 168Pump to Jack, Right Front2White2469Hose, 240Pump to Jack, Right Rear2Yellow2475Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Jack12,000 lbs, 16" Stroke47214Measuring from inside of firewall, this is the endTouch PadLocated to the left of the drivers seat12318location of the hydraulicControl BoxAttached to bottom of structure12730location of the hydraulicSync CylinderMounted behind pump compartment17397hoses where they attach toHose, 120Pump to Jack, Left Front2Brown2465the slide mechanism.Hose, 240Pump to Jack, Right Front2White2469Hose, 240Pump to Jack, Right Rear2Yellow2475Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Touch Pad Located to the left of the drivers seat 1 2318 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment 1 7397 Hose, 120 Pump to Jack, Left Front 2 Brown 2465 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 240 Pump to Jack, Right Rear 2 Yellow 2475 Hose, 36 Pump to sync cylinder 2 Gray 2458 Inside pump compartment 4 Brose, 120 Sync cylinder to front slide, Room 3 2 Gray 2465 Hose, 120 Sync cylinder to rear slide, Room 3 2 Gray 2465 Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side
Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment 1 7397 Hose, 120 Pump to Jack, Left Front 2 Brown 2465 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 240 Pump to Jack, Right Rear 2 Yellow 2475 Hose, 36 Pump to sync cylinder 2 Gray 2458 Inside pump compartment Hose, 120 Sync cylinder to front slide, Room 3 2 Gray 2465 Hose, 36 Pump to Room 1 2 Green 2458 Inside pump compartment 2 Gray 2465 Gray 2465 145 / Passenger Side 127 / Drivers Side
Sync CylinderMounted behind pump compartment17397hoses where they attach toHose, 120Pump to Jack, Left Front2Brown2465Hose, 240Pump to Jack, Left Rear2Orange2475Hose, 168Pump to Jack, Right Front2White2469Hose, 240Pump to Jack, Right Rear2Yellow2475Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 120 Pump to Jack, Left Front 2 Brown 2465 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 240 Pump to Jack, Right Rear 2 Yellow 2475 Hose, 36 Pump to sync cylinder 2 Gray 2458 Inside pump compartment Hose, 120 Sync cylinder to front slide, Room 3 2 Gray 2465 90 / Passenger Side Hose, 120 Sync cylinder to rear slide, Room 3 2 Gray 2465 145 / Passenger Side Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side
Hose, 240Pump to Jack, Left Rear2Orange2475Hose, 168Pump to Jack, Right Front2White2469Hose, 240Pump to Jack, Right Rear2Yellow2475Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 168Pump to Jack, Right Front2White2469Hose, 240Pump to Jack, Right Rear2Yellow2475Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 240Pump to Jack, Right Rear2Yellow2475Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 36Pump to sync cylinder2Gray2458Inside pump compartmentHose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 120Sync cylinder to front slide, Room 32Gray246590 / Passenger SideHose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 120Sync cylinder to rear slide, Room 32Gray2465145 / Passenger SideHose, 36Pump to Room 12Green2458127 / Drivers Side
Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side
,
Hose, 420 Pump to Room 2 2 Purple 2485 335 / Drivers Side
Hose, N/A Pump to Room 3 N/A Gray N/A N/A
Hose, N/A Pump to Room 4 N/A Red N/A N/A
Hose, N/A Pump to Generator Slide N/A N/A N/A
Travel Clamp Two per Slide 2 HWH N/A
Options


36Z WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

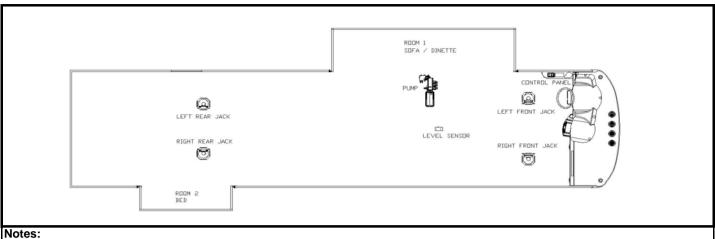

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8307	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	
Hose, 156	Pump to Jack, Right Front	2	White	2468	
Hose, 252	Pump to Jack, Right Rear	2	Yellow	2587	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Davidalar -			
0		Revisions	- D 1 -1	ting a suith the a !-	and the released 04/04/00
0	New chart for Windsport for MY2007 due to	raux riat o	n km 1, star	ling with the sch	leaule releasea U4/24/U6.
	l				

30Q WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

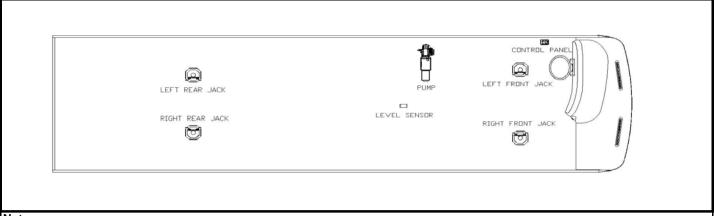


Notes:

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


31D WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

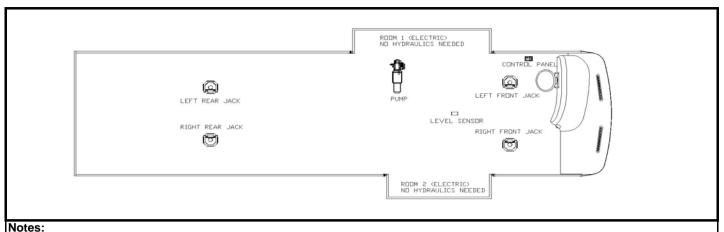

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8252	
Pump	X-Function, X Rooms & Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


31H WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

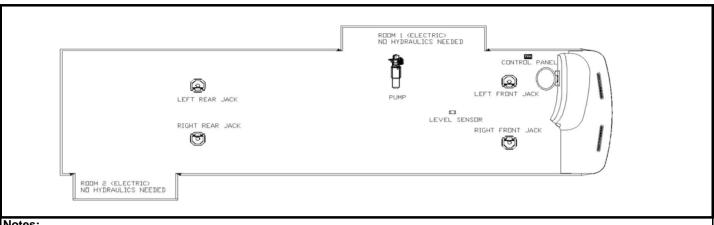

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	X-Function, X Rooms & Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


32E WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

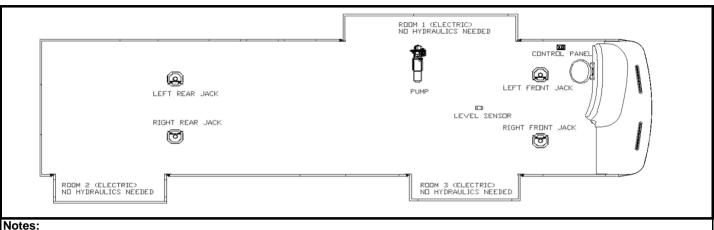

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	X-Function, X Rooms & Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions	- D 4 1	Caracado da a	
1	New chart for Windsport for MY2007 due to	raux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


33T WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

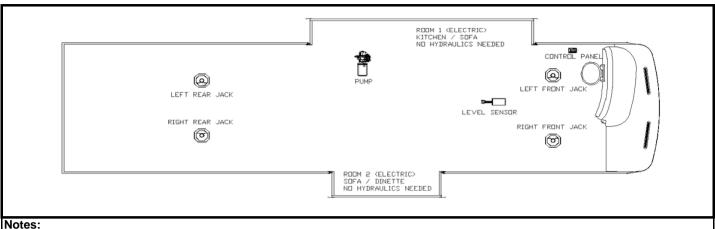

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length Kit (Items Pump Jack Touch Pad Control Box Flow Divider Hose, 204 Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Description / Location s listed below) X-Function, X Rooms & Jacks 12,000 lbs, 16" Stroke Located to the left of the drivers seat Attached to bottom of structure Mounted behind pump compartment Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	1 1 4 1 1 N/A 2 2 2 2 N/A	Brown Orange White	8381 7239BR 7214 2318 2730 N/A 2472 2470	Measuring from inside of firewall, this is the end location of the hydraulic hoses where they attach to the slide mechanism.
Jack Touch Pad Control Box Flow Divider Hose, 204 Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	12,000 lbs, 16" Stroke Located to the left of the drivers seat Attached to bottom of structure Mounted behind pump compartment Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	4 1 1 N/A 2 2 2	Orange White	7214 2318 2730 N/A 2472 2470	firewall, this is the end location of the hydraulic hoses where they attach to
Touch Pad Control Box Flow Divider Hose, 204 Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Located to the left of the drivers seat Attached to bottom of structure Mounted behind pump compartment Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	1 1 N/A 2 2 2 2	Orange White	2318 2730 N/A 2472 2470	firewall, this is the end location of the hydraulic hoses where they attach to
Control Box Flow Divider Hose, 204 Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Attached to bottom of structure Mounted behind pump compartment Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	1 N/A 2 2 2 2	Orange White	2730 N/A 2472 2470	location of the hydraulic hoses where they attach to
Flow Divider Hose, 204 Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Mounted behind pump compartment Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	N/A 2 2 2 2 2	Orange White	N/A 2472 2470	hoses where they attach to
Hose, 204 Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	2 2 2 2	Orange White	2472 2470	-
Hose, 180 Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	2 2 2	Orange White	2470	the slide mechanism.
Hose, 252 Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Pump to Jack, Right Front Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	2	White		
Hose, 216 Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Pump to Jack, Right Rear Pump to sync cylinder Sync cylinder to front slide, Room 1	2			
Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Pump to sync cylinder Sync cylinder to front slide, Room 1			2587	
Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A	Sync cylinder to front slide, Room 1	NI/A	Yellow	2473	
Hose, N/A Hose, N/A Hose, N/A Hose, N/A Hose, N/A		IN/A	Green	N/A	
Hose, N/A Hose, N/A Hose, N/A Hose, N/A		N/A	Green	N/A	
Hose, N/A Hose, N/A Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	
Hose, N/A Hose, N/A	Pump to Room 1	N/A	Green	N/A	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	
	Pump to Room 3	N/A	Gray	N/A	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	
	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		HWH	
		Options			
		Revisions			
1 New o	chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	edule released 04/24/06.
	te per Equalizer Specs		-	-	
	•				


32R WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

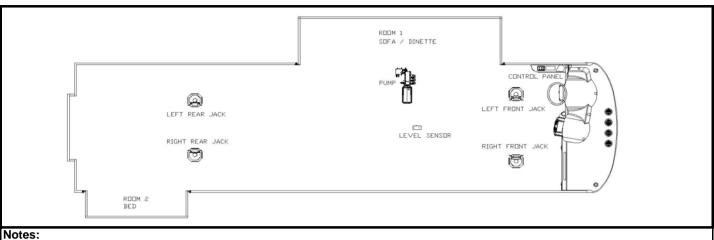

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8308	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 288	Pump to Jack, Right Rear	2	Yellow	2478	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


34B WINDSPORT/MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

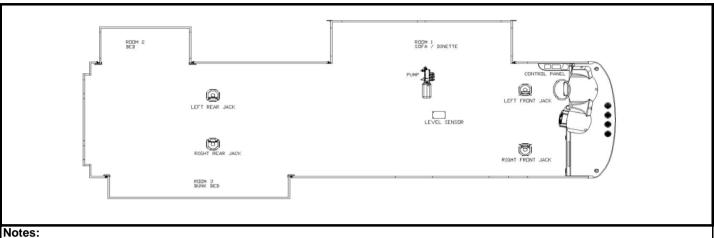

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	2	Yellow	2476	
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		0			
	Г	Options	ı		
		Revisions			
1	Update per Equalizer Specs				
2	Add Magellan to chart, same as Windsport p	per ECN 458	32.		


34Y WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

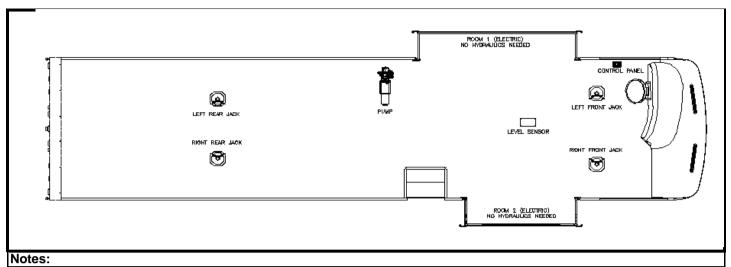

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	Measuring from back of
Jack	12,000 lbs, 16" Stroke	4		7214	cab floor, this is the end
Touch Pad	Located to the left of the drivers seat	1		2318	location of the hydraulic
Control Box	Attached to bottom of structure	1		2730	•
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	2	White	2473	
Hose, 180	Pump to Jack, Right Rear	2	Yellow	2470	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
		Revisions	5		
1	Update per Equalizer Specs				


36E WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

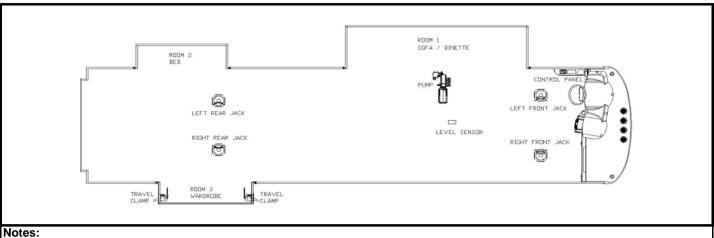

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8309				
Pump	7-Function, 3 Rooms & Jacks	1		7301BR				
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to			
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.			
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475				
Hose, 168	Pump to Jack, Right Front	2	White	2469				
Hose, 252	Pump to Jack, Right Rear	2	Yellow	2587				
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment			
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A			
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A			
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side			
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side			
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A			
Travel Clamp	Two per Slide	2		HWH	N/A			
		Options						
Revisions New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06.								
1		Faux Flat o	n Rm 1, star	ting with the sch	edule released 04/24/06.			
2	Update per Equalizer Specs							


36F WINDSPORT/MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

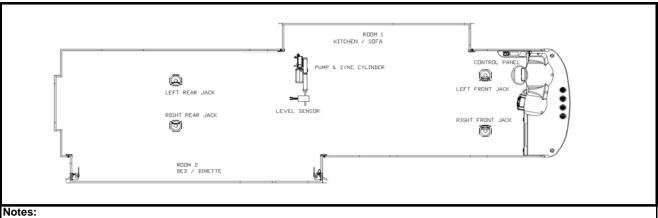

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8366			
Pump	6-Function, 2 Rooms & Jacks	1		7243BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Level Controller	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted inside pump compartment	1		7397	hoses where they attach to		
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	the slide mechanism.		
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469			
Hose, 264	Pump to Jack, Right Front	2	White	2476			
Hose, 204	Pump to Jack, Right Rear	2	Yellow	2472			
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment		
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side		
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side		
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388	-		
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side		
Slide Unit	Room 1 - 24" above floor slide	1		7369			
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A		
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	2		HWH	N/A		
		Options					
Revisions							
1	Update per Equalizer Specs						
2	Add Magellan to usage in header per ECN 4	582					


36R WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

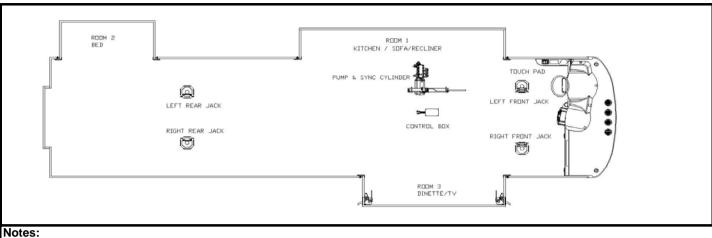

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Nit	Item, Length	Description / Location	Qty	Color	Vendor PN	
Jack			1			
Touch Pad	Pump		•		7301BR	
Control Box Sync Cylinder Mounted behind pump compartment Hose, 120 Hose, 240 Pump to Jack, Left Front Pump to Jack, Left Rear Hose, 240 Pump to Jack, Right Front Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Sync cylinder Pump to Sync Cylinder Pump to Room 3 Roren Pump to Room 1 Rose, 120 Rose, 12	Jack	12,000 lbs, 16" Stroke	4			Measuring from inside of
Sync Cylinder		Located to the left of the drivers seat	1			•
Hose, 120	Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Hose, 240		Mounted behind pump compartment	1		7397	hoses where they attach to
Hose, 168	Hose, 120	Pump to Jack, Left Front		Brown	2465	the slide mechanism.
Hose, 240	Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 36	Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 120	Hose, 240	Pump to Jack, Right Rear	2	Yellow	2475	
Hose, 120 Sync cylinder to rear slide, Room 3 2 Gray 2465 145 / Passenger Side	Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment
Hose, 36	Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 36	Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Hose, N/A	Hose, 36	Pump to Room 1	2	Green	2458	
Hose, N/A	Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Hose, N/A	Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Travel Clamp Two per Slide 2 HWH N/A Options <	Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Options Revisions 1 Update per Equalizer Specs	Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Revisions 1 Update per Equalizer Specs	Travel Clamp	Two per Slide	2		HWH	N/A
Revisions 1 Update per Equalizer Specs						
Revisions 1 Update per Equalizer Specs						
1 Update per Equalizer Specs			Options			
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
1 Update per Equalizer Specs						
			Revisions			
2 Add Magellan to usage in header per ECN 4582						
	2	Add Magellan to usage in header per ECN 4	582			
					·	


36Z WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

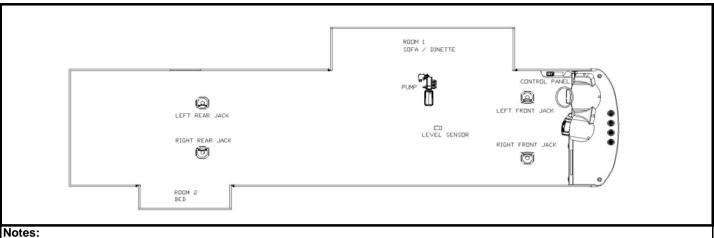

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Touch Pad	Item, Length	Description / Location	Qty	Color	Vendor PN	
Jack		(Items listed below)			8307	
Touch Pad Located to the left of the drivers seat 1 2318 Control Box Attached to bottom of structure 1 2730 location of the hydraulic Sync Cylinder Mounted behind pump compartment N/A NA NA Hose, 120 Pump to Jack, Left Front 2 Brown 2465 lose where they attach the selection of the hydraulic sync pump to Jack Pump to Jack, Left Rear 2 Orange 2474 lose, 156 Pump to Jack, Right Front 2 White 2468 lose, 252 Pump to Jack, Right Front 2 White 2468 lose, 252 Pump to Jack, Right Rear 2 Yellow 2587 lose, N/A Pump to sync cylinder N/A Green N/A Inside pump compartment Hose, N/A Sync cylinder to front slide, Room 1 N/A Green N/A N/A N/A lose, N/A Sync cylinder to fear slide, Room 1 N/A Green N/A N/A N/A lose, N/A Sync cylinder to fear slide, Room 1 N/A Green N/A N/A N/A lose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Hose, 372 Pump to Room 1 2 Green 2458 127 / Drivers Side Hose, N/A Pump to Room 2 Pump to Room 2 Pump to Room 3 N/A Gray N/A N/A N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Control Box	Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Sync Cylinder Mounted behind pump compartment Hose, 120 Pump to Jack, Left Front 2 Brown 2465 Hose, 228 Pump to Jack, Left Rear 2 Orange 2474 Hose, 156 Pump to Jack, Right Front 2 White 2468 Hose, 252 Pump to Jack, Right Front 2 White 2468 Hose, 252 Pump to Jack, Right Rear 2 Yellow 2587 Hose, N/A Pump to sync cylinder N/A Green N/A Inside pump compartment Hose, N/A Sync cylinder to front slide, Room 1 N/A Green N/A N/A N/A Hose, N/A Sync cylinder to front slide, Room 1 N/A Green N/A N/A N/A Hose, N/A Sync cylinder to rear slide, Room 1 N/A Green N/A N/A N/A Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Hose, 372 Pump to Room 2 Pump to Room 2 N/A Gray N/A N/A Hose, N/A Pump to Room 3 N/A Gray N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A Red N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A HWH N/A N/A N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A HWH N/A N/A N/A N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A HWH N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Hose, 120 Pump to Jack, Left Front Pump to Jack, Left Rear Orange 2474 Hose, 228 Pump to Jack, Right Front Pump to Jack, Right Front Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Sync cylinder Pump to Sync cylinder Pump to Room 1 Pump to Room 1 Pump to Room 1 Pump to Room 2 Pump to Room 2 Pump to Room 3 Pump to Room 3 Pump to Room 3 Pump to Room 4 Pump to Room 4 Pump to Room 4 Pump to Generator Slide N/A Pump to Generator Slide N/A Pump to Generator Slide N/A Pump to Generator Slide N/A Pump to Room 4 N/A Pump to Room 4 N/A Pump to Generator Slide N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Hose, 228	Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 156	Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.
Hose, 252 Pump to Jack, Right Rear 2 Yellow 2587 Hose, N/A Pump to sync cylinder N/A Green N/A Inside pump compartment Hose, N/A Sync cylinder to front slide, Room 1 N/A Green N/A N/A Hose, N/A Sync cylinder to rear slide, Room 1 N/A Green N/A N/A Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Hose, 372 Pump to Room 2 2 Purple 2481 319 / Passenger Side Hose, N/A Pump to Room 3 N/A Gray N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A Two per Slide N/A HWH N/A Pump to Generator Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Pump to Room 4 N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A Travel Clamp Two per Slide N/A HWH N/A	Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	
Hose, N/A Pump to sync cylinder N/A Green N/A Inside pump compartment Hose, N/A Sync cylinder to front slide, Room 1 N/A Green N/A N/A N/A Hose, N/A Sync cylinder to rear slide, Room 1 N/A Green N/A N/A N/A Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Hose, 372 Pump to Room 2 2 Purple 2481 319 / Passenger Side Hose, N/A Pump to Room 3 N/A Gray N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Hose, 156	Pump to Jack, Right Front	2	White	2468	
Hose, N/A Sync cylinder to front slide, Room 1 N/A Green N/A N/A N/A Hose, N/A Sync cylinder to rear slide, Room 1 N/A Green N/A N/A N/A Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Hose, N/A Pump to Room 2 2 Purple 2481 319 / Passenger Side Hose, N/A Pump to Room 3 N/A Gray N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Hose, 252	Pump to Jack, Right Rear	2	Yellow	2587	
Hose, N/A Sync cylinder to rear slide, Room 1 N/A Green N/A N/A Hose, 36	Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, 36	Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, 372 Pump to Room 2 Pump to Room 3 N/A Gray N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A N/A N/A Travel Clamp Two per Slide N/A N/A HWH N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A Pump to Room 3 N/A Gray N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A N/A N/A Travel Clamp Options Options Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06.	Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A Options Clamp Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs	Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side
Hose, N/A Pump to Generator Slide N/A N/A N/A Travel Clamp Two per Slide N/A HWH N/A Options Options Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. 2 Update per Equalizer Specs	Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Travel Clamp Two per Slide N/A HWH N/A Options Options Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs	Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Options Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs	Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. 2 Update per Equalizer Specs	Travel Clamp	Two per Slide	N/A		HWH	N/A
Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. 2 Update per Equalizer Specs						
Revisions 1 New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. 2 Update per Equalizer Specs			Options			
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs						
New chart for Windsport for MY2007 due to Faux Flat on Rm 1, starting with the schedule released 04/24/06. Update per Equalizer Specs			Revisions			
2 Update per Equalizer Specs	1			n Rm 1. star	ting with the sch	nedule released 04/24/06.
				, 3.5	<u> </u>	
		Add Magellan to usage in header per ECN 4	582			

30Q HURRICANE/WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

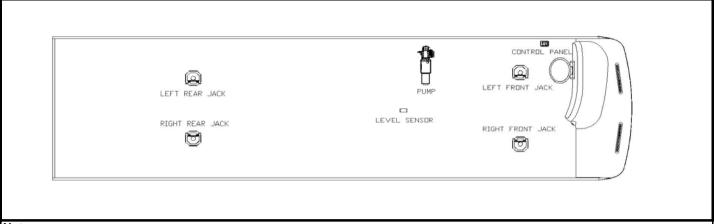


Notes:

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8252			
Pump	4-Function, Jacks	1		7239BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to		
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.		
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473			
Hose, 180	Pump to Jack, Right Front	1	White	2470			
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476			
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463			
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463			
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A		
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A		
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A		
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	N/A		HWH	N/A		
		Options					
		Revisions					
	1 Add Windsport to Title of this chart for MY2007.						
2	Update per Equalizer Specs						


31D HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

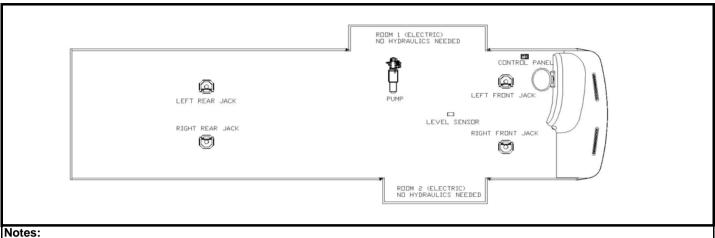

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8252				
Pump	4-Function, Jacks	1		7239BR				
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to			
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.			
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473				
Hose, 180	Pump to Jack, Right Front	1	White	2470				
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476				
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463				
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463				
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A			
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A			
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A			
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A			
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A			
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A			
Travel Clamp	Two per Slide	N/A		HWH	N/A			
		Options						
Revisions								
1 Add Windsport to Title of this chart for MY2007.								
2	Update per Equalizer Specs							
<u> </u>								


32E HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

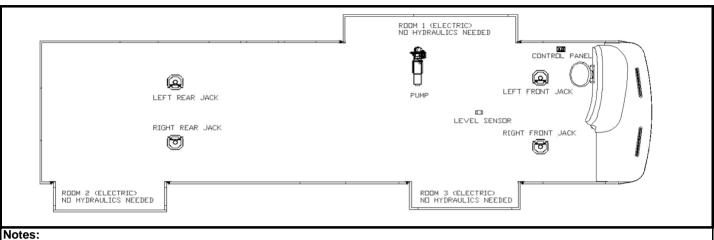

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs	I/CAISIO112			
ı	Opuate per Equalizer Opecs				


33H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

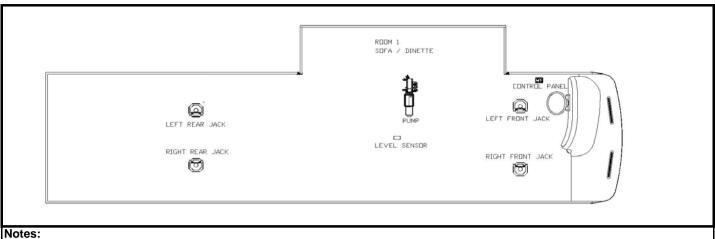

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8270	
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	•		
		Revisions			
1	Update per Equalizer Specs	I/EAISIOHS			
I	Opuate per Equalizer Opecs				


33T HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

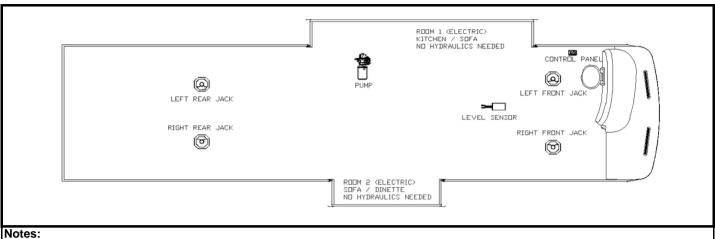

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8381	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 204	Pump to Jack, Left Front	2	Brown	2472	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 252	Pump to Jack, Right Front	1	White	2587	
Hose, 216	Pump to Jack, Right Rear	1	Yellow	2473	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Davisiers			
	T	Revisions			


34B HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

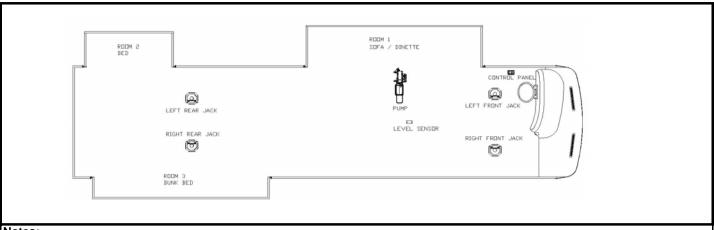

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8323			
Pump	7-Function, 3 Rooms, Jacks	1		7301BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to		
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.		
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475			
Hose, 168	Pump to Jack, Right Front	2	White	2469			
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476			
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463			
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side		
Slide Unit	Room 1-36" Above Floor Slide	1		7164			
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side		
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998			
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side		
Slide Unit	Room 3-18" Above floor slide	1		7135			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Travel Clamp	Two per Slide	N/A		N/A	N/A		
		Options					
Revisions							
9/1/2006	Add 34S to 34B chart						
2	Update per Equalizer Specs						


34N HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

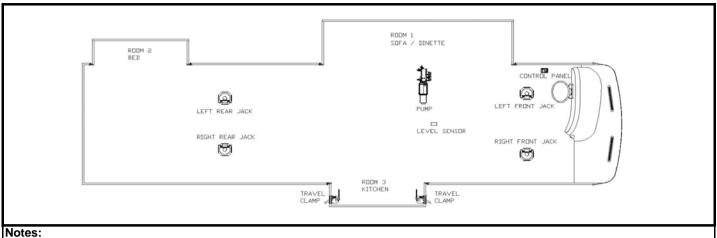

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8269	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	305 / Passenger Side
Slide Unit	Room 2-30" Bed slide (Lippert)	1		134998	
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs				

34Y HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

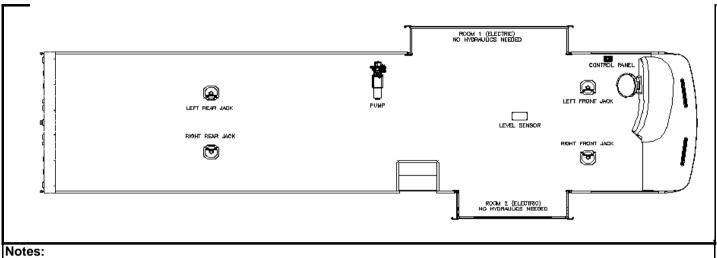

Item, Length	Description / Location	Qty	Color	Vendor PN	
item, Length	Description / Location	હાપ્ર	Coloi	Vendor FIN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the left of the drivers seat	. 1		2318	floor, this is the end
Control Box	Attached to bottom of structure	<u>.</u>		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	1	White	2473	
Hose, 180	Pump to Jack, Right Rear	1	Yellow	2470	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
		Revision	S		
1	Update per Equalizer Specs			•	

30Q HURRICANE/WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

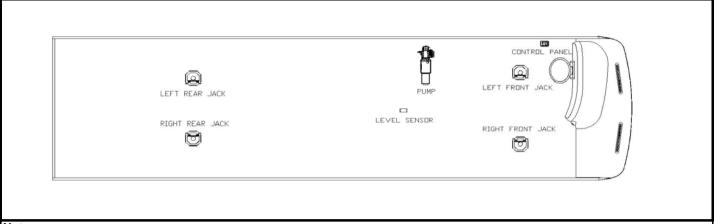


Notes:

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		D			
		Revisions			
	Add Windsport to Title of this chart for MY20	107.			
2	Update per Equalizer Specs				


31D HURRICANE/WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

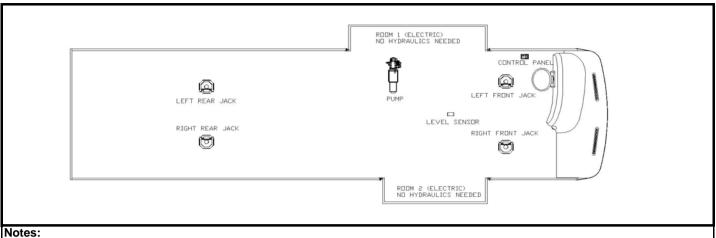

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	ı		
		_		_	
		Revisions			
	Add Windsport to Title of this chart for MY20	07.			
2	Update per Equalizer Specs				


32E HURRICANE/WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

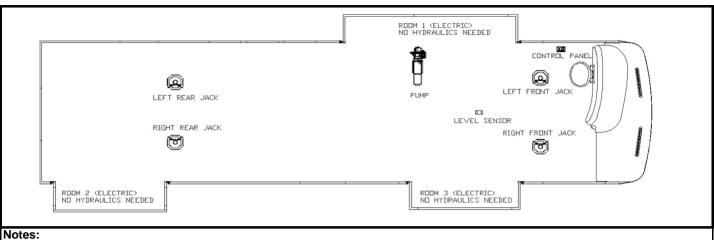

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs				


33H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

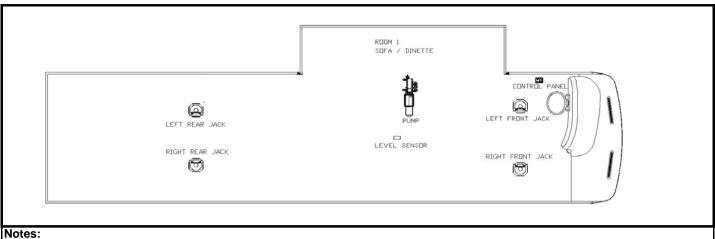

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	<u></u>		8270	
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	1		
		Revisions			
1	Update per Equalizer Specs				
<u>-</u>	1 1221				


33T HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

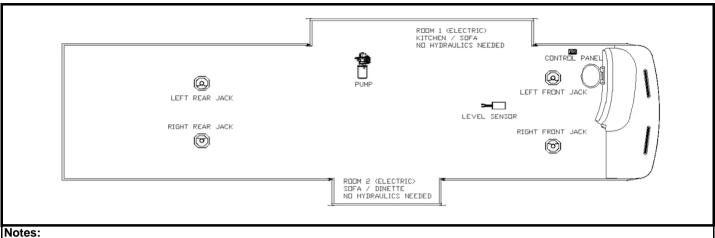

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8381	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 204	Pump to Jack, Left Front	2	Brown	2472	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 252	Pump to Jack, Right Front	1	White	2587	
Hose, 216	Pump to Jack, Right Rear	1	Yellow	2473	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Davislana			
	T	Revisions			
					_


34B HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

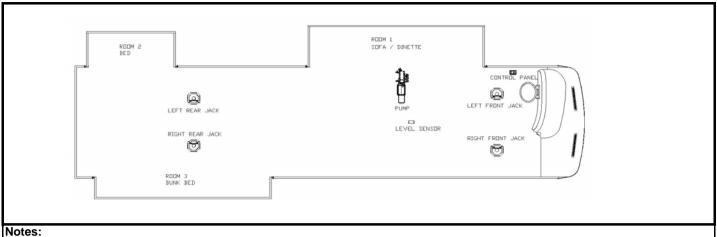

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		.			
0/4/2000		Revisions			
9/1/2006	Add 34S to 34B chart				
2	Update per Equalizer Specs				


34N HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

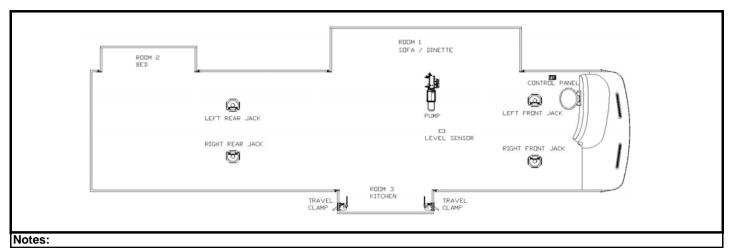

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8269	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	2	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	305 / Passenger Side
Slide Unit	Room 2-30" Bed slide (Lippert)	1		134998	
Hose w90, 108	Pump to Room 3	2	Gray	2464	160 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Options			I
		Revisions			
1	Update per Equalizer Specs				
		_			


34U HURRICANE (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

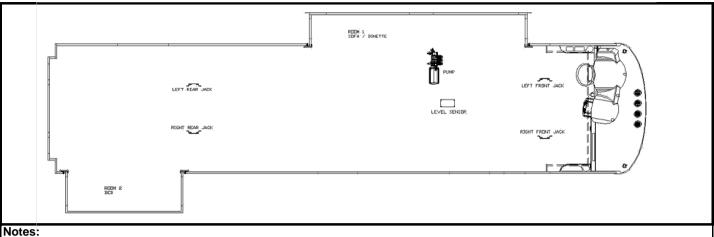

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8466	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	Inside pump compartment
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	N/A
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Passenger Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose, N/A	Pump to Room 3		Gray		
Slide Unit	Room 3-				N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Revisions			

34Y HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

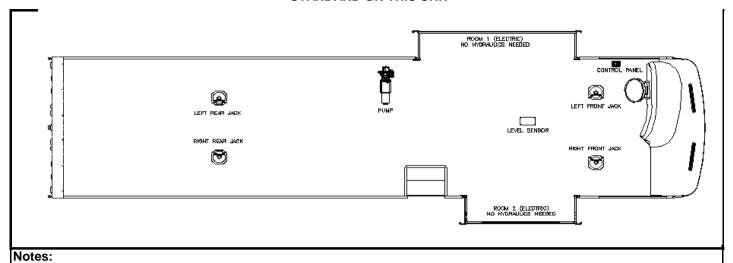


16 1	Description II costing	01	1 0-1	I Van dan DNI	
Item, Length	Description / Location	Qty	Color	Vendor PN	
17:4	(Itama lista dibalan)	4		0005	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1	+	7239BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4	1	7214	floor, this is the end
Touch Pad	Located to the left of the drivers seat	1	_	2318	location of the hydraulic
Control Box	Attached to bottom of structure	11		2730	hoses where they attach to
Flow Divider	Mounted inside pump compartment	N/A		N/A	the slide mechanism.
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	1	White	2473	
Hose, 180	Pump to Jack, Right Rear	1	Yellow	2470	
Hose, 96	Left Front Jack, Right Front Jack	11	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
		Revision	S		
1	Update per Equalizer Specs				

34Y FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

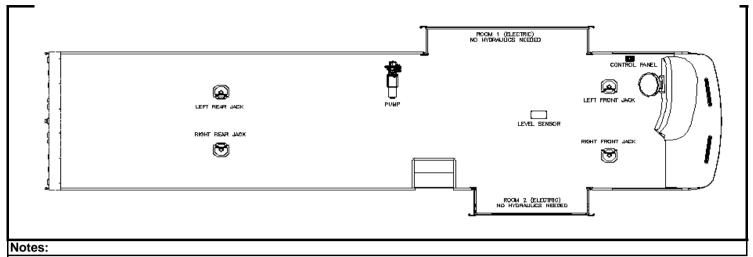


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the left of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2730	_
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	1	White	2473	
Hose, 180	Pump to Jack, Right Rear	1	Yellow	2470	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date

35 D FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

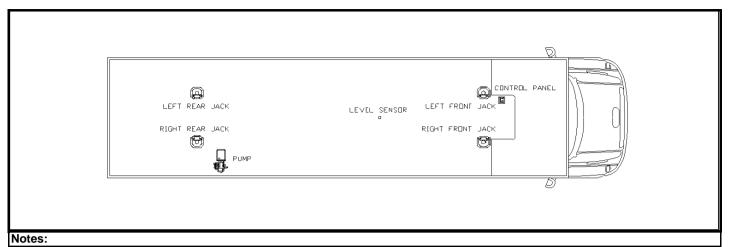


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	1
Pump	4-Function, Jacks Only	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Manageria a from book of ook
Touch Pad	Located to the right of the drivers seat	1		2318	Measuring from back of cab
Control Box	Attached to bottom of structure	1		2730	floor, this is the end location
Flow Divider	Mounted inside pump compartment	N/A		N/A	of the hydraulic hoses where
Hose, 288	Pump to Jack, Left Front	1	Brown	2478	they attach to the slide
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	mechanism.
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
	-				

42D FUN MOVEREQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

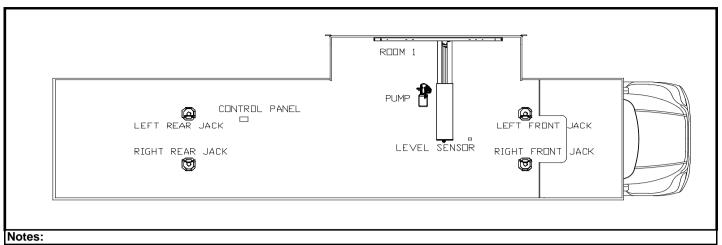

Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
itom, zongm	2000	٦٠,	00.0.	7 011001 1 11	floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242BR	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	73 / Drivers Side
Slide Unit	Room 1-36" Above floor Slide	1		7164	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 276	Pump to Jack, Right Rear	1	Yellow	2477	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
	F	Revisions			


42C FUN MOVEREQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

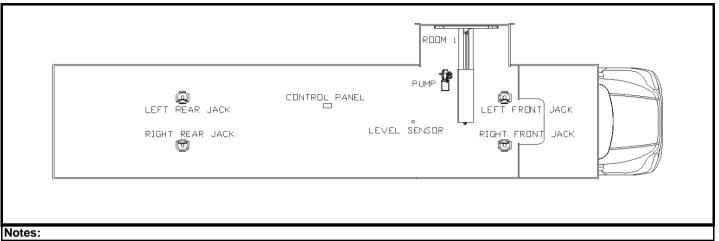

1) Jacks mount top hole to 2nd from top mounting plate hole.


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
, , , , , , , , , , , , , , , , , , ,					floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242BR	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	42 / Drivers Side
Slide Unit	Room 1-36" Above floor Slide	1		7164	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 276	Pump to Jack, Right Rear	1	Yellow	2477	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
		Revisions			

32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

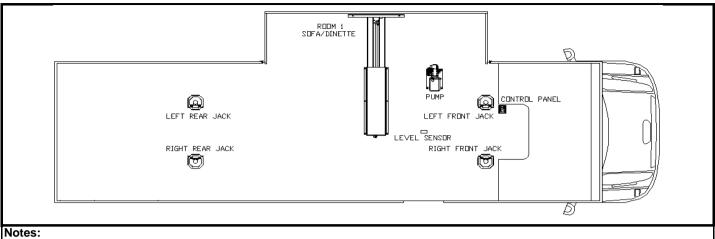


Itom Longth	Description / Location	Qty	Color	Vendor PN	
Item, Length	Description / Location	Qty	Color	Vendor PN	-
Kit	(Items listed below)	1		8264	-
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2730	of the hydraulic hoses where
Hose, 72	Pump to Jack, Left Front	2	Brown	2461	they attach to the slide
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	mechanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yellow	2463	
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1-36" above floor slide	1		7164D	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1	Made Jack, Control Panel, Level Sensor & ho	oses stanc	lard	JB	11/17/2005

33K KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

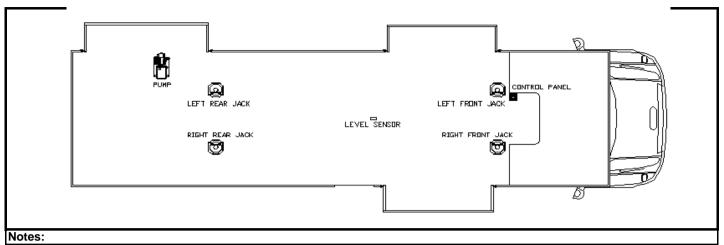


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
Kit	(Items listed below)	1		8274	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 288	Pump to Jack, Left Front	2	Brown	2478	
Hose, 84	Pump to Jack, Left Rear	2	Orange	2462	
Hose, 300	Pump to Jack, Right Front	1	White	2479	
Hose, 120	Pump to Jack, Right Rear	2	Yellow	2465	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
	F	Revisions			

34G KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

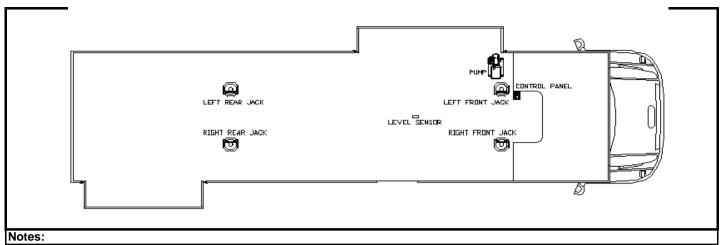


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
·					
		Options			
Kit	(Items listed below)	1		8275	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 60	Pump to Jack, Left Front	2	Brown	2460	
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yellow	2463	
		Revisions			
			-		
			<u> </u>		

34H KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

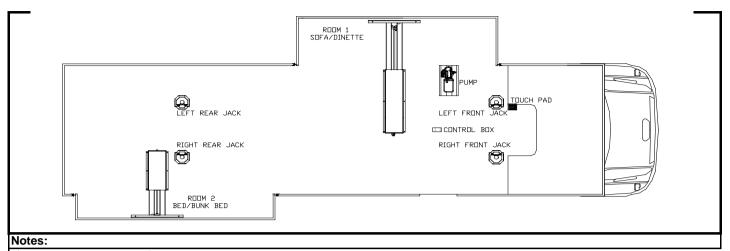


Item, Length	Description / Location	Qty	Color	Vendor PN	
, , , ,		,			
Kit	(Items listed below)	1		8341	
Pump	6-Function,2 Room, Jacks	1		7243BR	Managering from book of oah
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2730	of the hydraulic hoses where
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	they attach to the slide mechanism.
Hose, 252	Pump to Jack, Left Rear	2	Orange	2587	mecnanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587	1
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	1
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1-36" above floor slide	1		7164B	
Hose, 300	Pump to Room 2	2	Purple	2479	245 / Passenger Side
Slide Unit	Room 2-18" above floor slide	1		7135B	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Options			I
Revisions	Description			Ву	Date

35B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

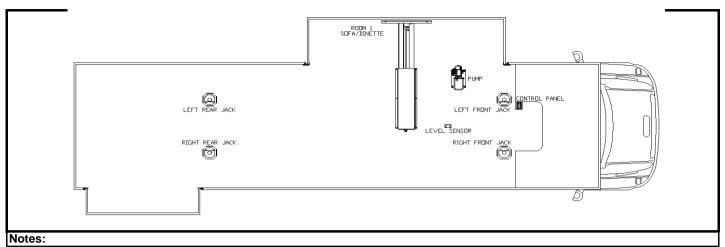


Description / Location	Qtv	Color	Vendor PN	
Description/ Escation	Qty	00101	VCHGOI I IV	
(Items listed below)	1		8264	1
	1		7242BR	1
	4		7214	Measuring from back of cab
Located to the right of the drivers seat	1		2318	floor, this is the end location
Attached to bottom of structure	1		2730	of the hydraulic hoses where
Pump to Jack, Left Front	2	Brown	2461	they attach to the slide
Pump to Jack, Left Rear	2	Orange	2475	mechanism.
Pump to Jack, Right Front	2	White	2464	
Pump to Jack, Right Rear	1	Yellow	2475	
Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Pump to Room 1	2	Green	2462	80 / Drivers Side
Room 1-36" above floor slide	1		7164D	
Pump to Room 2		Purple		
Pump to Room 3		Gray		
Pump to Room 4		Red		
Two per Slide			HWH	
	Options			
Passintian			Dec	Data
Description			Бу	Date
	Attached to bottom of structure Pump to Jack, Left Front Pump to Jack, Left Rear Pump to Jack, Right Front Pump to Jack, Right Rear Left Rear Jack, Right Rear Jack Pump to Room 1 Room 1-36" above floor slide Pump to Room 2 Pump to Room 3	(Items listed below) 1 5-Function,1 Room, Jacks 1 12,000 lbs, 16" Stroke 4 Located to the right of the drivers seat 1 Attached to bottom of structure 1 Pump to Jack, Left Front 2 Pump to Jack, Left Rear 2 Pump to Jack, Right Front 2 Pump to Jack, Right Front 2 Pump to Jack, Right Rear 1 Left Rear Jack, Right Rear 1 Left Rear Jack, Right Rear Jack 1 Pump to Room 1 2 Room 1-36" above floor slide 1 Pump to Room 3 Pump to Room 4 Two per Slide Options	(Items listed below) 1 5-Function,1 Room, Jacks 1 12,000 lbs, 16" Stroke 4 Located to the right of the drivers seat 1 Attached to bottom of structure 1 Pump to Jack, Left Front 2 Brown Pump to Jack, Left Rear 2 Orange Pump to Jack, Right Front 2 White Pump to Jack, Right Rear 1 Yellow Left Rear Jack, Right Rear 1 Yel/Ora. Pump to Room 1 2 Green Room 1-36" above floor slide 1 Pump to Room 2 Purple Pump to Room 4 Red Two per Slide Options	(Items listed below) 1 8264 5-Function,1 Room, Jacks 1 7242BR 12,000 lbs, 16" Stroke 4 7214 Located to the right of the drivers seat 1 2318 Attached to bottom of structure 1 2730 Pump to Jack, Left Front 2 Brown 2461 Pump to Jack, Left Rear 2 Orange 2475 Pump to Jack, Right Front 2 White 2464 Pump to Jack, Right Rear 1 Yellow 2475 Left Rear Jack, Right Rear 1 Yellow 2475 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Pump to Room 1 2 Green 2462 Room 1-36" above floor slide 1 7164D Pump to Room 3 Gray Pump to Room 4 Red Two per Slide HWH

36A KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

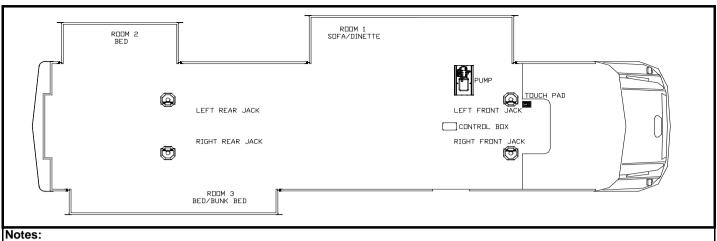


Itama Langetti	Description / Leastion	04.	l Calar	Vandar DN	1
Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8158	4
Pump	7-Function,3 Room, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2730	of the hydraulic hoses where
Sync Cylinder	Mounted inside pump compartment				they attach to the slide
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	mechanism.
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478	meenamsm.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	2479	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Sync Cylinder				
Hose, N/A	Sync Cylinder to front slide, Room 1				
Hose, N/A	Sync Cylinder to rear slide, Room 1				
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1 - 36" above floor slide	1		7164B	
Hose, 336	Pump to Room 2	2	Purple	2535	302 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 324	Pump to Room 3	2	Gray	2480	259 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135B	
Hose, N/A	Pump to Room 4				
Hose, N/A	Pump to Generator Slide				
Travel Clamp	Two per Slide			HWH	
		Options			
Revisions	Description			Ву	Date

36B KODIAK (26.0) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

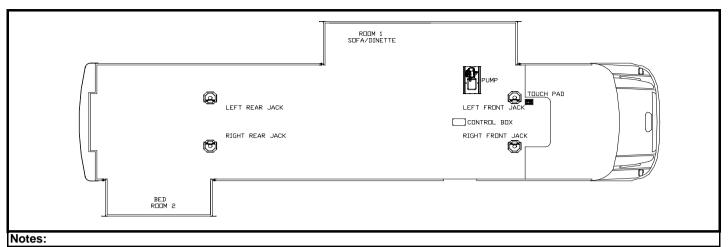


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	33.3.	?	-
Pump	6-Function,2 Room, Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	1
Touch Pad	Located to the right of the drivers seat	1		2318	Measuring from back of cab
Control Box	Attached to bottom of structure	1		2730	floor, this is the end location
Sync Cylinder	Mounted inside pump compartment				of the hydraulic hoses where
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	they attach to the slide
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478	mechanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	2479	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Sync Cylinder				N/A
Hose, N/A	Sync Cylinder to front slide, Room 1				N/A
Hose, N/A	Sync Cylinder to rear slide, Room 1				N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1 - 36" above floor slide	1		7164B	
Hose, 336	Pump to Room 2	2	Purple	2535	266 / Passenger Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, N/A	Pump to Room 3		Gray		N/A
Slide Unit	Room 3 -				N/A
Hose, N/A	Pump to Room 4				N/A
Hose, N/A	Pump to Generator Slide				N/A
Travel Clamp	Two per Slide			HWH	N/A
		Options	1		
	+				
					_
Revisions	Description			Ву	Date
					•

32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

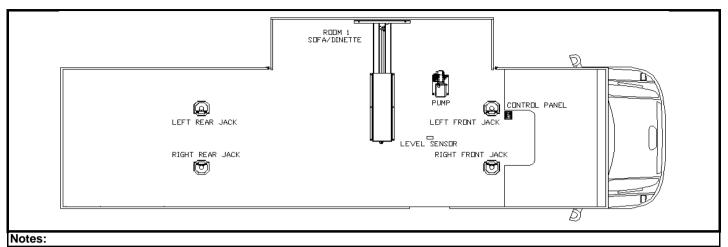


Item, Length	Description / Location	Qty	Color	Vendor PN	
item, Length	Description / Location	Qty	COIOI	Vendor FIN	-
Kit	(Items listed below)	1		8264	-
Pump	5-Function,1 Room, Jacks	1		7242BR	1 . , , .
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Touch Pad	Located to the right of the drivers seat	1		2318	floor, this is the end location
Control Box	Attached to bottom of structure	1		2730	of the hydraulic hoses where
Hose, 72	Pump to Jack, Left Front	2	Brown	2461	they attach to the slide
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	mechanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1-36" above floor slide	1		7164B	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1	Made Jack, Control Panel, Level Sensor & ho	oses stanc	lard	JB	11/17/2005

33K KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

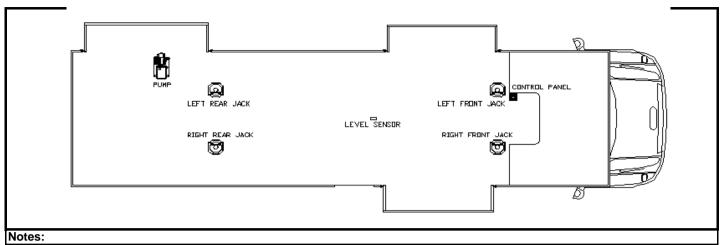


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
Kit	(Items listed below)	1		8274	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 288	Pump to Jack, Left Front	2	Brown	2478	
Hose, 84	Pump to Jack, Left Rear	2	Orange	2462	
Hose, 300	Pump to Jack, Right Front	1	White	2479	
Hose, 120	Pump to Jack, Right Rear	2	Yellow	2465	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
	F	Revisions			

34G KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

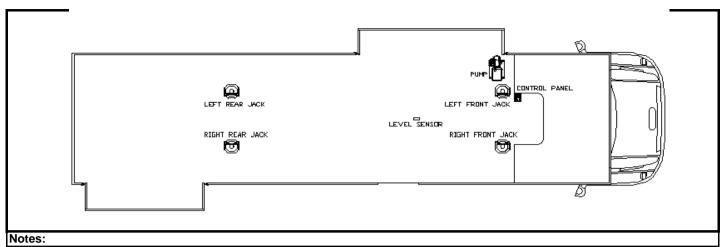


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
·	·				
		Options			
Kit	(Items listed below)	1		8275	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	
Hose, 60	Pump to Jack, Left Front	2	Brown	2460	
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
	F	Revisions			
			·		

34H KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

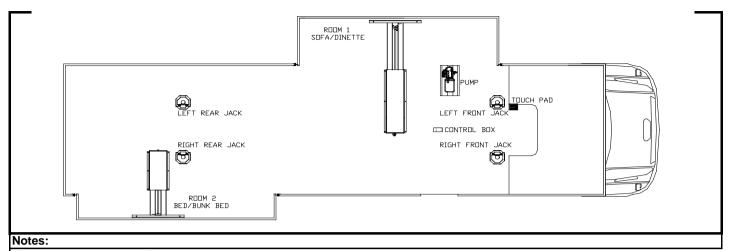


Item, Length	Description / Location	Qty	Color	Vendor PN	
, , ,		,			1
Kit	(Items listed below)	1		8341	
Pump	6-Function,2 Room, Jacks	1		7243BR	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2730	they attach to the slide
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	mechanism.
Hose, 252	Pump to Jack, Left Rear	2	Orange	2587	mechanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1-36" above floor slide	1		7164B	
Hose, 300	Pump to Room 2	2	Purple	2479	245 / Passenger Side
Slide Unit	Room 2-18" above floor slide	1		7135B	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
			 		
Revisions	Description			Ву	Date

35B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

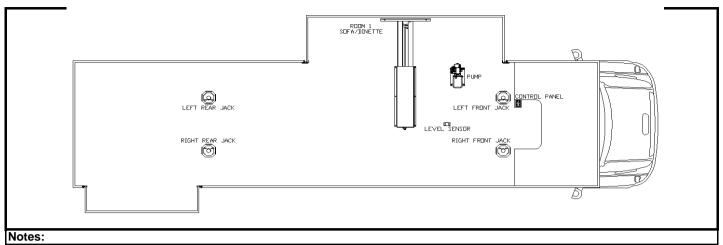


Item, Length	Description / Location	Qty	Color	Vendor PN	
, 0	·	•			1
Kit	(Items listed below)	1		8264	
Pump	5-Function,1 Room, Jacks	1		7242BR	Managering from book of oak
Jack	12,000 lbs, 16" Stroke	4		7214	 Measuring from back of cab floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2730	of the hydraulic hoses where
Hose, 72	Pump to Jack, Left Front	2	Brown	2461	they attach to the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	mecnanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1-36" above floor slide	1		7164B	
Hose, N/A	Pump to Room 2		Purple		
Slide Unit					
Hose, N/A	Pump to Room 3		Gray		
Slide Unit					
Hose, N/A	Pump to Room 4		Red		
Slide Unit					
Travel Clamp	Two per Slide			HWH	
		Options			
Revisions	Description			Ву	Date

36A KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

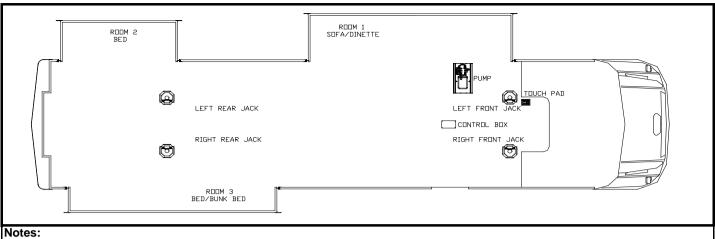


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8158	-
Pump	7-Function,3 Room, Jacks	1		7301BR	-
Jack	12,000 lbs, 16" Stroke	4		7214	1
Touch Pad	Located to the right of the drivers seat	1		2318	Measuring from back of cab
Control Box	Attached to bottom of structure	1		2730	floor, this is the end location
Sync Cylinder	Mounted inside pump compartment				of the hydraulic hoses where
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	they attach to the slide
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478	mechanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	-
Hose, 300	Pump to Jack, Right Rear	1	Yellow	2479	-
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Sync Cylinder				
Hose, N/A	Sync Cylinder to front slide, Room 1				
Hose, N/A	Sync Cylinder to rear slide, Room 1				
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1 - 36" above floor slide	1		7164B	
Hose, 336	Pump to Room 2	2	Purple	2535	302 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	•	134998	
Hose, 324	Pump to Room 3	2	Gray	2480	259 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135B	
Hose, N/A	Pump to Room 4				
Hose, N/A	Pump to Generator Slide				
Travel Clamp	Two per Slide			HWH	
		Options			
Revisions	Description			Ву	Date

36B KODIAK (26.0) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

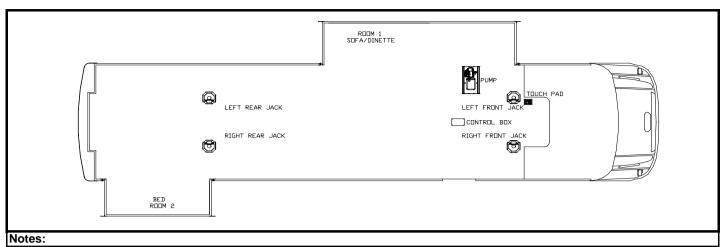

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8465	1
Pump	6-Function,2 Room, Jacks	1		7243BR	-
Jack	12,000 lbs, 16" Stroke	4		7214	1
Touch Pad	Located to the right of the drivers seat	1		2318	Measuring from back of cab
Control Box	Attached to bottom of structure	1		2730	floor, this is the end location
Sync Cylinder	Mounted inside pump compartment				of the hydraulic hoses where
Hose, 84	Pump to Jack, Left Front	2	Brown	2462	they attach to the slide
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478	mechanism.
Hose, 108	Pump to Jack, Right Front	2	White	2464	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	2479	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Sync Cylinder				N/A
Hose, N/A	Sync Cylinder to front slide, Room 1				N/A
Hose, N/A	Sync Cylinder to rear slide, Room 1				N/A
Hose, 84	Pump to Room 1	2	Green	2462	80 / Drivers Side
Slide Unit	Room 1 - 36" above floor slide	1		7164B	
Hose, 336	Pump to Room 2	2	Purple	2535	266 / Passenger Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, N/A	Pump to Room 3		Gray		N/A
Slide Unit	Room 3 -				N/A
Hose, N/A	Pump to Room 4				N/A
Hose, N/A	Pump to Generator Slide				N/A
Travel Clamp	Two per Slide			HWH	N/A
Т		Options	1		
Revisions	Description			Ву	Date
+					


34B MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

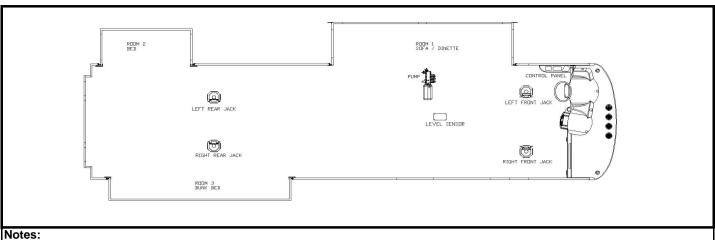

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yellow	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		D			
4		Revisions			
1	Update per Equalizer Specs	0 FON 45	20		
2	Add Magellan to chart, same as Windsport p	Dei EUN 458	52.		


36E MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

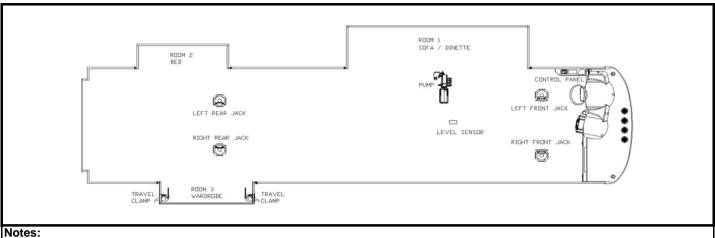

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8309	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Manager to all a f
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587	
Hose,96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998	
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Davidalar -			
1		Revisions	n Dm 1 star	ting with the sale	and the released 04/24/06
1 2	New chart for Windsport for MY2007 due to Update per Equalizer Specs	raux riat o	n Km 1, star	ung with the sch	ledule released 04/24/06.
	Opuate per Equalizer Specs				


36F MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

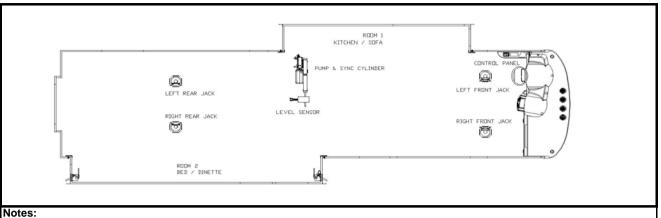

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8366	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Level Controller	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted inside pump compartment	1		7397	location of the hydraulic
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	hoses where they attach to
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	the slide mechanism.
Hose, 264	Pump to Jack, Right Front	1	White	2476	
Hose, 204	Pump to Jack, Right Rear	1	Yellow	2472	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463	
Hose, 96	Left Front Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side
Slide Unit	Room 1 - 24" above floor slide	1		7369	
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		.			
4		Revisions			
1	Update per Equalizer Specs	500			
2	Add Magellan to usage in header per ECN 4	582			
	 				
	<u>l</u>				


36R MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

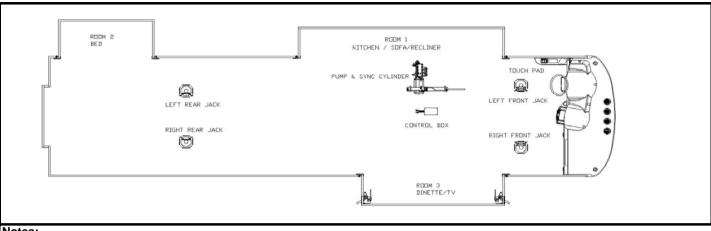

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7397	hoses where they attach to
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1- 24" Above Floor slide	1		7369	
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Slide Unit	Room 2-30" bed slide(Lippert)	1		134998	
Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Slide Unit	Room 3-24" Flush Floor slide	2		7388	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs			·	
2	Add Magellan to usage in header per ECN 4	582			-


36Z MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

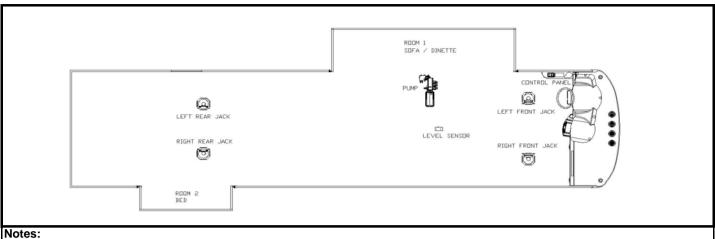

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8307				
Pump	6-Function, 2 Rooms & Jacks	1		7243BR				
Jack	12,000 lbs, 16" Stroke	4		7214	Macauring from incide of			
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to			
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.			
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	the slide mechanism.			
Hose, 156	Pump to Jack, Right Front	2	White	2468				
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587				
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464				
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side			
Slide Unit	Room 1-36" Above floor slide	1		7164				
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side			
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A			
Travel Clamp	Two per Slide	N/A		HWH	N/A			
		Options						
		.						
4		Revisions	D 4 :	e ed d	1.			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Km 1, star	ting with the sch	ledule released 04/24/06.			
2	Update per Equalizer Specs	500						
3	3 Add Magellan to usage in header per ECN 4582							


34B MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

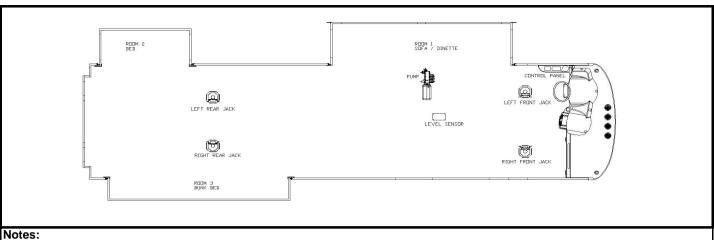

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qtv	Color	Vendor PN				
Kit	(Items listed below)	<u> </u>	Color	8323				
Pump	7-Function, 3 Rooms & Jacks	1		7301BR				
Jack	12,000 lbs, 16" Stroke	4		7214				
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of			
Control Box	Attached to bottom of structure	:		2730	firewall, this is the end			
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic			
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to			
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.			
168	Pump to Jack, Right Front	2	White	2469				
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476				
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463				
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side			
Slide Unit	Room 1-36" Above Floor Slide	1		7164				
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side			
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998				
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side			
Slide Unit	Room 3-18" Above floor slide	1		7135	•			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Travel Clamp	Two per Slide	N/A		N/A	N/A			
		Options						
		Davida!						
1		Revisions						
2	Update per Equalizer Specs	or ECN 450	22					
	Add Magellan to chart, same as Windsport p	DELECTA 450	04.					


34U MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

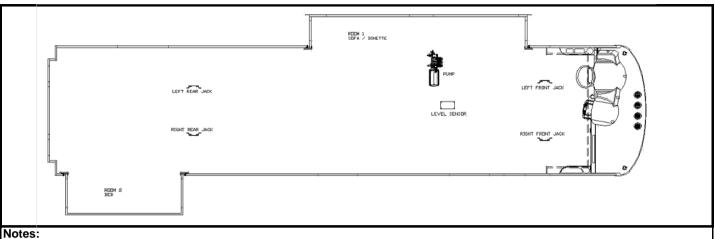

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8466	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	Inside pump compartment
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-24" Above Floor Slide	1		7369	N/A
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Passenger Side
Slide Unit	Room 2-30" Bed Slide(Lippert)	1		134998	
Hose, N/A	Pump to Room 3		Gray		
Slide Unit	Room 3-				N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Danisian			
		Revisions			


36E MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

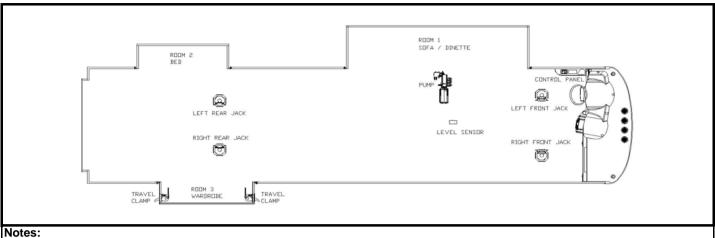

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8309	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Manager to all a f
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587	
Hose,96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998	
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Davidalar -			
1		Revisions	n Dm 1 star	ting with the sale	and the released 04/24/06
1 2	New chart for Windsport for MY2007 due to Update per Equalizer Specs	raux riat o	n Km 1, star	ung with the sch	ledule released 04/24/06.
	Opuate per Equalizer Specs				


36F MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

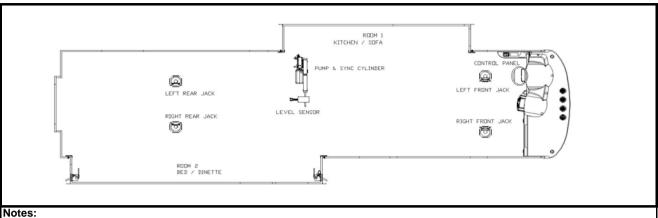

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8366	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Level Controller	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted inside pump compartment	1		7397	location of the hydraulic
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	hoses where they attach to
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	the slide mechanism.
Hose, 264	Pump to Jack, Right Front	1	White	2476	
Hose, 204	Pump to Jack, Right Rear	1	Yellow	2472	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463	
Hose, 96	Left Front Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side
Slide Unit	Room 1 - 24" above floor slide	1		7369	
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		.			
4		Revisions			
1	Update per Equalizer Specs	500			
2	Add Magellan to usage in header per ECN 4	582			
	 				
	<u>l</u>				


36R MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

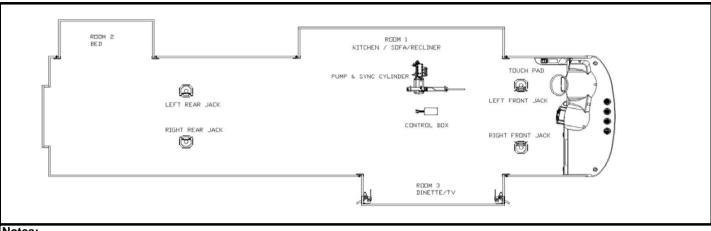

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7397	hoses where they attach to
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1- 24" Above Floor slide	1		7369	
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Slide Unit	Room 2-30" bed slide(Lippert)	1		134998	
Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Slide Unit	Room 3-24" Flush Floor slide	2		7388	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs			·	
2	Add Magellan to usage in header per ECN 4	582			-


36Z MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

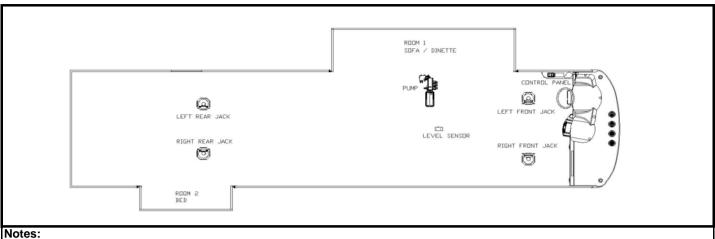

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8307			
Pump	6-Function, 2 Rooms & Jacks	1		7243BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Macauring from incide of		
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to		
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.		
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	the slide mechanism.		
Hose, 156	Pump to Jack, Right Front	2	White	2468			
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587			
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464			
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side		
Slide Unit	Room 1-36" Above floor slide	1		7164			
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side		
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998			
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	N/A		HWH	N/A		
		Options					
		.					
4		Revisions	D 4 :	e ed d	1.		
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Km 1, star	ting with the sch	ledule released 04/24/06.		
2	Update per Equalizer Specs	500					
3	Add Magellan to usage in header per ECN 4	582					


30Q WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

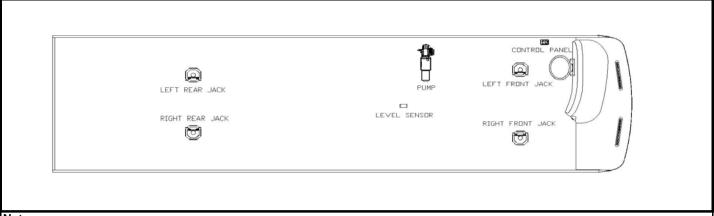

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions	D 4 :		104/04/00
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Km 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				
1					


31D WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

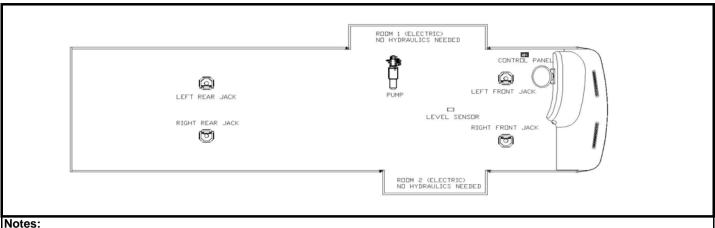

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
·	· · · · · · · · · · · · · · · · · · ·	Options	•		
		Revisions			
1	New chart for Windsport for MY2007 due to		n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs		,		


32E WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

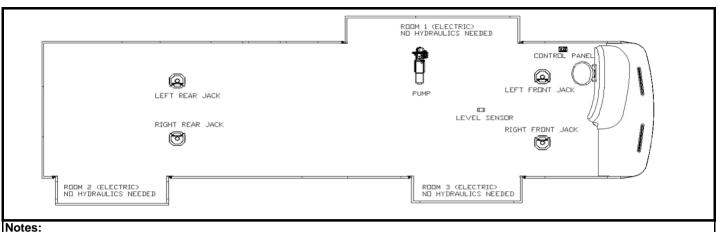

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions	D 4 :		104/04/00
1	New chart for Windsport for MY2007 due to	raux riat o	n Km 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


33T WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

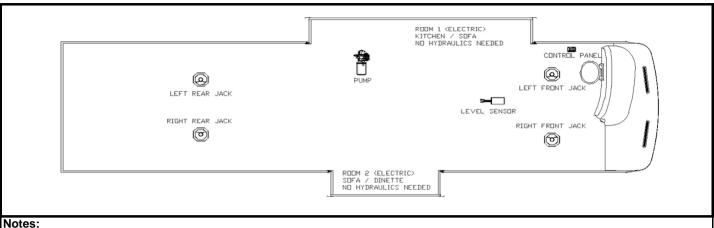

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	33.3.	8381	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 204	Pump to Jack, Left Front	2	Brown	2472	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 252	Pump to Jack, Right Front	1	White	2587	
Hose, 216	Pump to Jack, Right Rear	1	Yellow	2473	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
·	<u> </u>	Options			
<u> </u>					
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


32R WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

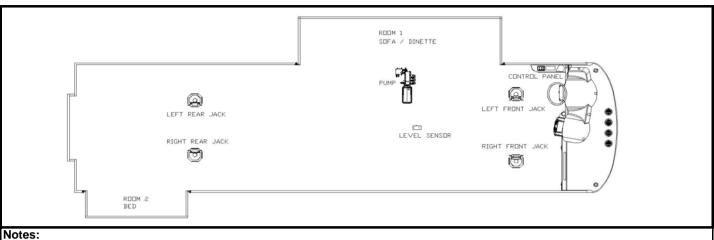

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8308	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder		N/A	<u> </u>	N/A	hoses where they attach to
Hose, 144	Mounted behind pump compartment Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 144 Hose, 240	Pump to Jack, Left Front Pump to Jack, Left Rear	2		2475	the slide mechanism.
	·	1	Orange White	2470	
Hose, 180	Pump to Jack, Right Front	-			
Hose, 288	Pump to Jack, Right Rear	1	Yellow	2478	
Hose, 96	Left Front Jack, Right Front Jack	1	White	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yellow	2463	la sida accessa a consente a con
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	310 / Passenger Side
Slide Unit	Room 2-30" Bed Slide (Lippert)	1		134998	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	edule released 04/24/06.
2	Update per Equalizer Specs				


34B WINDSPORT/MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

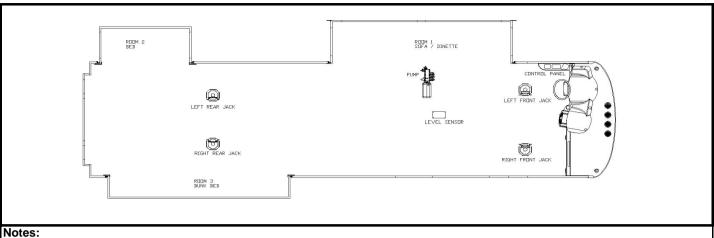

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Manager to the state of
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yellow	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Davisiers			
1	Update per Equalizer Specs	Revisions			
2	Add Magellan to chart, same as Windsport	or ECN 459	22		
	The magenan to chart, same as windsport p	DEL LON 430	<i>)</i>		
					_


34Y WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

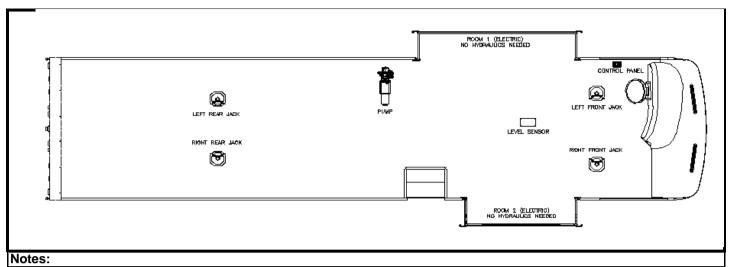

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	Measuring from back of
Jack	12,000 lbs, 16" Stroke	4		7214	cab floor, this is the end
Touch Pad	Located to the left of the drivers seat	1		2318	location of the hydraulic
Control Box	Attached to bottom of structure	1		2730	•
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	1	White	2473	
Hose, 180	Pump to Jack, Right Rear	1	Yellow	2470	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
		Revisions	5		
1	Update per Equalizer Specs				


36E WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

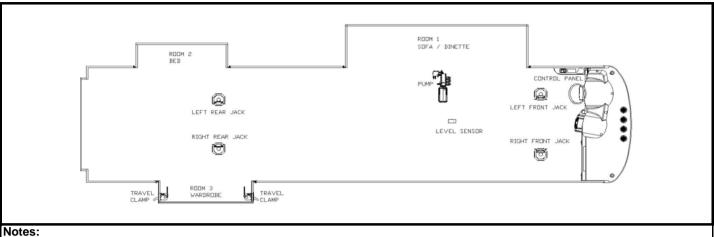

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	COIOI	8309	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the left of the drivers seat			2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587	
Hose,96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998	
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to		n Rm 1 start	ting with the sch	pedule released 04/24/06
2	Update per Equalizer Specs	i dux i idi U	ii i i i , stai	ang with the son	TOTAL TOTAL SECTION 12-1/00.
	Openio per Equalizar Openio				
L					


36F WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

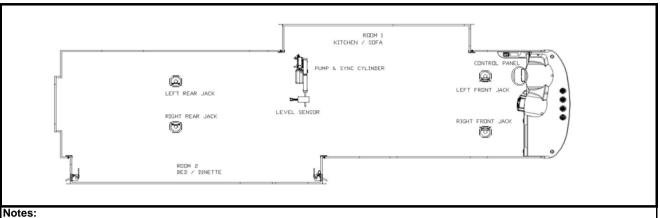

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8366	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Level Controller	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted inside pump compartment	1		7397	location of the hydraulic
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	hoses where they attach to
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	the slide mechanism.
Hose, 264	Pump to Jack, Right Front	1	White	2476	
Hose, 204	Pump to Jack, Right Rear	1	Yellow	2472	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463	
Hose, 96	Left Front Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side
Slide Unit	Room 1 - 24" above floor slide	1		7369	
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		.			
4		Revisions			
1	Update per Equalizer Specs	500			
2	Add Magellan to usage in header per ECN 4	582			
	 				
	<u>l</u>				


36R WINDSPORT/MAGELLAN (22.5) TIRESEQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

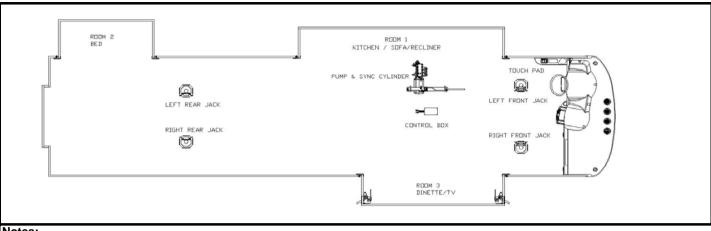

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8342	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7397	hoses where they attach to
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1- 24" Above Floor slide	1		7369	
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side
Slide Unit	Room 2-30" bed slide(Lippert)	1		134998	
Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side
Slide Unit	Room 3-24" Flush Floor slide	2		7388	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Revisions			
1	Update per Equalizer Specs				
2	Add Magellan to usage in header per ECN 4	582			


36Z WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

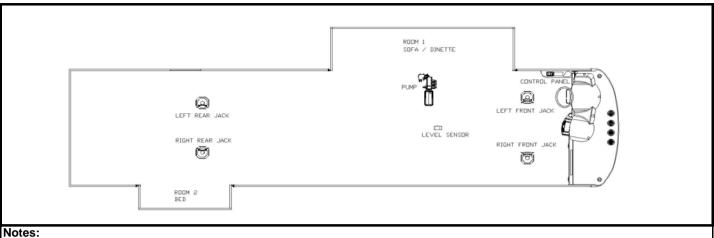

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8307			
Pump	6-Function, 2 Rooms & Jacks	1		7243BR			
Jack	12,000 lbs, 16" Stroke	4		7214	Manageria a francisco de		
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of		
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end		
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic		
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	hoses where they attach to the slide mechanism.		
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	the slide mechanism.		
Hose, 156	Pump to Jack, Right Front	2	White	2468			
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587			
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464			
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side		
Slide Unit	Room 1-36" Above floor slide	1		7164			
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side		
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998			
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A		
Travel Clamp	Two per Slide	N/A		HWH	N/A		
		Options					
		D! !					
4		Revisions	n Dan 4 nt	ا داه ماهند، ده داه			
<u>1</u> 2	New chart for Windsport for MY2007 due to	raux Flat 0	n Km 1, star	ung with the scr	iedule released 04/24/06.		
3	Update per Equalizer Specs Add Magellan to usage in header per ECN 4	E02					
3	Aud magelian to usage in neader per ECN 4	:ე0∠					


30Q WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

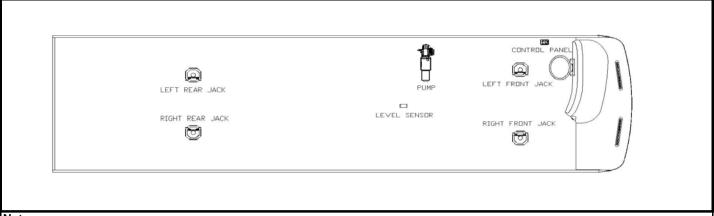

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
·		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				
}					


31D WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

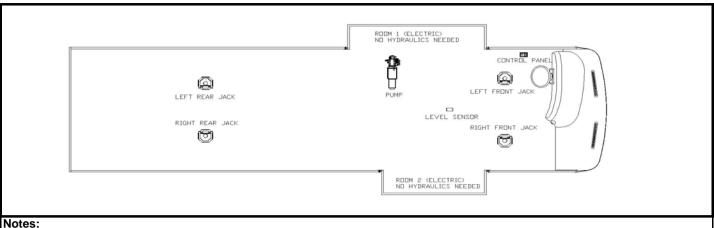

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
		Options			
		Revisions	- D 4 1	Caracadda da a	- dula rala d 04/04/00
1	New chart for Windsport for MY2007 due to	raux Flat o	n Km 1, star	ting with the sch	neaule released 04/24/06.
2	Update per Equalizer Specs				


32E WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

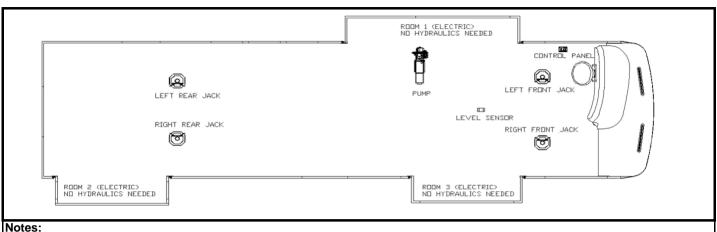

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 180	Pump to Jack, Right Front	1	White	2470	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to sync cylinder	N/A		N/A	
Hose, N/A	Sync cylinder to front slide, Room 1	N/A		N/A	
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A		N/A	
Hose, N/A	Pump to Room 1	N/A		N/A	
Hose, N/A	Pump to Room 2	N/A		N/A	
Hose, N/A	Pump to Room 3	N/A		N/A	
Hose, N/A	Pump to Room 4	N/A		N/A	
Hose, N/A	Pump to Generator Slide	N/A		N/A	
Travel Clamp	Two per Slide	N/A		N/A	
·		Options			
		Povisions.			
1	New chart for Windsport for MY2007 due to	Revisions	n Pm 1 stor	ting with the set	pedula released 04/24/06
2	Update per Equalizer Specs	raux rial (iii Kiii I, Stai	ung with the Str	ieuule 1818a58u 04/24/00.
	Opuate per Equalizer Specs				


33T WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

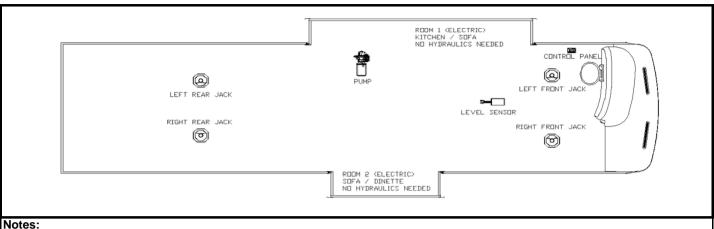

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	33.5.	8381	
Pump	4-Function, Jacks	1		7239BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 204	Pump to Jack, Left Front	2	Brown	2472	the slide mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 252	Pump to Jack, Right Front	1	White	2587	
Hose, 216	Pump to Jack, Right Rear	1	Yellow	2473	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
·		Options			
		Revisions			
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				
					_


32R WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

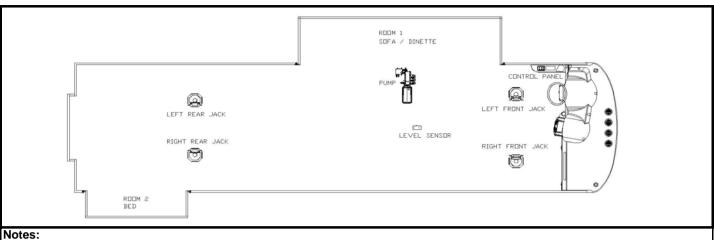

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN					
Kit	(Items listed below)	1		8308					
Pump	6-Function, 2 Rooms & Jacks	1		7243BR					
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of				
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end				
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic				
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to				
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.				
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475					
Hose, 180	Pump to Jack, Right Front	1	White	2470					
Hose, 288	Pump to Jack, Right Rear	1	Yellow	2478					
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463					
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463					
Hose, N/A	Pump to sync cylinder	N/A	Green	N/A	Inside pump compartment				
Hose, N/A	Sync cylinder to front slide, Room 1	N/A	Green	N/A	N/A				
Hose, N/A	Sync cylinder to rear slide, Room 1	N/A	Green	N/A	N/A				
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side				
Slide Unit	Room 1-36" Above floor slide	1		7164					
Hose, 372	Pump to Room 2	2	Purple	2481	310 / Passenger Side				
Slide Unit	Room 2-30" Bed Slide (Lippert)	1		134998					
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A				
Slide Unit									
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A				
Slide Unit									
Travel Clamp	Two per Slide	N/A		HWH	N/A				
		Options							
		- parente							
		Revisions							
1	New chart for Windsport for MY2007 due to	Faux Flat o	n Rm 1, star	ting with the sch	nedule released 04/24/06.				
2	Update per Equalizer Specs								


34B WINDSPORT/MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

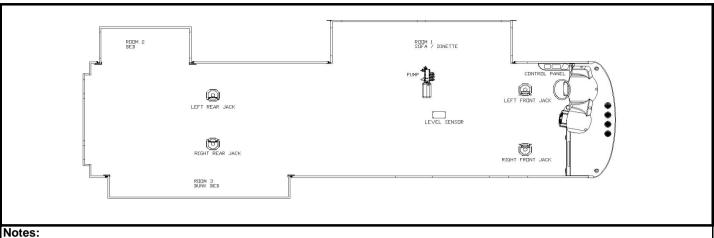

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Manager to all a f
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 372	Pump to Room 3	2	Gray	2481	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Davidalay -			
1		Revisions			
1 2	Update per Equalizer Specs Add Magellan to chart, same as Windsport p	or ECN 450	22		
	Aud Magellan to chart, same as Windsport μ	DELECTA 450	04.		


34U WINDSPORT/MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) **STANDARD ON THIS UNIT**

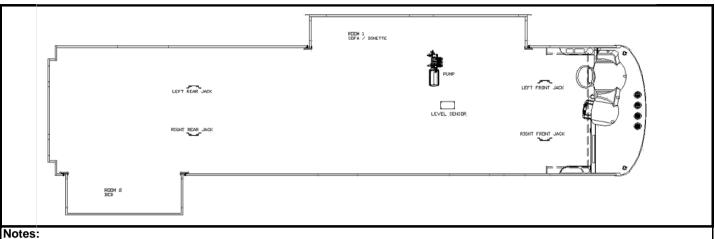

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8466	
Pump	6-Function, 2 Rooms & Jacks	1		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	Inside pump compartment
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	N/A
Hose, 372	Pump to Room 2	2	Purple	2481	347 / Passenger Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose, N/A	Pump to Room 3		Gray		
Slide Unit	Room 3-				N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Revisions			
	I	Kevisions			


34Y WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

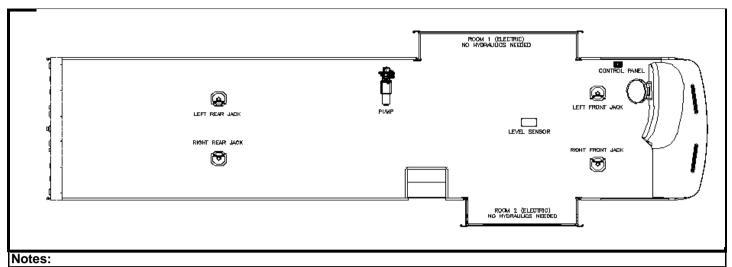

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8365	
Pump	4-Function, Jacks Only	1		7239BR	Measuring from back of
Jack	12,000 lbs, 16" Stroke	4		7214	cab floor, this is the end
Touch Pad	Located to the left of the drivers seat	1		2318	location of the hydraulic
Control Box	Attached to bottom of structure	11		2730	hoses where they attach to
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	the slide mechanism.
Hose, 180	Pump to Jack, Left Front	2	Brown	2470	the shae mechanism.
Hose, 180	Pump to Jack, Left Rear	2	Orange	2470	
Hose, 216	Pump to Jack, Right Front	1	White	2473	
Hose, 180	Pump to Jack, Right Rear	1	Yellow	2470	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, N/A	Pump to Flow Divider	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	N/A	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
		Revisions	5	-	
1	Update per Equalizer Specs				
	· · ·				
				*	


36E WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

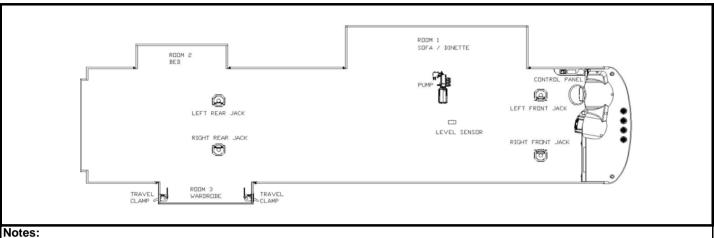

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8309	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Macauring from incide of
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	hoses where they attach to the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587	
Hose,96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Drivers Side
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998	
Hose w/90, 372	Pump to Room 3	2	Gray	2481	319 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	2		HWH	N/A
		Options			
		Revisions	D 4 :		1.
1	New chart for Windsport for MY2007 due to	raux riat o	n Km 1, star	ting with the sch	nedule released 04/24/06.
2	Update per Equalizer Specs				


36F WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

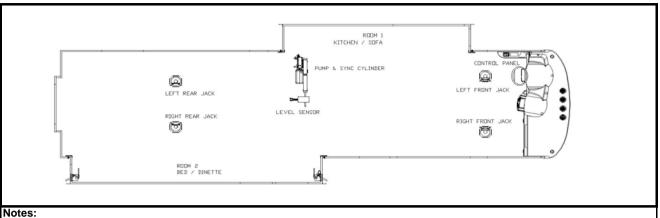

- Jacks mount in two different locations on bracket depending on tire size of chassis.
 a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8366				
Pump	6-Function, 2 Rooms & Jacks	1		7243BR				
Jack	12,000 lbs, 16" Stroke	4		7214				
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of			
Level Controller	Attached to bottom of structure	1		2730	firewall, this is the end			
Sync Cylinder	Mounted inside pump compartment	1		7397	location of the hydraulic			
Hose, 228	Pump to Jack, Left Front	2	Brown	2474	hoses where they attach to			
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	the slide mechanism.			
Hose, 264	Pump to Jack, Right Front	1	White	2476				
Hose, 204	Pump to Jack, Right Rear	1	Yellow	2472				
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463				
Hose, 96	Left Front Jack, Right Rear Jack	1	Yel/Ora.	2463				
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side			
Slide Unit	Room 1 - 24" above floor slide	1		7369				
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment			
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side			
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side			
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Travel Clamp	Two per Slide	2		HWH	N/A			
		Options						
		Revisions						
1		Revisions						
1 2	Update per Equalizer Specs Add Magellan to usage in header per ECN 4	592						
	Thus mayenan to usage in header per ECN 4	J02						
	I							


36R WINDSPORT/MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

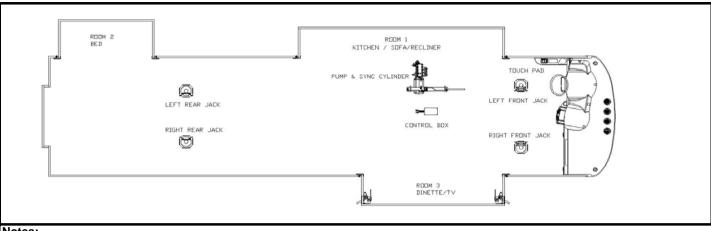

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for room #3 require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8342				
Pump	7-Function, 3 Rooms & Jacks	1		7301BR				
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind pump compartment	1		7397	hoses where they attach to			
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.			
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.			
Hose, 168	Pump to Jack, Right Front	2	White	2469				
Hose, 240	Pump to Jack, Right Rear	1	Yellow	2475				
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463				
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side			
Slide Unit	Room 1- 24" Above Floor slide	1		7369				
Hose, 420	Pump to Room 2	2	Purple	2485	335 / Drivers Side			
Slide Unit	Room 2-30" bed slide(Lippert)	1		134998				
Hose, 36	Pump to sync cylinder	2	Gray	2458	Inside pump compartment			
Hose, 120	Sync cylinder to front slide, Room 3	2	Gray	2465	90 / Passenger Side			
Hose, 120	Sync cylinder to rear slide, Room 3	2	Gray	2465	145 / Passenger Side			
Slide Unit	Room 3-24" Flush Floor slide	2		7388				
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Travel Clamp	Two per Slide	2		HWH	N/A			
		Options						
	Revisions							
1	Update per Equalizer Specs							
2	Add Magellan to usage in header per ECN 4	582			-			


36Z WINDSPORT/MAGELLAN (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

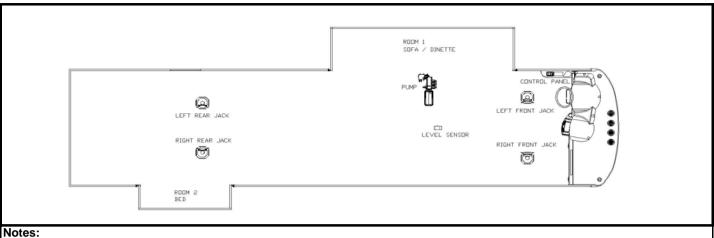

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8307				
Pump	6-Function, 2 Rooms & Jacks	1		7243BR				
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to			
Hose, 120	Pump to Jack, Left Front	2	Brown	2465	the slide mechanism.			
Hose, 228	Pump to Jack, Left Rear	2	Orange	2474	the slide mechanism.			
Hose, 156	Pump to Jack, Right Front	2	White	2468				
Hose, 252	Pump to Jack, Right Rear	1	Yellow	2587				
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464				
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side			
Slide Unit	Room 1-36" Above floor slide	1		7164				
Hose, 372	Pump to Room 2	2	Purple	2481	319 / Passenger Side			
Slide Unit	Room 2-30" Bed slide(Lippert)	1		134998				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A			
Travel Clamp	Two per Slide	N/A		HWH	N/A			
		Options						
4		Revisions	D 4 :		1.1.1.1.1.0.4/0.4/0.0			
1	New chart for Windsport for MY2007 due to	raux riat o	n Km 1, star	ting with the sch	nedule released 04/24/06.			
2	Update per Equalizer Specs	500						
3	Add Magellan to usage in header per ECN 4582							


38D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

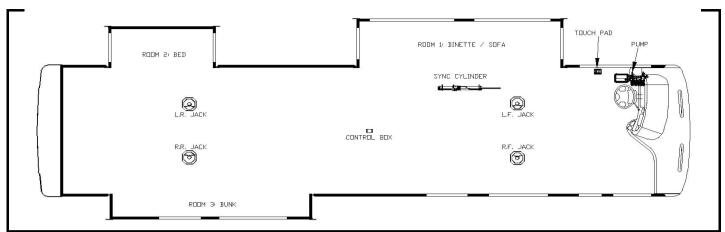

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8347	1
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	_
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to the slide mechanism.
Hose, 384	Pump to Jack, Left Rear	2	Orange	2482	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	1	Yellow	2483	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	196 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7523	
Hose, 444	Pump to Room 2	2	Purple	2487	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 468	Pump to Room 3	2	Gray	2489	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		•			
		Revisions			
1					


38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

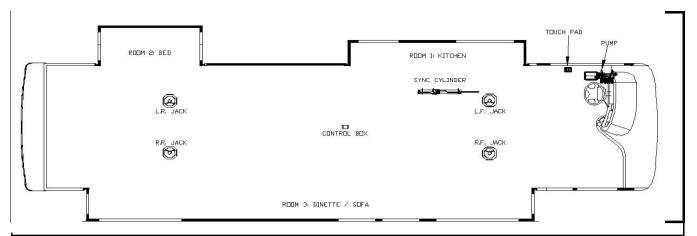

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8350	i
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 420	Pump to Jack, Left Rear	2	Orange	2485	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 420	Pump to Jack, Right Rear	1	Yellow	2485	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Passenger side
Hose w90, 444	Sync cylinder to rear slide, Room 3	2	Gray	2487	350 /Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	
Hose, 516	Pump to Room 2	2	Purple	2491	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
					_
		Revisions			
1 1		IVEAIDIDII2			
<u>'</u>					


40J Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

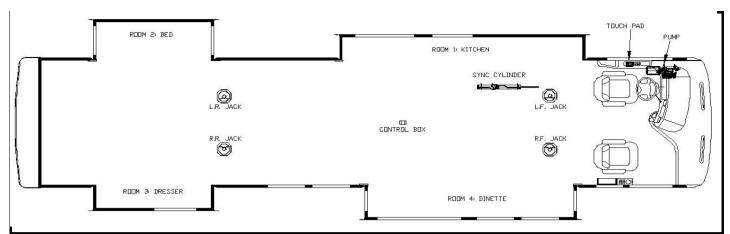

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8421	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1					


40K Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

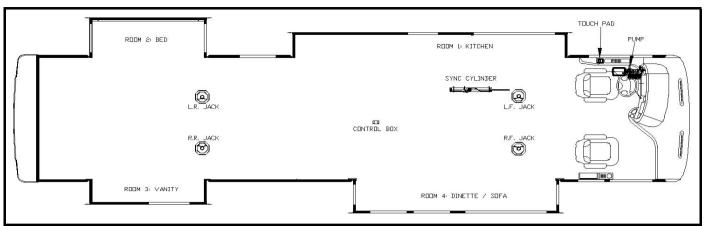

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8418	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1					
<u>'</u>					


42A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

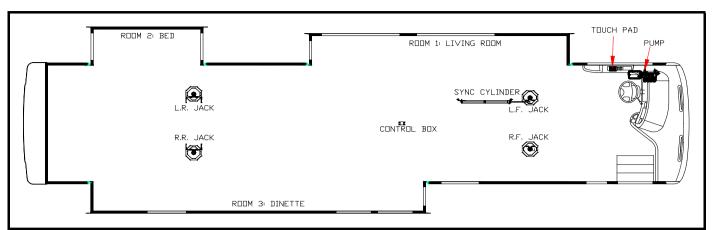

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8373	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1					


42B Presidio **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

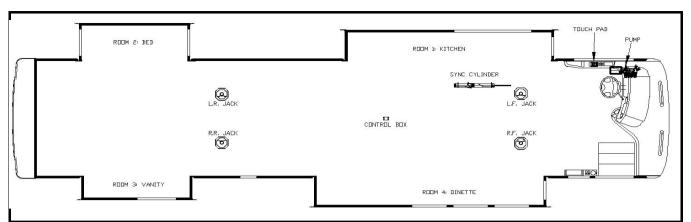

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full let3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows. Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Kit	Item, Length	Description / Location	Qty	Color	Vendor PN	
Jack		(Items listed below)	1		8379	1
Touch Pad	Pump	8-Function, 4 Rooms & Jacks	1		7302BR	1
Control Box	Jack	17,000 lbs, 18" Stroke	4		7134	Magazzina from incide of
Control Box Attached to bottom of structure 1	Touch Pad	Located to the left of the drivers seat	1		2318	_
Mounts of the Note 144 Pump to Jack, Left Front 2 Brown 2467	Control Box	Attached to bottom of structure	1		2730	
Hose, 408	Sync Cylinder	Mounted behind LP tank	2		7397	
Hose, 144	Hose, 144	Pump to Jack, Left Front	2	Brown	2467	•
Hose, 408	Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	the slide mechanism.
Hose, 108	Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 168	Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	1
Hose w90, 168	Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose w90, 168	Hose, 168	Pump to synchronizing cylinder		Green	2469	Mounts to bracket on structure
Slide Unit		Sync cylinder to front slide, Room 1		Green	2469	115 / Drivers side
Hose, 516	Hose w90, 168			Green		205 / Drivers side
Slide Unit Room 2 - 30" Bed slide (Lippert) 1 134998 Hose w90, 516 Pump to Room 3 2 Gray 2491 404 / Passenger side Slide Unit Room 3 - 18" above floor slide 1 7135 Hose, 168 Pump to synchronizing cylinder 2 Red 2469 Mounts to bracket on structure Hose w90, 288 Sync cylinder to front slide, Room 4 2 Red 2478 115 / Passenger side Hose w90, 288 Sync cylinder to rear slide, Room 4 2 Red 2478 254 / Passenger side Slide Unit Room 4 - 24" flush floor slide (angled) 2 7388 Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions	Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose w90, 516 Slide Unit Room 3 - 18" above floor slide Hose, 168 Pump to synchronizing cylinder Hose w90, 288 Pump to synchronizing cylinder Pusse w90, 288 Pump to synchronizing cylinder Pusse w90, 288 Pusse w90, 288 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide, Room 4 Pusse w90, 288 Sync cylinder to rear slide N/A N/A N/A N/A N/A N/A Travel Clamp (two per slide, except the bed slide) Options Revisions	Hose, 516		2	Purple	2491	420 / Drivers Side
Slide Unit Room 3 - 18" above floor slide 1 7135 Hose, 168 Pump to synchronizing cylinder 2 Red 2469 Mounts to bracket on structure Hose w90, 288 Sync cylinder to front slide, Room 4 2 Red 2478 115 / Passenger side Hose w90, 288 Sync cylinder to rear slide, Room 4 2 Red 2478 254 / Passenger side Slide Unit Room 4 - 24" flush floor slide (angled) 2 7388 Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions						
Hose, 168 Pump to synchronizing cylinder 2 Red 2469 Mounts to bracket on structure Hose w90, 288 Sync cylinder to front slide, Room 4 2 Red 2478 115 / Passenger side Hose w90, 288 Sync cylinder to rear slide, Room 4 2 Red 2478 254 / Passenger side Slide Unit Room 4 - 24" flush floor slide (angled) 2 7388 Pump to Generator Slide N/A N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions				Gray		404 / Passenger side
Hose w90, 288 Sync cylinder to front slide, Room 4 2 Red 2478 115 / Passenger side Hose w90, 288 Sync cylinder to rear slide, Room 4 2 Red 2478 254 / Passenger side Slide Unit Room 4 - 24" flush floor slide (angled) 2 7388 Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions						
Hose w90, 288 Sync cylinder to rear slide, Room 4 2 Red 2478 254 / Passenger side Slide Unit Room 4 - 24" flush floor slide (angled) 2 7388 Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions	Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Slide Unit Room 4 - 24" flush floor slide (angled) 2 7388 Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions						
Pump to Generator Slide N/A N/A Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions	Hose w90, 288			Red		254 / Passenger side
Travel Clamp (two per slide, except the bed slide) 6 HWH N/A Options Revisions	Slide Unit	\ 0 /			7388	
Options Revisions						
Revisions	Travel Clamp	(two per slide, except the bed slide)			HWH	N/A
			Options			
				ļ		
				-		
			Revisions			
•	1		1041310113			


38D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

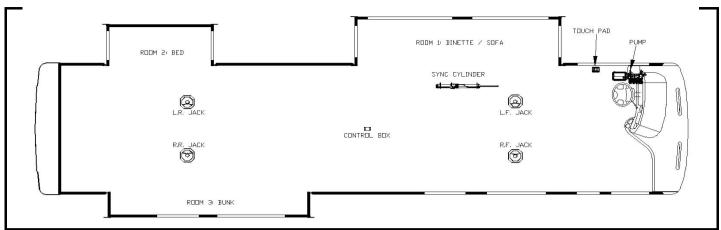

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8347				
Pump	7-Function, 3 Rooms & Jacks	1		7319BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7387	-			
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to the slide mechanism.			
Hose, 384	Pump to Jack, Left Rear	2	Orange	2482	the slide mechanism.			
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 396	Pump to Jack, Right Rear	1	Yellow	2483				
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464				
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure			
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side			
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Slide Unit	Room 1 - 36" flush floor slide	2		7523				
Hose, 444	Pump to Room 2	2	Purple	2487	325 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 468	Pump to Room 3	2	Gray	2489	355 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1		7135				
	Pump to Generator Slide	N/A						
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A			
		Options						
4	Revisions 1 4-7-08, Corrected part number for 36" room, requires angled 36" in-floor mechanism #7523							
1				loor mechanism	1 #/523			
2	4-23-08, Updated to match EQ's new way of plumbing jacks.							


38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

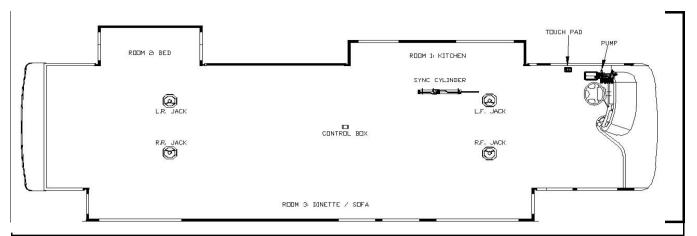

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Manageria of the state of
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 420	Pump to Jack, Left Rear	2	Orange	2485	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 420	Pump to Jack, Right Rear	1	Yellow	2485	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Passenger Side
Hose w90, 444	Sync cylinder to rear slide, Room 3	2	Gray	2487	350 / Passenger Side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	
Hose, 516	Pump to Room 2	2	Purple	2491	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
					T
		Revisions	<u> </u>		L
1	4-23-08, Updated to match EQ's new way of		acks		
'	- 20 00, opuated to match EQ3 new way or	prairibility J	uona.		


40J Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

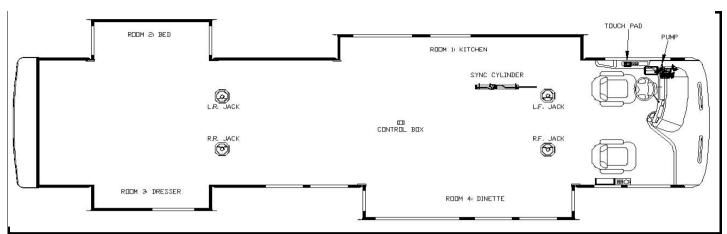

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8421			
Pump	8-Function, 4 Rooms & Jacks	1		7302BR			
Jack	17,000 lbs, 18" Stroke	4		7134			
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of		
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end		
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484			
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464			
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure		
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side		
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side		
Slide Unit	Room 1 - 18" above floor slide	2		7135			
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side		
Slide Unit	Room 3 - 18" above floor slide	1		7135			
Hoes, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure		
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side		
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side		
Slide Unit	Room 4 - 24" flush floor slide	2		7388			
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
Revisions							
1	1 4-23-08, Updated to match EQ's new way of plumbing jacks.						


40K Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

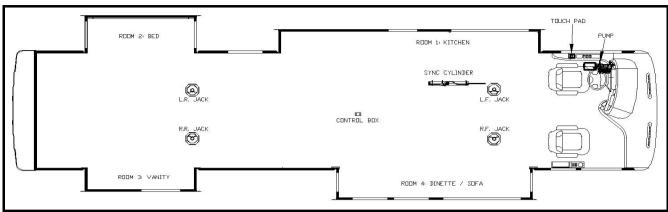

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8418				
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	1			
Jack	17,000 lbs, 18" Stroke	4		7134	1			
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of			
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end			
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.			
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484				
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484				
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464				
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure			
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side			
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side			
Slide Unit	Room 1 - 18" above floor slide	2		7135				
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	i i	134998				
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side			
Slide Unit	Room 3 - 18" above floor slide	1	j	7135	ĺ			
Hose, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure			
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side			
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side			
Slide Unit	Room 4 - 24" flush floor slide	2		7388				
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
•								
		Options						
<u> </u>								
				·				
Revisions								
1	4-23-08, Updated to match EQ's new way of	plumbing is	acks.					

42A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

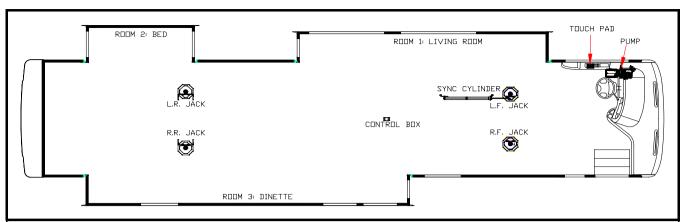


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the rank sensor.
 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 4 **20 **** baye the 90 deg fitting shipped loose. Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8373	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	-
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A

	Options								
		Revisions							
1	4-23-08, Updated to match EQ's new way o	f plumbing ja	acks.						
		•	•						
		•	•						


42B Presidio **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

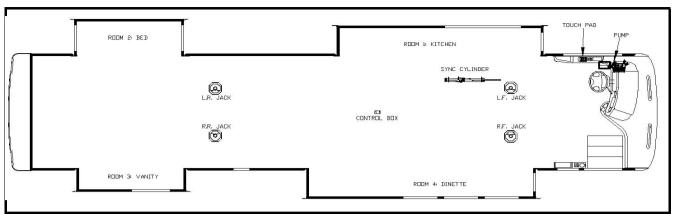

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8379	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	1
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	<u> </u>	134998	
Hose w90, 516	Pump to Room 3	2	Gray	2491	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
•	, , , , , , , , , , , , , , , , , , , ,				
		Options			
<u> </u>					
<u> </u>					
		Revisions			
1	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

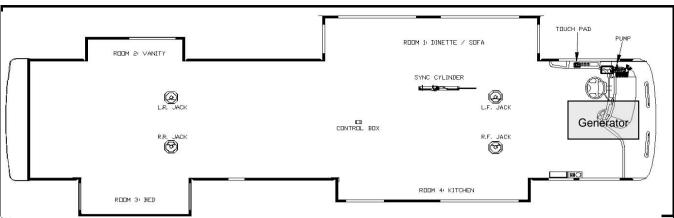

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Manageria estado at
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7387	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
Slide Unit	Room 1 - 36" flush floor slide	2		7467	
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Slide Unit	Room 2 - 18" above floor slide	1		7469	
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Daviolara			
12/6/2007		Revisions			
12/0/2007	Added slide mechanism part numbers to cha	111.			


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

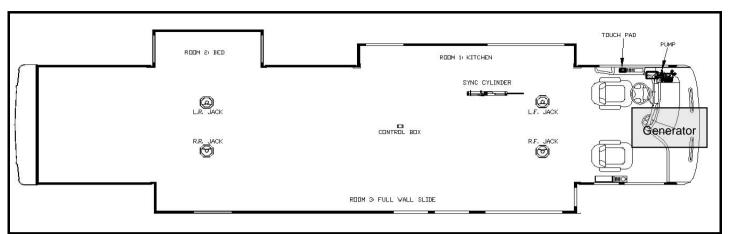

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8360				
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end			
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic			
Sync Cylinder	Mounted behind LP tank	1		7397	-			
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to			
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	the slide mechanism.			
Hose, 144	Pump to Jack, Right Front	2	White	2467				
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490				
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464				
Hose, 180	Pump to synchronizing cylinder	2	Grey	2470	Mounts to bracket on structure			
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side			
Slide Unit	Room 1 - 18" above floor slide	1		7469				
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side			
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998				
Hose w90, 288	Sync cylinder to front slide, Room 3	2	Grey	2478	90 / Passenger side			
Hose w90, 288	Sync cylinder to rear slide, Room 3	2	Grey	2478	378 / Passenger side			
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477				
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave			
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray			
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A			
		Options						
	Revisions							
1	Corrected the bed slide Vendor Part No. Wa			07 JS				
2	2 Changed Pump to Room 2 hose length from 516" to 480". 12/3/07 KK							


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

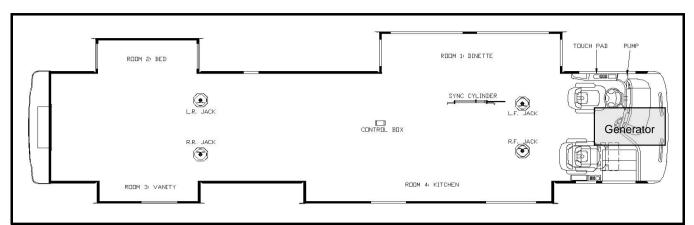

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8377	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank, Room 1	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank, Room 4	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	1
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	187 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 516	Pump to room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 456	Pump to Room 3	2	Grey	2488	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 180	Pump to synchronizing cylinder	2	Red	2470	Mounts to bracket on structure
Hose w90, 228	Sync cylinder to front slide, Room 4	2	Red	2474	135 / Passenger Side
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	220 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	2		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
	1	Options	T I		1
		Revisions			
1	Changed Pump to Room 2 hose length from	432" to 51	6". 12/	/3/07 KK	


43D Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

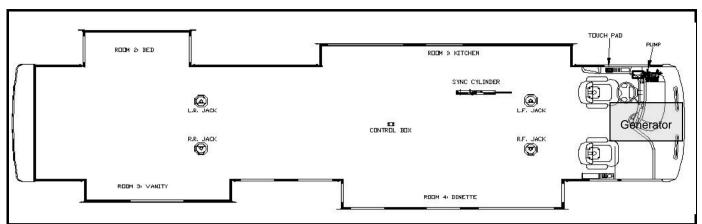

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8419	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Right Rear Jack, Left Rear Jack	1	Yel/Ora.	2464	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 204	Sync cylinder to front slide, Room 1	2	Green	2472	123 / Drivers Side
Hose w90, 204	Sync cylinder to rear slide, Room 1	2	Green	2472	210 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	123 / Passenger side
Hose w90, 216	Sync cylinder to rear slide, Room 4	2	Red	2473	210 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7477	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		<u> </u>			
		Revisions			
1					
2					
3					
4					


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

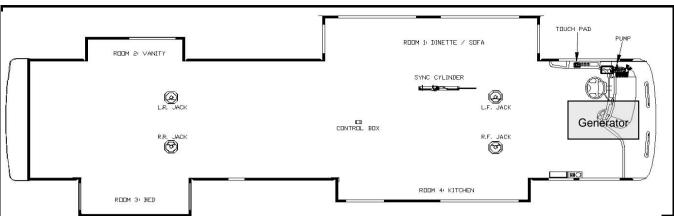

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8359	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	<u> </u>		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	the shae mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear		Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
Slide Unit	Room 1 - 36" flush floor slide	2	0.00	7467	2017 20.0 0.00
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Slide Unit	Room 2 - 18" above floor slide	1		7469	0.07 20.0 0.00
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	3 . ω _j	134998	00271 000011g01 0100
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
	(
		Options			
		•			
		Revisions			
12/6/2007	Added slide mechanism part numbers to cha				
4/23/2008	Updated to match EQ's new way of plumbing	g jacks.			
			-		


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

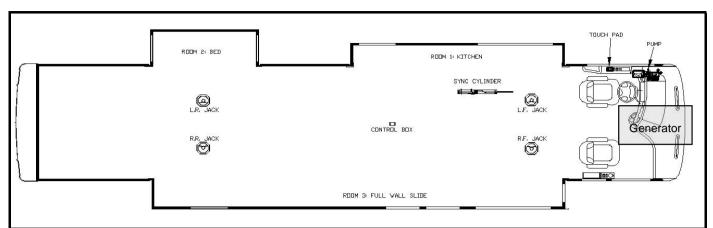

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	*
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 180	Pump to synchronizing cylinder	2	Grey	2470	Mounts to bracket on structure
Hose, 216	Pump to Room 1	2	Green	2473	165 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7469	
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 336	Sync cylinder to front slide, Room 3	2	Grey	2535	90 / Passenger side
Hose w90, 336	Sync cylinder to rear slide, Room 3	2	Grey	2535	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
	On	tions/ Note	es.		
Note 1	Sync cylinder position	110110/ 11010		Rear	
	cymae pomen			11001	
		Revisions		07.10	
1	Corrected the bed slide Vendor Part No. W			-07 JS	
2	Changed Pump to Room 2 hose length from			3/07 KK	
3	4-23-08, Updated to match EQ's new way o	r plumbing j	acks.		


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

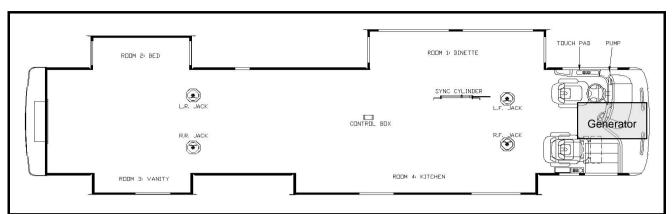

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Itana I an aith	December / Leasting	04.	Calan	Vandar DN	
Item, Length Kit	Description / Location (Items listed below)	Qty 1	Color	Vendor PN 8377	4
					4
Pump	9-Function, 4 Rooms, & Jacks 17,000 lbs, 18" Stroke	<u>1</u> 4		7464BR 7134	4
Jack Touch Pad	Located to the left of the drivers seat	<u>4</u> 1	-		Magazzina from incide of
Control Box		1	1	2318	Measuring from inside of
	Attached to bottom of structure		1	2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank, Room 1	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank, Room 4	1	-	7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	187 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 456	Pump to Room 3	2	Grey	2488	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 180	Pump to synchronizing cylinder	2	Red	2470	Mounts to bracket on structure
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	135 / Passenger Side
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	220 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	2		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		tions/ Not	es		
Note 1	Sync cylinder position			Rear	
		Revisions			
1	Changed Pump to Room 2 hose length from			/3/07 KK	
2	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		


43D Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

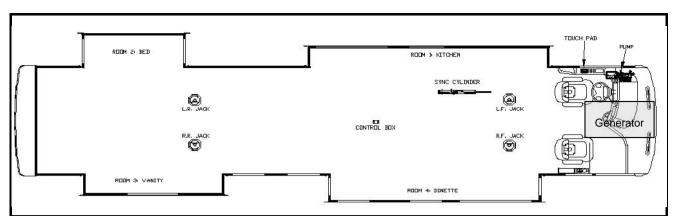

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Itom Longth	Description / Logation	Otv	Color	Vendor PN	
Item, Length Kit	Description / Location (Items listed below)	Qty 1	Color	8419	
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	
Jack	9-Function, 4 Rooms, & Jacks 17,000 lbs, 18" Stroke	<u> </u>	+	74646K 7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1	+	7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 144 Hose, 480	Pump to Jack, Left Profit Pump to Jack, Left Rear	2	Orange	2467	the slide mechanism.
•			U		-
Hose, 144	Pump to Jack, Right Front	2	White	2467	-
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 204	Sync cylinder to front slide, Room 1	2	Green	2472	123 / Drivers Side
Hose w90, 204	Sync cylinder to rear slide, Room 1	2	Green	2472	210 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	2		7469	
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	123 / Passenger side
Hose w90, 216	Sync cylinder to rear slide, Room 4	2	Red	2473	210 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7477	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		ions/ Not	es		
Note 1	Sync cylinder position			Front	
1					
<u> </u>					
	-	Revisions			
1	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		
2					<u> </u>
3					
4					


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

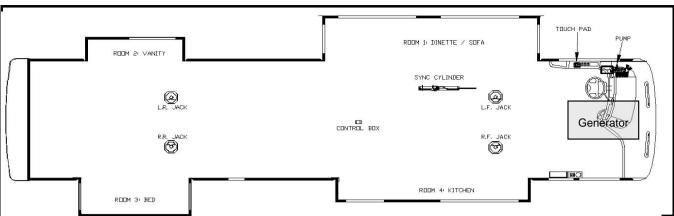

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8359	1		
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	1		
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end		
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	1		
Hose, 144	Pump to Jack, Right Front	2	White	2467	1		
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	1		
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464			
Hose, 180	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side		
Slide Unit	Room 1 - 36" flush floor slide	2		7467			
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side		
Slide Unit	Room 2 - 18" above floor slide	1		7469			
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side		
Slide Unit	Room 4 - 18" above floor slide	1		7469			
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray		
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A		
		Options					
		Davidalas					
Revisions							
12/6/2007 4/23/2008	Added slide mechanism part numbers to cha Updated to match EQ's new way of plumbing						
4/23/2008	opuated to match EQS new way of plumbing	y jacks.					
<u> </u>							


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

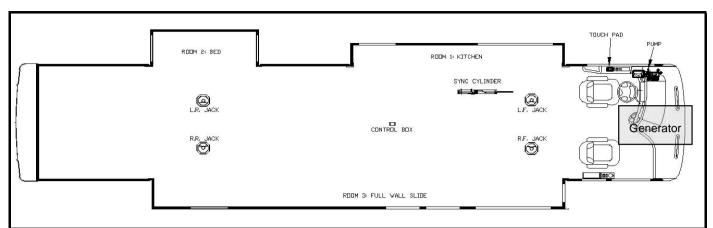

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Itam Langth	Description / Leastion	041	Color	Vandar DN			
Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8360			
Pump	8-Function, 3 Rooms, & Jacks	11		7474BR			
Jack	17,000 lbs, 18" Stroke	4		7134	Managemin a frame in aide of		
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of		
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end		
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic		
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to		
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.		
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490			
Hose, 144	Pump to Jack, Right Front	2	White	2467			
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490			
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464			
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure		
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	105 / Drivers Side		
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	200 / Drivers Side		
Slide Unit	Room 1 - 18" above floor slide	2		7469			
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side		
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998			
Hose, 180	Pump to synchronizing cylinder	2	Grey	2470	Mounts to bracket on structure		
Hose w90, 336	Sync cylinder to front slide, Room 3	2	Grey	2535	90 / Passenger side		
Hose w90, 336	Sync cylinder to rear slide, Room 3	2	Grey	2535	378 / Passenger side		
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477			
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave		
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray		
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
	Op	tions/ Not	es				
Note 1	Sync cylinder position			Rear			
		Revisions					
1	Corrected the bed slide Vendor Part No. W			07 JS			
2	Changed Pump to Room 2 hose length from			3/07 KK			
3	4-23-08, Updated to match EQ's new way o		jacks.				
4	4 Changed Room 1 to two slides-Starts with unit 3629						


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

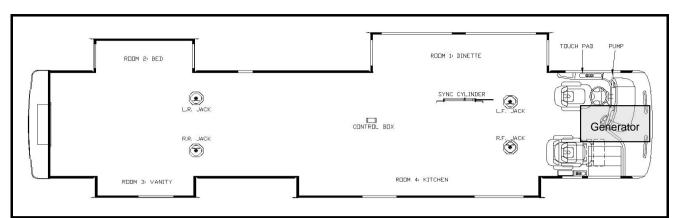

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Itana I an aith	December / Leasting	04.	Calan	Vandar DN	
Item, Length Kit	Description / Location (Items listed below)	Qty 1	Color	Vendor PN 8377	4
					4
Pump	9-Function, 4 Rooms, & Jacks 17,000 lbs, 18" Stroke	<u>1</u> 4		7464BR 7134	4
Jack Touch Pad	Located to the left of the drivers seat	<u>4</u> 1	-		Magazzina from incide of
Control Box		1	1	2318	Measuring from inside of
	Attached to bottom of structure		1	2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank, Room 1	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank, Room 4	1	-	7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	187 / Drivers Side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481	
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 456	Pump to Room 3	2	Grey	2488	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7469	
Hose, 180	Pump to synchronizing cylinder	2	Red	2470	Mounts to bracket on structure
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	135 / Passenger Side
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	220 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	2		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		tions/ Not	es		
Note 1	Sync cylinder position			Rear	
		Revisions			
1	Changed Pump to Room 2 hose length from			/3/07 KK	
2	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		


43D Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

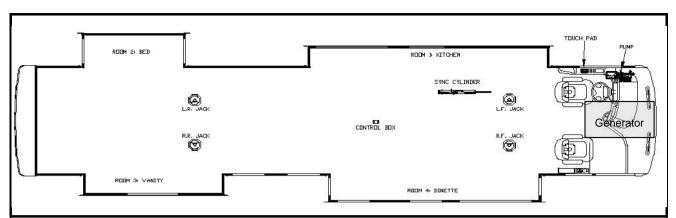

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8419	
Pump	9-Function, 4 Rooms, & Jacks	1	1	7464BR	
Jack	17,000 lbs, 18" Stroke	4		7134	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1	1	2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	the shae meenamsin.
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	1
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 204	Sync cylinder to front slide, Room 1	2	Green	2472	123 / Drivers Side
Hose w90, 204	Sync cylinder to rear slide, Room 1	2	Green	2472	210 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	2	Green	7469	2107 Drivers Side
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	Fulple	134998	408 / Drivers Side
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1	Gley	7469	400 / Fasseriger side
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	123 / Passenger side
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	210 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2	Neu	7477	210 / Fasseriger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6	Dide	HWH	N/A
Havel Clamp	(two per slide, except the bed slide)	U	1	110011	IV/A
	On	tions/ Not	28		
Note 1	Sync cylinder position	110113/ 1101		Front	
14010 1	Cyric cymraer position		1	1 10110	I
			+		
			†		
			1		
		Revisions			
1	4-23-08, Updated to match EQ's new way of		acks.		
2	, ,				
3					
4					


40G Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

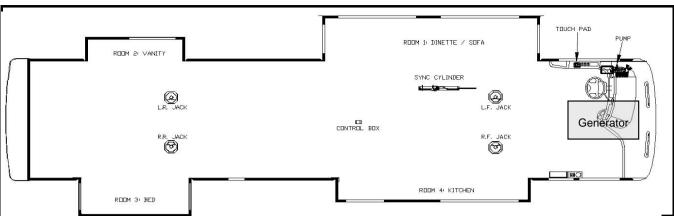

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8359	1
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	1
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	1
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2467	mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	201 / Drivers side
Slide Unit	Room 1 - 36" flush floor slide	2		7467	
Hose w90, 432	Pump to Room 2	2	Purple	2486	373 / Drivers Side
Slide Unit	Room 2 - 18" above floor slide	1		7469	
Hose, 480	Pump to Room 3	2	Gray	2490	352 / Passenger Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 228	Pump to Room 4	2	Red	2474	153 / Passenger Side
Slide Unit	Room 4 - 18" above floor slide	1		7469	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Davidalas			
40/0/0007		Revisions			
12/6/2007 4/23/2008	Added slide mechanism part numbers to cha Updated to match EQ's new way of plumbing				
4/23/2008	opuated to match EQS new way of plumbing	y jacks.			
<u> </u>					


43A Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

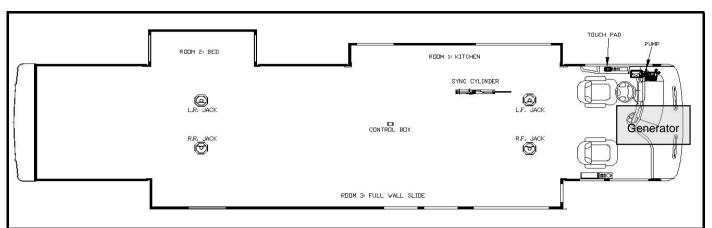

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8360	
Pump	8-Function, 3 Rooms, & Jacks	1		7474BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	105 / Drivers Side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	200 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	2		7469	
Hose w90, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 180	Pump to synchronizing cylinder	2	Grey	2470	Mounts to bracket on structure
Hose w90, 336	Sync cylinder to front slide, Room 3	2	Grey	2535	90 / Passenger side
Hose w90, 336	Sync cylinder to rear slide, Room 3	2	Grey	2535	378 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7477	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
	Opt	tions/ Not	es		
Note 1	Sync cylinder position			Front	
	F	Revisions			
1	Corrected the bed slide Vendor Part No. Wa		. 8-15-	·07 JS	
2	Changed Pump to Room 2 hose length from			3/07 KK	
3	4-23-08, Updated to match EQ's new way of				
4	Changed Room 1 to two slides-Starts with un				


43C Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

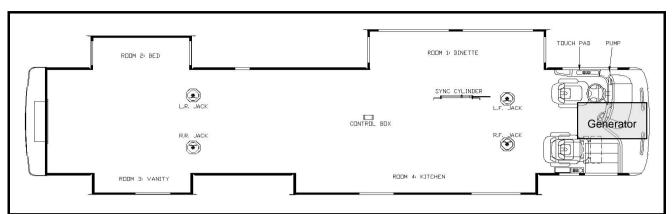

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length		Qty	Color	Vendor PN					
Kit (Description / Location Items listed below)	1	00.0.	8377					
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR					
Jack	17,000 lbs, 18" Stroke	4		7134					
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of				
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end				
Sync Cylinder	Mounted behind LP tank, Room 1	1		7387	location of the hydraulic				
Sync Cylinder	Mounted behind LP tank, Room 4	1		7511	hoses where they attach to				
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.				
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490					
Hose, 144	Pump to Jack, Right Front	2	White	2467					
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490					
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464					
Hose, 180	Pump to synchronizing cylinder	2	Green	2470	Mounts to bracket on structure				
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	99 / Drivers Side				
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	187 / Drivers Side				
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7481					
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side				
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998					
Hose w90, 456	Pump to Room 3	2	Grey	2488	408 / Passenger side				
Slide Unit	Room 3 - 18" above floor slide	1		7469					
Hose, 180	Pump to synchronizing cylinder	2	Red	2470	Mounts to bracket on structure				
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	135 / Passenger Side				
Hose w90, 228	Sync cylinder to rear slide, Room 4	2	Red	2474	220 / Passenger Side				
Slide Unit	Room 4 - 18" above floor slide	2		7469					
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray				
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A				
		tions/ Note	es						
Note 1 S	Sync cylinder position			Rear					
		Revisions							
1 10	r Changed Pump to Room 2 hose length from		6" 12	/3/07 KK					
				JOI IXIX					
	4-23-08, Updated to match EQ's new way of plumbing jacks.								


43D Mandalay EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

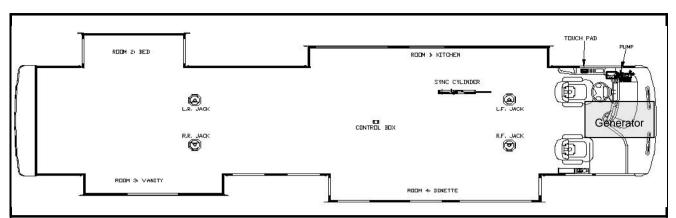

- 1) Jacks mount to chassis brackets providing 8-9 inches of ground clearance with the air bags dumped.
- 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
- 3) Hydraulic hose terminations for room #1, #3 & #4 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg. Fitting shipped loose
- 5) All in floor slides to have automatic travel lock sensor

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8419	1
Pump	9-Function, 4 Rooms, & Jacks	1		7464BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 480	Pump to Jack, Left Rear	2	Orange	2490	the shae meenamsin.
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 480	Pump to Jack, Right Rear	1	Yellow	2490	1
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	1
Hose, 144	Pump to synchronizing cylinder	2	Green	2467	Mounts to bracket on structure
Hose w90, 204	Sync cylinder to front slide, Room 1	2	Green	2472	123 / Drivers Side
Hose w90, 204	Sync cylinder to rear slide, Room 1	2	Green	2472	210 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	2	Green	7469	2107 Drivers Side
Hose, 516	Pump to Room 2	2	Purple	2491	408 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	Fulple	134998	400 / Drivers Side
Hose w90, 480	Pump to Room 3	2	Grey	2490	408 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1	Gley	7469	400 / Fasseriger side
Hose, 144	Pump to synchronizing cylinder	2	Red	2467	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	123 / Passenger side
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	210 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2	Reu	7477	210 / Fasseriger side
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6	Dide	HWH	N/A
Havel Claimp	(two per slide, except the bed slide)	0		110011	IV/A
	On	tions/ Not	28		
Note 1	Sync cylinder position	110113/ 1101		Front	
11010 1	Cyrio Cymraer pedition			11011	
			1		
			1		
		Revisions			
1	4-23-08, Updated to match EQ's new way of		acks.		
2	, ,	,			
3					
4					


32A HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

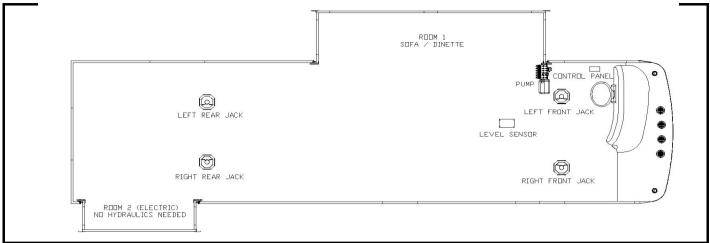

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8270	-
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from front of
Touch Pad	Located to the left of the drivers seat	1		3012	bumper, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 72	Pump to Jack, Left Front	2	Brown	2461	the slide mechanism.
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478	
Hose, 120	Pump to Jack, Right Front	1	White	2465	
Hose, 336	Pump to Jack, Right Rear	1	Yellow	2535	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	N/A
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	N/A
Hose, 120	Pump to Room 1	2	Green	2465	144 / Drivers Side (COIL AT PUMP)
Slide Unit	Room 1-36" Above floor slide (bolt-in)	1		7164B	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit	Room 2				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit	Room 3				
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit	Room 4				
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
1	Make jacks standard per ECN 6842 (11/9/09	Revisions			
	Update pump location per ECN 6935 (4-29-				
		. • /			


34B HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

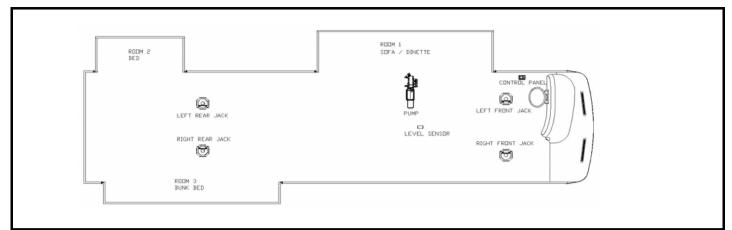

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		3012	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 384	Pump to Room 2	2	Purple	2482	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 384	Pump to Room 3	2	Gray	2482	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Davisiers			
0/1/2006		Revisions			
9/1/2006	Add 34S to 34B chart Update per Equalizer Specs				
	Opuate per Equalizer Specs				
	<u>l</u>				


34U HURRICANE (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

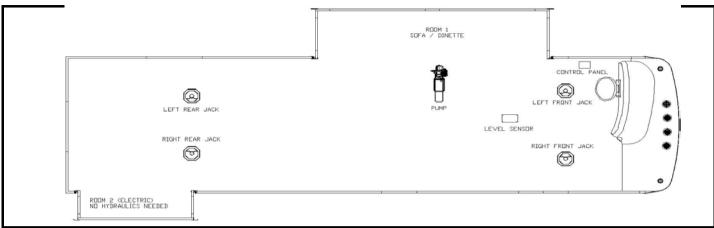

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Kit (Items listed below) Pump 6-Function, 2 Rooms & Jacks 1 7243BR Jack 12,000 lbs, 16" Stroke 4 7214 Touch Pad Located to the left of the drivers seat 1 3012 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartment N/A N/A Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 Pump to Room 3 Gray	Itam Langth	5	•		\/ I E\!	
Pump 6-Function, 2 Rooms & Jacks 1 7243BR Jack 12,000 lbs, 16" Stroke 4 7214 Touch Pad Located to the left of the drivers seat 1 3012 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear 1 Yellow 2476 Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 Pump to Room 3 Gray		Description / Location	Qty	Color	Vendor PN	
Jack 12,000 lbs, 16" Stroke 4 7214 Touch Pad Located to the left of the drivers seat 1 3012 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartment Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray			-			
Touch Pad Located to the left of the drivers seat 1 3012 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartment Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 Pump to Room 3 Gray firewall, this is the enclocation of the hydraul hoses where they attack the slide mechanism.						
Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartment Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 Pump to Room 3 Gray Iocation of the hydraul hoses where they attack the slide mechanism.						
Sync Cylinder Mounted behind pump compartment N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 the slide mechanism Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartment Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray						•
Hose, 144			•			
Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartme Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray						•
Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartmet Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray						the slide mechanism.
Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartmet 1 Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side 127 / Drivers Side 1 Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Pump to Room 2 2 Purple 2482 347 / Passenger Side 134998 Hose, N/A Pump to Room 3 Gray	Hose, 240	Pump to Jack, Left Rear		Orange	2475	
Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compartment Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray		, , ,	2			
Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Side Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray	Hose, 264		1			
Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray	Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	Inside pump compartment
Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger Side Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray	Hose, 36		2	Green	2458	127 / Drivers Side
Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998 Hose, N/A Pump to Room 3 Gray	Slide Unit	Room 1-36" Above Floor Slide			7164	-
Hose, N/A Pump to Room 3 Gray	Hose, 384	Pump to Room 2	2	Purple	2482	347 / Passenger Side
	Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Clide Unit Doom 2	Hose, N/A	Pump to Room 3		Gray		
Silde Offic ROOM 3- IV/A	Slide Unit	Room 3-				N/A
Hose, N/A Pump to Room 4 N/A Red N/A N/A	Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp Two per Slide N/A N/A N/A	Travel Clamp	Two per Slide	N/A		N/A	N/A
Options			Options			
Revisions			Revisions			


32A HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

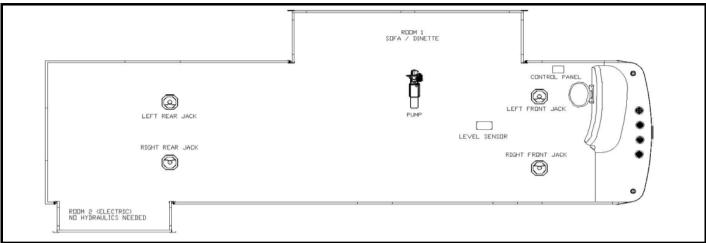

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8270	
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from front of
Touch Pad	Located to the left of the drivers seat	1		2318	bumper, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 192	Pump to Jack, Right Front	1	White	2471	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	N/A
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	N/A
Hose, 36	Pump to Room 1	2	Green	2458	144 / Drivers Side (COIL AT PUMP)
Slide Unit	Room 1-36" Above floor slide (bolt-in)	1		7164B	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit	Room 2				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit	Room 3				
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit	Room 4				
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			


34B HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

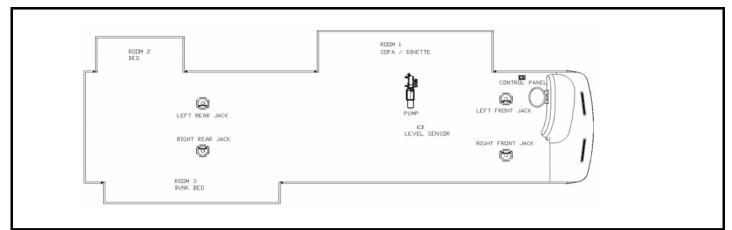

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Itama Lamarth	December / Leasting	04	Color	Vander DN	
Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8323	
Pump	7-Function, 3 Rooms, Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 384	Pump to Room 2	2	Purple	2482	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 384	Pump to Room 3	2	Gray	2482	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Revisions			
9/1/2006	Add 34S to 34B chart				
2	Update per Equalizer Specs			<u> </u>	


34U HURRICANE (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

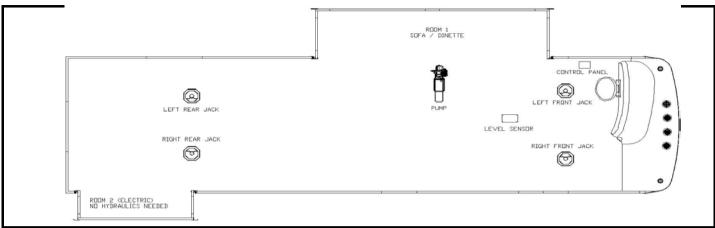

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, LengthDescription / LocationQtyColorVendor PNKit(Items listed below)18466Pump6-Function, 2 Rooms & Jacks17243BRJack12,000 lbs, 16" Stroke47214Touch PadLocated to the left of the drivers seat12318Control BoxAttached to bottom of structure12730Sync CylinderMounted behind pump compartmentN/AN/AHose, 144Pump to Jack, Left Front2Brown2467Hose, 240Pump to Jack, Left Rear2Orange2475Hose, 168Pump to Jack, Right Front2White2469Hose, 264Pump to Jack, Right Rear1Yellow2476Hose, 96Left Rear Jack, Right Rear Jack1Yel/Ora.2463Inside pump compartHose, 36Pump to Room 12Green2458127 / Drivers SidSlide UnitRoom 1-36" Above Floor Slide17164N/A	end ulic ch to m.
Pump 6-Function, 2 Rooms & Jacks 1 7243BR Jack 12,000 lbs, 16" Stroke 4 7214 Touch Pad Located to the left of the drivers seat 1 2318 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compart Hose, 36	end ulic ch to m.
Jack12,000 lbs, 16" Stroke47214Measuring from insiTouch PadLocated to the left of the drivers seat12318firewall, this is theControl BoxAttached to bottom of structure12730location of the hydrSync CylinderMounted behind pump compartmentN/AN/Ahoses where they attHose, 144Pump to Jack, Left Front2Brown2467the slide mechanisHose, 240Pump to Jack, Left Rear2Orange2475the slide mechanisHose, 168Pump to Jack, Right Front2White2469Hose, 264Pump to Jack, Right Rear1Yellow2476Hose, 96Left Rear Jack, Right Rear Jack1Yel/Ora.2463Inside pump compartHose, 36Pump to Room 12Green2458127 / Drivers Sid	end ulic ch to m.
Touch Pad Located to the left of the drivers seat 1 2318 Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A N/A Hose, 144 Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compart Hose, 36 Pump to Room 1 2 Green 2458 firewall, this is the location of the hydr hoses where they att the slide mechanism of the hydr hoses where they att the slide mechanism of the slide mechanism of the hydr hoses where they att the slide mechanism of the hydr hos	end ulic ch to m.
Control Box Attached to bottom of structure 1 2730 Sync Cylinder Mounted behind pump compartment N/A N/A N/A Hose, 144 Pump to Jack, Left Front 2 Brown 2467 Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compart Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Sid	ulic ch to m.
Sync CylinderMounted behind pump compartmentN/AN/Ahoses where they attHose, 144Pump to Jack, Left Front2Brown2467Hose, 240Pump to Jack, Left Rear2Orange2475Hose, 168Pump to Jack, Right Front2White2469Hose, 264Pump to Jack, Right Rear1Yellow2476Hose, 96Left Rear Jack, Right Rear Jack1Yel/Ora.2463Inside pump compartHose, 36Pump to Room 12Green2458127 / Drivers Sid	ch to m.
Hose, 144 Pump to Jack, Left Front 2 Brown 2467 the slide mechanis Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compart Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Sid	m.
Hose, 240 Pump to Jack, Left Rear 2 Orange 2475 Hose, 168 Pump to Jack, Right Front 2 White 2469 Hose, 264 Pump to Jack, Right Rear 1 Yellow 2476 Hose, 96 Left Rear Jack, Right Rear Jack 1 Yel/Ora. 2463 Inside pump compart Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Sid	
Hose, 168Pump to Jack, Right Front2White2469Hose, 264Pump to Jack, Right Rear1Yellow2476Hose, 96Left Rear Jack, Right Rear Jack1Yel/Ora.2463Inside pump compartHose, 36Pump to Room 12Green2458127 / Drivers Sid	nent
Hose, 264Pump to Jack, Right Rear1Yellow2476Hose, 96Left Rear Jack, Right Rear Jack1Yel/Ora.2463Inside pump compartHose, 36Pump to Room 12Green2458127 / Drivers Sid	nent
Hose, 96Left Rear Jack, Right Rear Jack1Yel/Ora.2463Inside pump compartHose, 36Pump to Room 12Green2458127 / Drivers Sid	nent
Hose, 36 Pump to Room 1 2 Green 2458 127 / Drivers Sid	nent
Slide Unit Room 1-36" Above Floor Slide 1 7164 N/A	
Hose, 384 Pump to Room 2 2 Purple 2482 347 / Passenger S	de et
Slide Unit Room 2-30" Bed Slide(Lipper) 1 134998	
Hose, N/A Pump to Room 3 Gray	
Slide Unit Room 3- N/A	
Hose, N/A Pump to Room 4 N/A Red N/A N/A	
Travel Clamp Two per Slide N/A N/A N/A	
Options	
Revisions	


32A WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

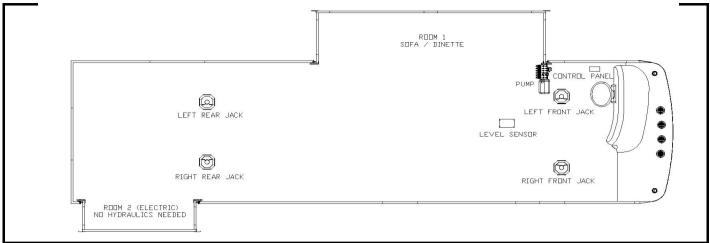

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8270	
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from front of
Touch Pad	Located to the left of the drivers seat	1		3012	bumper, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 72	Pump to Jack, Left Front	2	Brown	2461	the slide mechanism.
Hose, 288	Pump to Jack, Left Rear	2	Orange	2478	
Hose, 120	Pump to Jack, Right Front	1	White	2465	
Hose, 336	Pump to Jack, Right Rear	1	Yellow	2535	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	N/A
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	N/A
Hose, 120	Pump to Room 1	2	Green	2465	144 / Drivers Side (COIL AT PUMP)
Slide Unit	Room 1-36" Above floor slide (bolt-in)	1		7164B	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit	Room 2				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit	Room 3				
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit	Room 4				
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
	Make jacks standard per ECN 6842 (11/9/09) Update pump location per ECN 6935 (4-29-				
	Opuate pullip location per LON 0955 (4-29-	10)			
	•				


32V WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

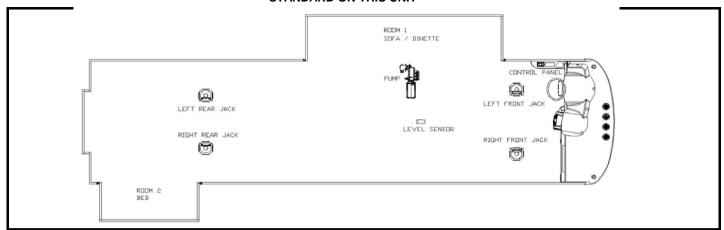

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Itam I angth	Description / Leastion	044	Color	Vendor PN	
Item, Length Kit	Description / Location (Items listed below)	Qty	Color	8308	
	6-Function, 2 Rooms & Jacks	1		7243BR	
Pump		11			Massuring from incide of
Jack Touch Pad	12,000 lbs, 16" Stroke Located to the left of the drivers seat	<u>4</u> 1		7214 2318	Measuring from inside of firewall, this is the end
					•
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 192	Pump to Jack, Right Front	1	White	2471	
Hose, 288	Pump to Jack, Right Rear	11	Yellow	2478	
Hose, 96	Left Front Jack, Right Front Jack	11	Whi/Brn	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	-
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 384	Pump to Room 2	2	Purple	2482	310 / Passenger Side
Slide Unit	Room 2-30" Lippert Bed Slide	1		134998	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
·					
		Options			
		Revisions			
1	New model per ECN 6638 (8-25-09)				
	· , ,				
	-				

34B WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

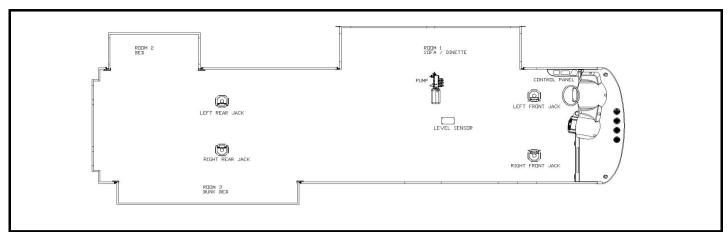


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	COIOI	8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 384	Pump to Room 2	2	Purple	2482	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 384	Pump to Room 3	2	Gray	2482	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Davialara			
1		Revisions			
2	Update per Equalizer Specs Add Magellan to chart, same as Windsport p	or ECNI 450	22		
3	Cease building Magellan, omit name from he			25 00)	
3	Cease building Magellan, offilt name from he	tauei pei Ei	ON 0007 (8-7	20-09)	

34U WINDSPORT (22.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)**


STANDARD ON THIS UNIT

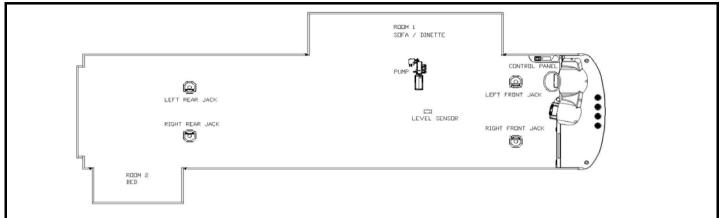

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Otv	Color	Vendor PN	
Kit	(Items listed below)	Qty 1	Color	8466	
Pump	6-Function, 2 Rooms & Jacks	<u> </u>		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7243BR 7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	4 1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	<u> </u>		2730	•
Sync Cylinder		N/A		N/A	location of the hydraulic hoses where they attach to
Hose, 144	Mounted behind pump compartment Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Plofit Pump to Jack, Left Rear	2		2475	the slide mechanism.
Hose, 240		2	Orange White	2475	
	Pump to Jack, Right Front	1			
Hose, 264	Pump to Jack, Right Rear		Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	407 / D : 0: I
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	0.47 / 5
Hose, 384	Pump to Room 2	2	Purple	2482	347 / Passenger Side
Slide Unit	Room 2-30" Bed Slide (Lippert)	1	_	134998	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Revisions			
1	Added Kit #, Revised per Equalizer changes				ose - vendor PN 2463)
2	Cease building Magellan, omit name from he	eader per E	CN 6657 (8-2	25-09)	


36F WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

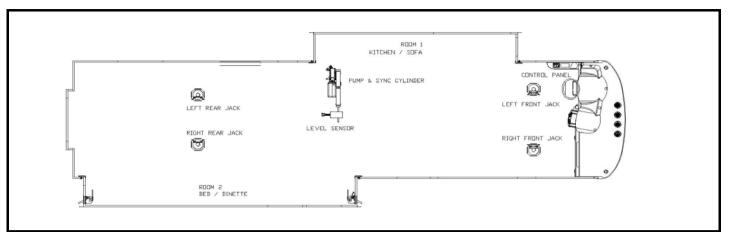

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8366				
Pump	6-Function, 2 Rooms & Jacks	1		7243BR				
Jack	12,000 lbs, 16" Stroke	4		7214				
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of			
Level Controller	Attached to bottom of structure	1		2730	firewall, this is the end			
Sync Cylinder	Mounted inside pump compartment	1		7397	location of the hydraulic			
Hose, 240	Pump to Jack, Left Front	2	Brown	2475	hoses where they attach to			
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	the slide mechanism.			
Hose, 264	Pump to Jack, Right Front	1	White	2476				
Hose, 216	Pump to Jack, Right Rear	1	Yellow	2473				
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463				
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463				
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side			
Slide Unit	Room 1 - 24" above floor slide	1		7369				
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment			
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side			
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side			
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Travel Clamp	Two per Slide	2		HWH	N/A			
		Options						
		Revisions						
1	Update per Equalizer Specs							
2	Add Magellan to usage in header per ECN 4							
3	Cease building Magellan, omit name from he	eader per E	CN 6657 (8-	25-09)				


32A WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

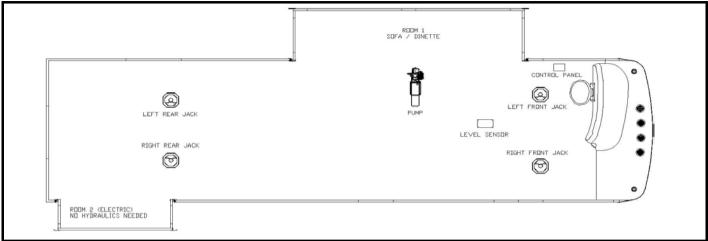

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8270	-
Pump	5-Function,1 Room, Jacks	1		7242BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from front of
Touch Pad	Located to the left of the drivers seat	1		2318	bumper, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 216	Pump to Jack, Left Rear	2	Orange	2473	
Hose, 192	Pump to Jack, Right Front	1	White	2471	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn.	2463	N/A
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	N/A
Hose, 36	Pump to Room 1	2	Green	2458	144 / Drivers Side (COIL AT PUMP)
Slide Unit	Room 1-36" Above floor slide (bolt-in)	1		7164B	
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Slide Unit	Room 2				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit	Room 3				
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit	Room 4				
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
			1		
		Davidalaria			
		Revisions			
					_


32V WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

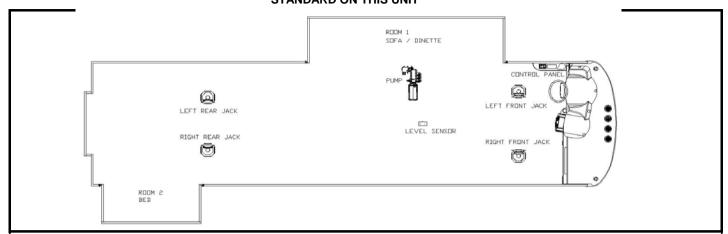

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8308	
Pump	6-Function, 2 Rooms & Jacks	<u> </u>		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	
Hose, 192	Pump to Jack, Right Front	1	White	2471	
Hose, 288	Pump to Jack, Right Rear	1	Yellow	2478	
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above floor slide	1		7164	
Hose, 384	Pump to Room 2	2	Purple	2482	310 / Passenger Side
Slide Unit	Room 2-30" Lippert Bed Slide	1		134998	
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit					
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Slide Unit					
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
			ļ		
		Poviciona			
1	New model per ECN 6638 (8-25-09)	Revisions			
1	New model per ECN 0030 (0-23-09)				
i .					

34B WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

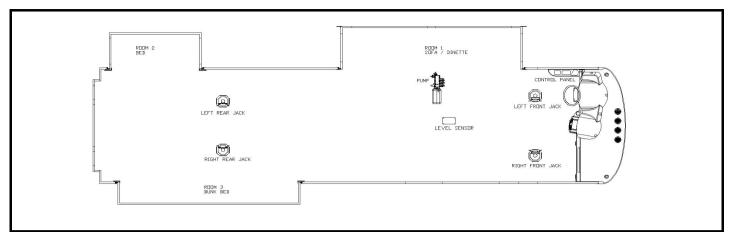


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	COIOI	8323	
Pump	7-Function, 3 Rooms & Jacks	1		7301BR	
Jack	12,000 lbs, 16" Stroke	4		7214	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 240	Pump to Jack, Left Rear	2	Orange	2475	the slide mechanism.
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Rear	1	Yellow	2476	
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2463	
Hose, 36	Pump to Room 1	2	Green	2458	127 / Drivers Side
Slide Unit	Room 1-36" Above Floor Slide	1		7164	
Hose, 384	Pump to Room 2	2	Purple	2482	347 / Drivers Side
Slide Unit	Room 2-30" Bed Slide(Lipper)	1		134998	
Hose w90, 384	Pump to Room 3	2	Gray	2482	307 / Passenger Side
Slide Unit	Room 3-18" Above floor slide	1		7135	
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Travel Clamp	Two per Slide	N/A		N/A	N/A
		Options			
		Davialara			
1		Revisions			
2	Update per Equalizer Specs Add Magellan to chart, same as Windsport p	or ECNI 450	22		
3	Cease building Magellan, omit name from he			25 00)	
3	Cease building Magellan, offilt name from he	tauei pei Ei	ON 0007 (8-7	20-09)	

34U WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)


STANDARD ON THIS UNIT

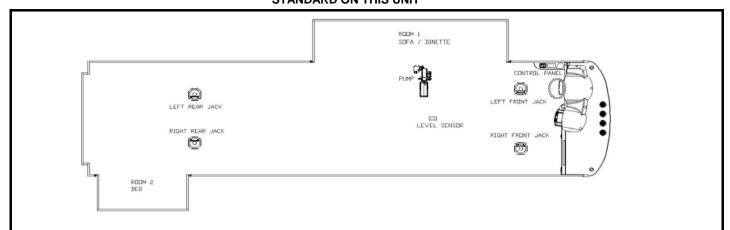

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Otv	Color	Vendor PN	
Kit	(Items listed below)	Qty 1	Color	8466	
Pump	6-Function, 2 Rooms & Jacks	<u> </u>		7243BR	
Jack	12,000 lbs, 16" Stroke	4		7243BR 7214	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	4 1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	N/A		N/A	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 240	Pump to Jack, Left Profit Pump to Jack, Left Rear	2	Orange	2475	the since mechanism.
Hose 168	Pump to Jack, Left Real Pump to Jack, Right Front	2	White	2469	
Hose, 264	Pump to Jack, Right Front Pump to Jack, Right Rear	1	Yellow	2476	
· · · · · · · · · · · · · · · · · · ·	·	<u> </u>		2463	
Hose, 96	Left Rear Jack, Right Rear Jack Pump to Room 1	2	Yel/Ora.	2463	127 / Drivers Side
Hose, 36 Slide Unit	Room 1-36" Above Floor Slide	1	Green	7164	127 / Drivers Side
	Pump to Room 2	2	Durala	2482	247 / Daggangar Cida
Hose, 384 Slide Unit		1	Purple	134998	347 / Passenger Side
0.000	Room 2-30" Bed Slide (Lippert)		Cravi		NI/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Slide Unit	Duran ta Dagga 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Room 4	IN/A	Rea	IN/A	N/A
Slide Unit	Tura man Olida	NI/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		IN/A	IN/A
		Options			
					
		Revisions			
1	Added Kit #, Revised per Equalizer changes				ose - vendor PN 2463)
2	Cease building Magellan, omit name from he	eader per E	CN 6657 (8-2	25-09)	


36F WINDSPORT (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

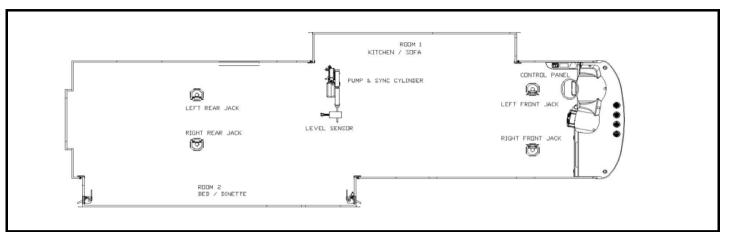

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.
 - c) Hydraulic hose terminations for both rooms require 90 degree swivel elbows.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8366				
Pump	6-Function, 2 Rooms & Jacks	1		7243BR				
Jack	12,000 lbs, 16" Stroke	4		7214				
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of			
Level Controller	Attached to bottom of structure	1		2730	firewall, this is the end			
Sync Cylinder	Mounted inside pump compartment	1		7397	location of the hydraulic			
Hose, 240	Pump to Jack, Left Front	2	Brown	2475	hoses where they attach to			
Hose, 168	Pump to Jack, Left Rear	2	Orange	2469	the slide mechanism.			
Hose, 264	Pump to Jack, Right Front	1	White	2476				
Hose, 216	Pump to Jack, Right Rear	1	Yellow	2473				
Hose, 96	Left Front Jack, Right Front Jack	1	Whi/Brn	2463				
Hose, 96	Left Rear Jack, Right Rear Jack	1	Yel/Ora.	2463				
Hose w/90, 120	Pump to Room 1	2	Green	2465	135 / Drivers Side			
Slide Unit	Room 1 - 24" above floor slide	1		7369				
Hose, 36	Pump to sync cylinder	2	Purple	2458	Inside pump compartment			
Hose w/90, 240	Sync cylinder to front slide, Room 2	2	Purple	2475	225 / Passenger Side			
Hose w/90, 240	Sync cylinder to rear slide, Room 2	2	Purple	2475	371 / Passenger Side			
Slide Unit	Room 2 - 24" flush floor slide (angled)	2		7388				
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Travel Clamp	Two per Slide	2		HWH	N/A			
		Options						
		Revisions						
1	Update per Equalizer Specs							
2	Add Magellan to usage in header per ECN 4							
3	Cease building Magellan, omit name from he	eader per E	CN 6657 (8-	25-09)				


38D MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

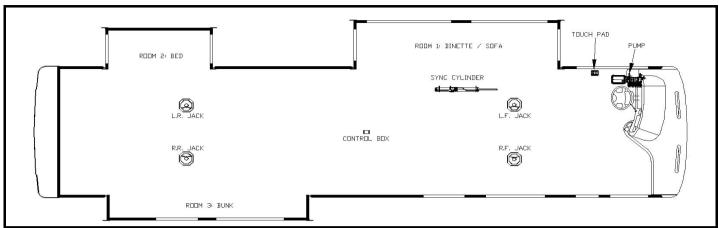

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8347	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	l
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7387	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 384	Pump to Jack, Left Rear	2	Orange	2482	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2465	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7523	
Hose, 456	Pump to Room 2	2	Purple	2488	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Davisiana	<u> </u>		<u> </u>
1	4-7-08, Corrected part number for 36" room,	Revisions	naled 36" in t	loor machanism	2 #7523
2	4-23-08, Updated to match EQ's new way of			iooi mechanish	1#1020
	14-25-00, Opuated to match EQ 5 new way of	piumbing j	auns.		


38E MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

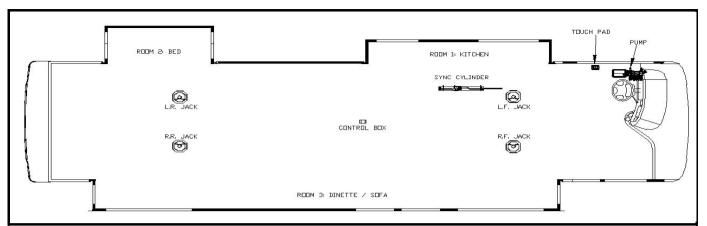

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	•
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to the slide mechanism.
Hose, 432	Pump to Jack, Left Rear	2	Orange	2486	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 432	Pump to Jack, Right Rear	1	Yellow	2486	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 456	Sync cylinder to front slide, Room 3	2	Gray	2488	103 / Passenger Side
Hose w90, 456	Sync cylinder to rear slide, Room 3	2	Gray	2488	350 / Passenger Side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose w90, 192	Pump to Room 1	2	Green	2471	146 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	
Hose, 528	Pump to Room 2	2	Purple	2566	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
Options					
		Revisions			
1 4-23-08, Updated to match EQ's new way of plumbing jacks.					


40J MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

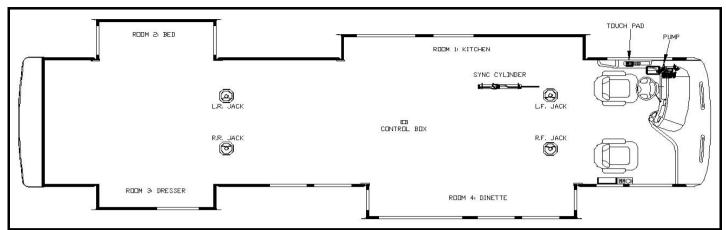

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8421	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	·	134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hoes, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		.			
		Revisions			
					_
	i e e e e e e e e e e e e e e e e e e e				


42B MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

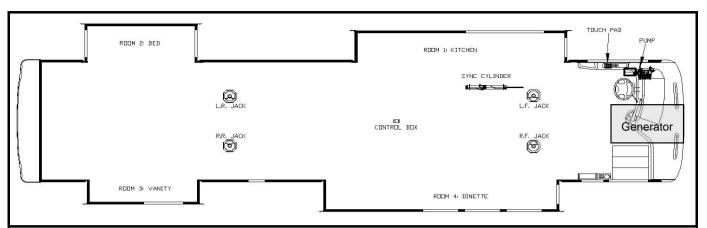

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8508	
Pump	9-Function, 4 Rooms & Jacks	1		7650BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 528	Pump to Room 2	2	Purple	2566	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 528	Pump to Room 3	2	Gray	2566	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
Hose, 72	Pump to Generator Slide	2	Blue	2461	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1	4-23-08, Updated to match EQ's new way of	plumbing	jacks.		


42C MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

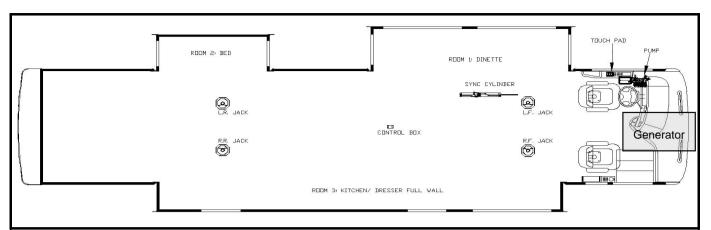

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8526	
Pump	8-Function, 3 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	_
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7523	
Hose, 480	Pump to Room 2	2	Purple	2490	402 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 168	Pump to synchronizing cylinder	2	Grey	2469	Mounts to bracket on structure
Hose w90, 336	Sync cylinder to front slide, Room 3	2	Grey	2535	115 / Passenger side
Hose w90, 336	Sync cylinder to rear slide, Room 3	2	Grey	2535	300 / Passenger side
Slide Unit	Room 3 - 24" above floor slide	2		7369	
Slide Unit	Room 3 - 24" above floor slide	1		7662	Slave
Hose, 72	Pump to Generator Slide	2	Red	2461	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
	1				


42D MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

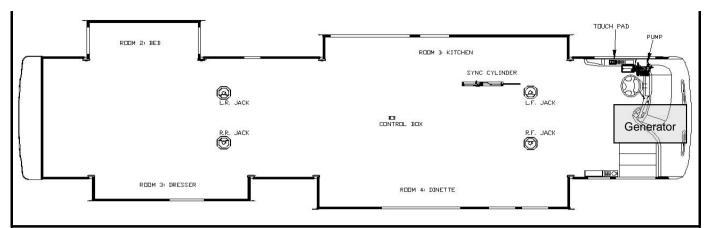

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8543	1
Pump	9-Function, 4 Rooms & Jacks	1		7650BR	1
Jack	17,000 lbs, 18" Stroke	4		7134	1
Touch Pad	Located to the left of the drivers seat	1		3012	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank (Room 4)	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank (Room 1)	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	1
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 528	Pump to Room 2	2	Purple	2566	404 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	·	134998	
Hose w90, 528	Pump to Room 3	2	Gray	2566	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 216	Sync cylinder to front slide, Room 4	2	Red	2473	115 / Passenger side
Hose w90, 216	Sync cylinder to rear slide, Room 4	2	Red	2473	205 / Passenger side
Slide Unit	Room 4 - 36" flush floor slide (angled)	2		7523	
Hose, 72	Pump to Generator Slide	2	Blue	2461	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
·		Options			
		Revisions			
1					


38D MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

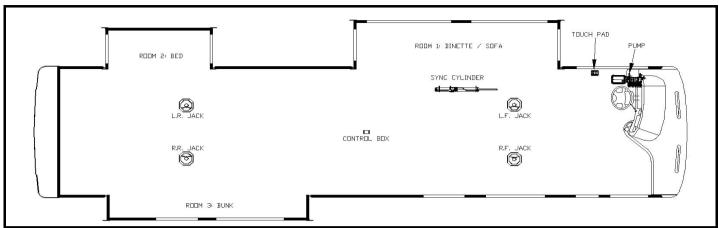

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8347	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Macauring from incide of
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	•
Sync Cylinder	Mounted behind LP tank	1		7387	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 384	Pump to Jack, Left Rear	2	Orange	2482	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2465	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7523	
Hose, 456	Pump to Room 2	2	Purple	2488	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Revisions			
1	4-7-08, Corrected part number for 36" room,			floor mechanism	n #7523
2	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		


38E MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

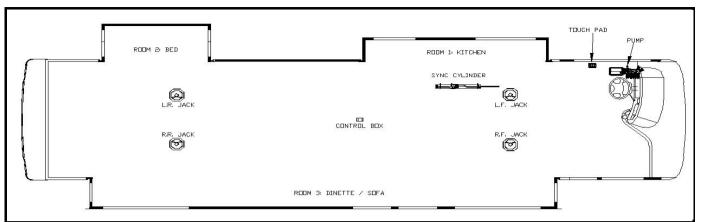

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	•
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to the slide mechanism.
Hose, 432	Pump to Jack, Left Rear	2	Orange	2486	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 432	Pump to Jack, Right Rear	1	Yellow	2486	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Passenger Side
Hose w90, 456	Sync cylinder to rear slide, Room 3	2	Gray	2488	350 / Passenger Side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose w90, 192	Pump to Room 1	2	Green	2471	146 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	
Hose, 528	Pump to Room 2	2	Purple	2566	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		


40J MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

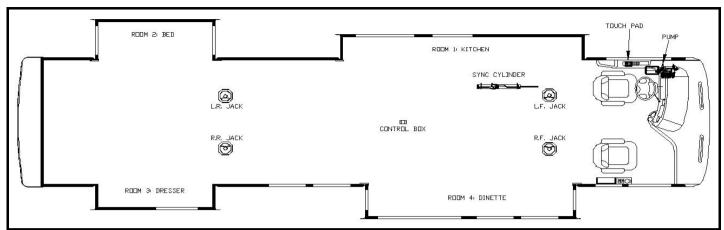

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8421	1
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hoes, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			


42B MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

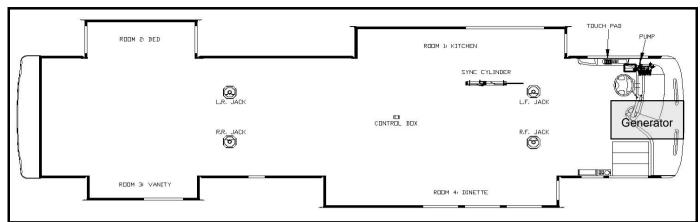

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00101	8508	
Pump	9-Function, 4 Rooms & Jacks	1		7650BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 528	Pump to Room 2	2	Purple	2566	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 528	Pump to Room 3	2	Gray	2566	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
Hose, 72	Pump to Generator Slide	2	Blue	2461	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1	4-23-08, Updated to match EQ's new way of	plumbing	jacks.		


42C MONTECITO EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

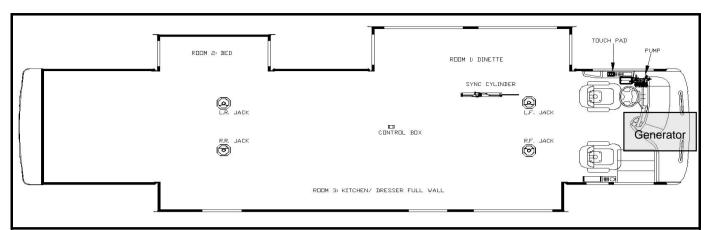

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8526	
Pump	8-Function, 3 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	_
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7387	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 120	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2465	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7523	
Hose, 480	Pump to Room 2	2	Purple	2490	402 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 168	Pump to synchronizing cylinder	2	Grey	2469	Mounts to bracket on structure
Hose w90, 336	Sync cylinder to front slide, Room 3	2	Grey	2535	115 / Passenger side
Hose w90, 336	Sync cylinder to rear slide, Room 3	2	Grey	2535	300 / Passenger side
Slide Unit	Room 3 - 24" above floor slide	2		7369	
Slide Unit	Room 3 - 24" above floor slide	1		7662	Slave
Hose, 72	Pump to Generator Slide	2	Red	2461	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		Revisions			
	1				


38D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

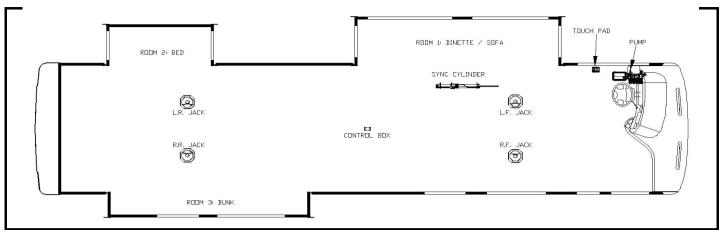

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8347	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	_
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to
Hose, 384	Pump to Jack, Left Rear	2	Orange	2482	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	1
Hose, 396	Pump to Jack, Right Rear	1	Yellow	2483	1
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464	1
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7523	
Hose, 444	Pump to Room 2	2	Purple	2487	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 468	Pump to Room 3	2	Gray	2489	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Davidaia			
1		Revisions	adad 26" : 4	ilaar maabaris	#7F22
2	4-7-08, Corrected part number for 36" room,	•	•	ioor mechanish	1 #1023
	4-23-08, Updated to match EQ's new way of	i piurribirig j	auks.		


38E Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

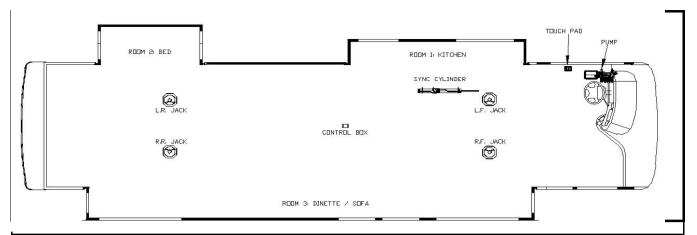

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8350	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Manageria of the state of
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 420	Pump to Jack, Left Rear	2	Orange	2485	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 420	Pump to Jack, Right Rear	1	Yellow	2485	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Passenger Side
Hose w90, 444	Sync cylinder to rear slide, Room 3	2	Gray	2487	350 / Passenger Side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Drivers Side
Slide Unit	Room 1 - 18" above floor slide	1		7135	
Hose, 516	Pump to Room 2	2	Purple	2491	345 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
					T
		Revisions			
1	4-23-08, Updated to match EQ's new way of		acks		
1	- 20 00, opudiod to material a new way or	prairibing j	uono.		


40J Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

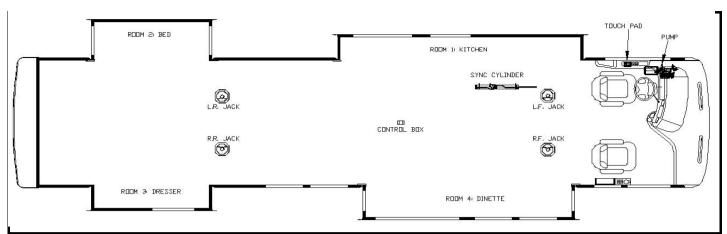

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8421	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hoes, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		.			
4		Revisions	1		
1	4-23-08, Updated to match EQ's new way of	piumbing j	acks.		


40K Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

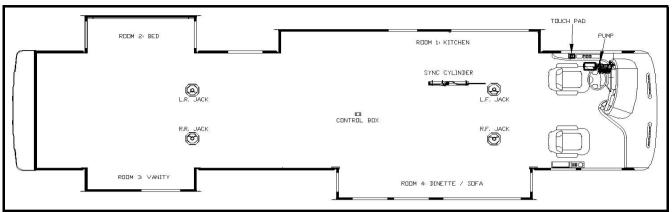

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	30101	8418	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
1	4-23-08, Updated to match EQ's new way of	nlumbing i	acke		
'	14-25-00, opuated to match EQ 5 flew way or	plainbing J	acno.		

42A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

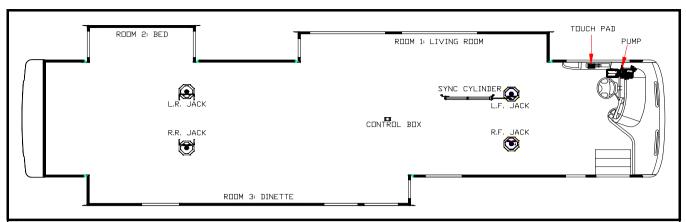


- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full let3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows. Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8373	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	_
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	130 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	220 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 168	Pump to synchronizing cylinder	2	Gray	2469	Mounts to bracket on structure
Hose w90, 360	Sync cylinder to front slide, Room 3	2	Gray	2527	235 / Passenger side
Hose w90, 360	Sync cylinder to rear slide, Room 3	2	Gray	2527	385 / Passenger side
Slide Unit	Room 3 - 24" flush floor slide (angled)	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A

	Options						
		Revisions					
1	4-23-08, Updated to match EQ's new way of plumbing jacks.						
				•			
		•	•		•		


42B Sahara **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

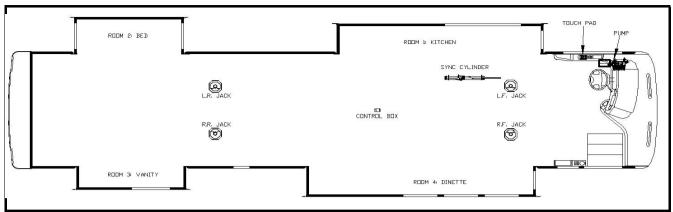

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	<u> પાપુ</u> 1	Color	8508		
Pump	8-Function, 4 Rooms & Jacks	1		7650BR		
Jack	17,000 lbs, 18" Stroke	4		7134	1	
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of	
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end	
	Mounted behind LP tank	2		7397	location of the hydraulic	
Sync Cylinder Hose, 144		2	Brown	2467	hoses where they attach to	
,	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.	
Hose, 408	Pump to Jack, Left Rear	2	Orange	2467	4	
Hose, 144	Pump to Jack, Right Front	<u>∠</u> 1	White		4	
Hose, 408	Pump to Jack, Right Rear	-	Yellow	2484	4	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	Manusta ta basabat an atmestera	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure	
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side	
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side	
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388		
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side	
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	_	134998		
Hose w90, 516	Pump to Room 3	2	Gray	2491	404 / Passenger side	
Slide Unit	Room 3 - 18" above floor slide	1		7135		
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure	
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side	
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side	
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388		
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside Generator Tray	
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A	
		Options				
		Revisions				


38D SAHARA EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

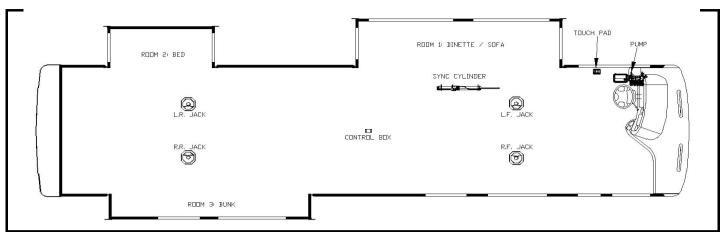

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8347	
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	•
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	hoses where they attach to
Hose, 384	Pump to Jack, Left Rear	2	Orange	2482	the slide mechanism.
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 396	Pump to Jack, Right Rear	1	Yellow	2483	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/Ora	2464	
Hose, 144	Pump to synchronizing manifold	2	Green	2467	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	103 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	196 / Drivers side
	Pump to Room 1	N/A	Green		
Slide Unit	Room 1 - 36" flush floor slide	2		7523	
Hose, 444	Pump to Room 2	2	Purple	2487	325 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 468	Pump to Room 3	2	Gray	2489	355 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
	Pump to Generator Slide	N/A			
Travel Clamp	(two per slide, dinette / sofa slide only)	2		HWH	N/A
		Options			
		Revisions			
1	4-7-08, Corrected part number for 36" room,	•		loor mechanism	n #7523
2	4-23-08, Updated to match EQ's new way of	plumbing j	acks.		


38E SAHARA EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

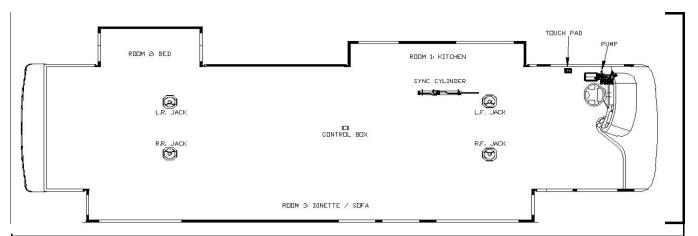

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #2 & #3 require 90 degree swivel elbows.
- 4) Room #3 will have a non-powered slide mechanism in center of room
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN		
Kit	(Items listed below)	<u>Qty</u> 1	COIOI	8350		
Pump	7-Function, 3 Rooms & Jacks	1		7319BR	-	
Jack	17,000 lbs, 18" Stroke	4		7134		
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of	
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end	
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic	
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	hoses where they attach to	
Hose, 420	Pump to Jack, Left Rear	2	Orange	2485	the slide mechanism.	
Hose, 144	Pump to Jack, Right Front	2	White	2467	1	
Hose, 420	Pump to Jack, Right Rear	1	Yellow	2485	1	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	1	
Hose, 144	Pump to synchronizing cylinder	2	Gray	2467	Mounts to bracket on structure	
Hose w90, 432	Sync cylinder to front slide, Room 3	2	Gray	2486	103 / Passenger Side	
Hose w90, 444	Sync cylinder to front slide, Room 3	2	Gray	2487	350 / Passenger Side	
Slide Unit	Room 3 - 24" flush floor slide (angled)	2	Citay	7388	Coo / 1 descriger orde	
Slide Unit	Room 3 - 24" flush floor slide (angled)	1		7384	Slave	
Hose w90, 180	Pump to Room 1	2	Green	2470	146 / Drivers Side	
Slide Unit	Room 1 - 18" above floor slide	1	Orcen	7135	1407 Brivers Glac	
Hose, 516	Pump to Room 2	2	Purple	2491	345 / Drivers Side	
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	1 dipio	134998	OHO / Brivero Glac	
Olido Olik	Pump to Generator Slide	N/A		101000	N/A	
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A	
riavoi olamp	(the per chae, except the bed shae)	•			14/71	
		Options				
		оршоно	I			
		Revisions				
1	4-23-08, Updated to match EQ's new way of	plumbing ja	acks.			
		· · · · ·	<u> </u>			


40J SAHARA EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

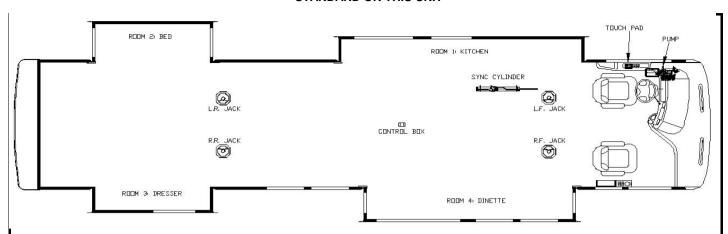

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
 - 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8421	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hoes, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options	-		
		Revisions			
		_			


40K SAHARA EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

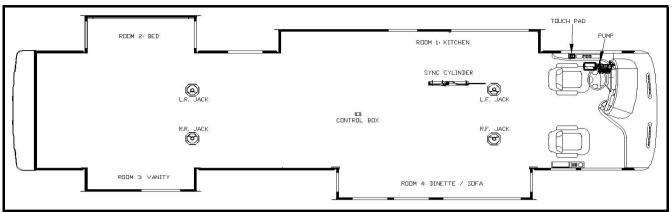

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
- 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
- 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.
- 5) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8418	
Pump	8-Function, 4 Rooms & Jacks	1		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	1
Touch Pad	Located to the left of the drivers seat	1		2318	Measuring from inside of
Control Box	Attached to bottom of structure	1		2730	firewall, this is the end
Sync Cylinder	Mounted behind LP tank	1		7397	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7511	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 192	Pump to synchronizing cylinder	2	Green	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 1	2	Green	2467	124 / Drivers side
Hose w90, 144	Sync cylinder to rear slide, Room 1	2	Green	2467	214 / Drivers side
Slide Unit	Room 1 - 18" above floor slide	2		7135	
Hose, 480	Pump to Room 2	2	Purple	2490	386 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1	<u> </u>	134998	
Hose w90, 480	Pump to Room 3	2	Gray	2490	365 / Passenger Side
Slide Unit	Room 3 - 18" above floor slide	1	1	7135	j
Hose, 192	Pump to synchronizing cylinder	2	Red	2471	Mounts to bracket on structure
Hose w90, 144	Sync cylinder to front slide, Room 4	2	Red	2467	124 / Passenger side
Hose w90, 144	Sync cylinder to rear slide, Room 4	2	Red	2467	214 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide	2		7388	3
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
	() 1 1 1 1 1 1 1 1 1				
		Options			
		Revisions			
<u> </u>					
1					


42B SAHARA EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

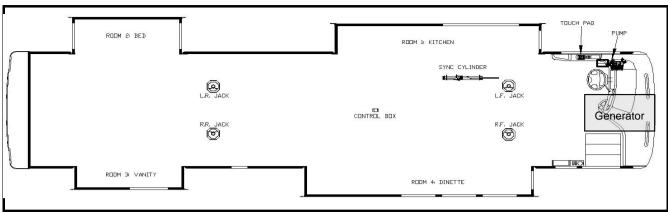

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8508	
Pump	9-Function, 4 Rooms & Jacks	1		7650BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	2		7397	hoses where they attach to
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the slide mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 24" flush floor slide (angled)	2		7388	
Hose, 516	Pump to Room 2	2	Purple	2491	420 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose w90, 516	Pump to Room 3	2	Gray	2491	404 / Passenger side
Slide Unit	Room 3 - 18" above floor slide	1		7135	
Hose, 168	Pump to synchronizing cylinder	2	Red	2469	Mounts to bracket on structure
Hose w90, 288	Sync cylinder to front slide, Room 4	2	Red	2478	115 / Passenger side
Hose w90, 288	Sync cylinder to rear slide, Room 4	2	Red	2478	254 / Passenger side
Slide Unit	Room 4 - 24" flush floor slide (angled)	2		7388	
Hose, 60	Pump to Generator Slide	2	Blue	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
•					
		Options			
		Revisions			
1	4-23-08, Updated to match EQ's new way of p	olumbing j	acks.		

42C SAHARA EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

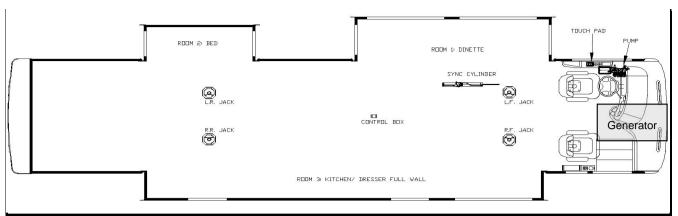

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
- Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
- 4) Hoses marked w90 will have the 90 deg fitting shipped loose.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	11		8526	
Pump	8-Function, 3 Rooms & Jacks	11		7302BR	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Touch Pad	Located to the left of the drivers seat	1		2318	firewall, this is the end
Control Box	Attached to bottom of structure	1		2730	location of the hydraulic
Sync Cylinder	Mounted behind LP tank	1		7387	hoses where they attach to
Sync Cylinder	Mounted behind LP tank	1		7397	the slide mechanism.
Hose, 144	Pump to Jack, Left Front	2	Brown	2467	the shae mechanism.
Hose, 408	Pump to Jack, Left Rear	2	Orange	2484	
Hose, 144	Pump to Jack, Right Front	2	White	2467	
Hose, 408	Pump to Jack, Right Rear	1	Yellow	2484	
Hose, 108	Left Rear Jack, Right Rear Jack	1	Yel/ Ora	2464	
Hose, 168	Pump to synchronizing cylinder	2	Green	2469	Mounts to bracket on structure
Hose w90, 168	Sync cylinder to front slide, Room 1	2	Green	2469	115 / Drivers side
Hose w90, 168	Sync cylinder to rear slide, Room 1	2	Green	2469	205 / Drivers side
Slide Unit	Room 1 - 36" flush floor slide (angled)	2		7523	
Hose, 468	Pump to Room 2	2	Purple	2489	402 / Drivers Side
Slide Unit	Room 2 - 30" Bed slide (Lippert)	1		134998	
Hose, 168	Pump to synchronizing cylinder	2	Grey	2469	Mounts to bracket on structure
Hose w90, 324	Sync cylinder to front slide, Room 3	2	Grey	2480	115 / Passenger side
Hose w90, 324	Sync cylinder to rear slide, Room 3	2	Grey	2480	300 / Passenger side
Slide Unit	Room 3 - 24" above floor slide	2		7369	Ĭ .
Slide Unit	Room 3 - 24" above floor slide	1		7662	Slave
Hose, 60	Pump to Generator Slide	2	Red	2460	Inside generator tray
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
•	, , , , , , , , , , , , , , , , , , , ,				
		Options			
		Revisions			
1					

Montecito Travel Lock Harnesses

<u>38D</u> **Room 1-6766** Room 2-none Room 3-none 38E Room 1-6749 Room 2-none **Room 3-6750 40J Room 1-6822** Room 2-none **Room 3-6823** Room 4-6821 <u>42B</u> **Room 1-6774** Room 2-none **Room 3-6775 Room 4-6776 42C Room 1-6774** Room 2-none Room 3-6750 <u>42D</u> **Room 1-6776** Room 2-none Room 3-6897 **Room 4-6776**

36" FOUR WINDS SLIDE WEIGHT REMOVAL OPTIONS

OUTER FRAME	Weight	Savings
Current style	46.5 lbs	
With 1/4" back plate and cut outs	36.9 lbs	9.6 lbs
11 ga. with 1/4" back plate and cut outs	33.3 lbs	13.2 lbs
12 ga. with 1/4" back plate and cut outs	29.8 lbs	16.7 lbs
INNER TUBE ASSEMBLY	Weight	Savings
Current Style	50 lbs	
Current with cut outs	45.6 lbs	4.4 lbs
1 ½ x 3 Tube with cut outs	34.6 lbs	15.4 lbs
1 ½ x 2 ½ Tube with cut outs	34.1 lbs	15.9 lbs

2006 FOUR WINDS SLIDE REFERENCE

FUNMOVER

39C

SOFA 7164 SLIDE ASSBLY 36" FOUR WINDS

39D

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS

SUPER C

32B

SOFA/DIN 7164B SLIDE ASSBLY 36" FOUR WINDS

35B

SOFA/DIN. 7164B SLIDE ASSBLY 36" FOUR WINDS REAR ROOM-Electric by others

33K ALL SLIDES ARE ELECTRIC

34G ALL SLIDES ARE ELECTRIC

HURRICANE

30F

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

31D ALL SLIDES ARE ELECTRIC

31H ALL SLIDES ARE ELECTRIC

32R

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS BED 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)

33H

SOFA/DIN 7164 SLIDE ASSBLY 36" FOUR WINDS

34N

SOFA/DIN. 7164 SLIDE ASSBLY 36" FOUR WINDS KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS BED 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)

_	<u>OSPORT</u>	
32R	SOFA/DIN	7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH
	BED	7351 SYNC CYL) 7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)
34A	COEA/DDI	71/4D OLIDE AGGDLY 2/2 FOLID WIDING (A DEOLD WITH
	SOFA/DIN	7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH 7351 SYNC CYL)
	BED	7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)
34N		
	SOFA/DIN	7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH 7351 SYNC CYL)
	KITCHEN	7135 SLIDE ASSBLY 18" FOUR WINDS
	BED	7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)
35W		
	SOFA/DIN	7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH 7351 SYNC CYL)
36A		
	SOFA/DIN	7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH 7351 SYNC CYL)
	BED	7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)
36E		
	SOFA/DIN	7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH 7351 SYNC CYL)
		7135 SLIDE ASSBLY 18" FOUR WINDS
	BED	7303-CYLINDER-BED SLIDE-FOUR WINDS (SLIDE BUILT BY POWER GEAR)
36K		

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH 7351 SYNC CYL)
WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS
BED 7303-CYLINDER-BED SLIDE-FOUR WINDS
(SLIDE BUILT BY POWER GEAR)

36Z

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

MAGELLAN

34N

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

36A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

36E

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

36K

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

WARDROBE 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

36Z

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

38E

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

VALENCIA

36A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

37A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

38C

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

PRESIDIO

39A

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39B

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39C

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

39D

KITCHEN 7135 SLIDE ASSBLY 18" FOUR WINDS

BED 7303-CYLINDER-BED SLIDE-FOUR WINDS

(SLIDE BUILT BY POWER GEAR)

VANITY 7135 SLIDE ASSBLY 18" FOUR WINDS

SOFA/DIN 7164D SLIDE ASSBLY 36" FOUR WINDS (2 REQ'D WITH

7351 SYNC CYL)

2009 FOUR WINDS PROJECTED MODEL LINE UP

MANDALAY	PRESIDIO	MAGELLAN
40G-8359	38D-8347	34B-8323
43A-8360	38E-8350	34U-New Model
43C-8377	40J-New Model	36E-8309
43D-8419	40K-8418	36F-8366
	42A-8373	36R-8342
	42B-8379	36Z-8307

WINDSPORT	HURRICANE	SUPER "C"
30Q-8252 31D-8252 32E-8252 32R-8308 33T-8381 34B-8323 34U-New Model 34Y-8365 36E-8309 36F-8366 36R-8342	30Q-8252 31D-8252 32E-8252 33H-8270 33T-8381 34B-8323 34N-8269 34Y-8365	32B-8264 33K-8274 34G-8275 34H-8341 35B-8264 36A-New Model 36B-New Model
36Z-8307		

FUN MOVER

31D-8251

35D-8251

34Y-8365


42C-8250/8253

42D-8250/8253

Note:

Full 2009 will be on April 8, 2008 release for diesel units, and April 21, 2009 for gas units. Units listed as New Model have not been given to us yet to build systems for. On the Super "C" all of the existing units will be obsolete somewhere around 50 units into the new model year, and the only units that will have our stuff on them are the new ones.


38B Slide Components (auto-option)

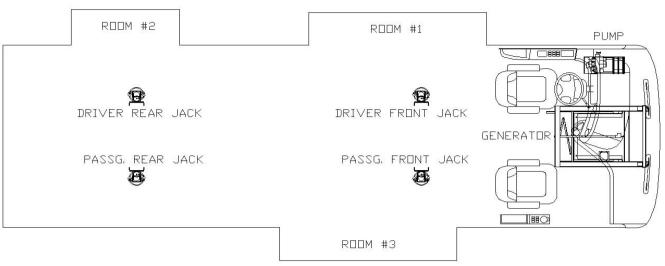

Leveling System = AP33439 Description:


Hose Kit = AP33457 Generator Front Jacks Room #1 Room #2 Room #3 Room #4 Rear Jacks Length: (feet) FM-3090 39 11 31 102 16 5

Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 3 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder



Lockdown Arms:

Dimension (inches)

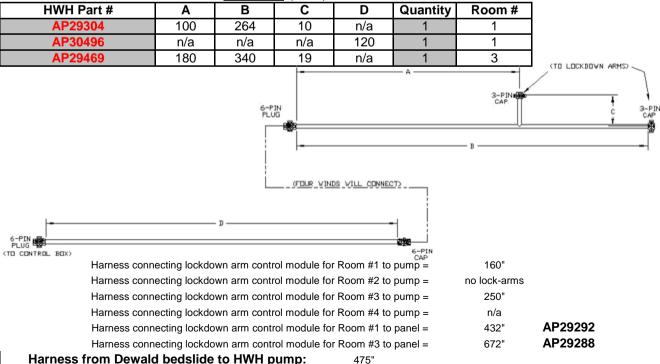


Other Parts

<u>Description:</u>	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	1	HWH	AP26810
Hardware Kit	FM-1806	1	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3	HWH	P14291
Bed Slide Mechanism	FM-2014	1	Power Gear	59-754-0100

- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04



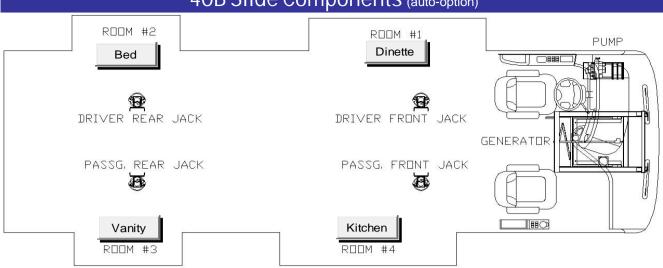


 Leveling System = AP33352
 Hose Kit = AP33444

 Description:
 Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks
 Total:

 Length: (feet)
 FM-3090 41 36 16 5 11 33 142

Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 4 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

Quantity Room #

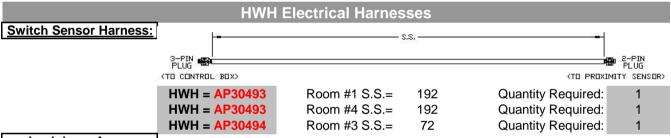

D

Lockdown Arms:

HWH Part #

Dimension (inches)

AP34480	6	192	96	n/a	1	1			
AP30495	n/a	n/a	n/a	126	2	1 & 3			
AP29469	180	340	19	n/a	1	4			
AP29305	63	159	13	n/a	1	3	477 BOX PRI III 45140		
6-PIN CAP CAP (FDUR_VINDS_VILL_CONNECT)									
6-PIN BOX>		- р ———		-	6-PIN CAP				

2005 and 2006 40B

Harness connecting lockdown arm control module for Room #1 to pump = 160" Harness connecting lockdown arm control module for Room #2 to pump = no lock-arms Harness connecting lockdown arm control module for Room #3 to pump = 430" Harness connecting lockdown arm control module for Room #4 to pump = 250"

AP29292 Harness connecting lockdown arm control module for Room #1 to panel = 432" **AP29288** Harness connecting lockdown arm control module for Room #3 & #4 to panel = 480"


Harness from Dewald bedslide to HWH pump: 500"

(used with room #2)

Other Parts


Description:	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	2	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3.5	HWH	P14291
Bed Slide Mechanism	FM-2014	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804

- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04
 - 9. Changed dinette slide switch sensor harness (room #1) ECN #3140 NS 9-27-04
 - 10. Updated room #1 with 192" harness per HWH NS,10-11-04
 - 11. Updated per ECN #3429, all dinette slide outs take same lock down arm harness NS. 4-22-05
 - 12. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 13. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05

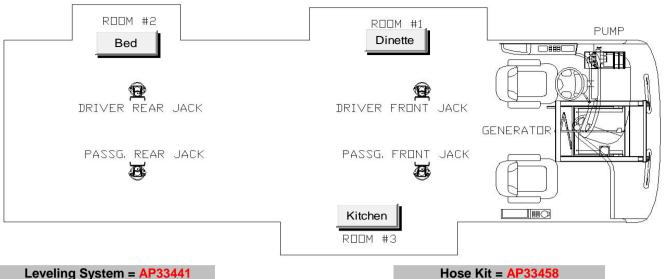


Leveling System = AP33441 **Hose Kit = AP33458** Description: Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks Length: (feet) FM-3090 37 16 5 11 33 102

> Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 3 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

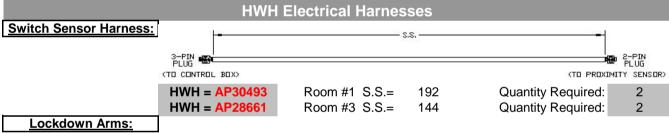

<u>Dimension</u> (inches)								
HWH Part #	Α	В	С	D	Quantity	Room #		
AP34480	6	192	96	n/a	1	1		
AP30495	n/a	n/a	n/a	126	1	1		
AP29469	180	340	19	n/a	1	3		

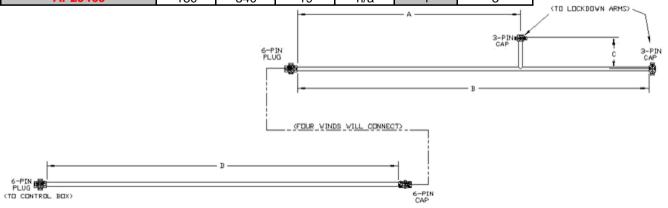

2005 and 2006 40D

Harness connecting lockdown arm control module for Room #1 to pump = Harness connecting lockdown arm control module for Room #2 to pump = Harness connecting lockdown arm control module for Room #3 to pump = Harness connecting lockdown arm control module for Room #4 to pump = Harness connecting lockdown arm control module for Room #1 to panel = Harness connecting lockdown arm control module for Room #3 to panel =

no lock-arms 250" n/a AP29292 432"

AP29288

160"

480"

Harness from Dewald bedslide to HWH pump:

(used with room #2)


Description:

Other			
Print #	Quan.	<u>Vendor</u>	Vendor #
n/a	2	HWH	AP25893
n/a	1	HWH	AP26810
EM_2158	1	Н///Н	A D27068

n/a	2	HWH	AP25893
n/a	1	HWH	AP26810
FM-2158	4	HWH	AP27968
FM-2158	1	HWH	AP29804
FM-1806	1	HWH	P26223
n/a	1	HWH	AP27411
n/a	1	HWH	AP29839
n/a	2	HWH	P14291
FM-1871	1	Power Gear	
FM-2158	1	HWH	P29809
	n/a FM-2158 FM-2158 FM-1806 n/a n/a n/a FM-1871	n/a 1 FM-2158 4 FM-2158 1 FM-1806 1 n/a 1 n/a 1 n/a 2 FM-1871 1	n/a 1 HWH FM-2158 4 HWH FM-2158 1 HWH FM-1806 1 HWH n/a 1 HWH n/a 1 HWH n/a 2 HWH FM-1871 1 Power Gear


- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system & corrected bed slide mechanism part number NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04
 - 9. Changed dinette slide switch sensor harness (room #1) ECN #3140 NS 9-27-04
 - 10. Updated room #1 with 192" harness per HWH NS,10-11-04
 - 11. Updated per ECN #3429, all dinette slide outs take same lock down arm harness NS, 4-22-05
 - 12. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 13. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05

40E & 40G Slide Components (auto-option)

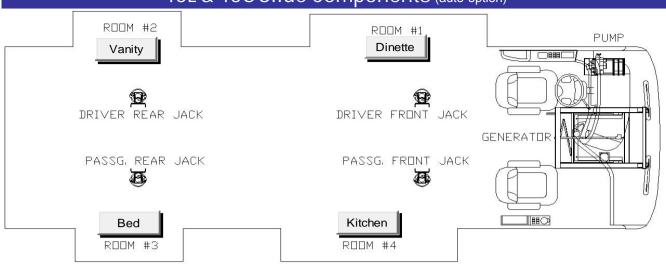

Leveling System = AP33276 **Hose Kit = AP33443** Description: Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks Length: (feet) FM-3090 36 41 16 5 11 33 142

> Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 4 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

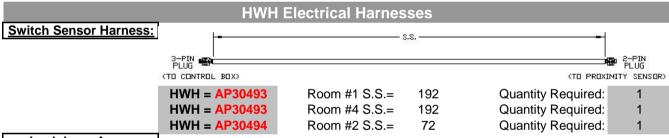

Lockdown Arms:

Dimension (inches)

			()				_
HWH Part #	Α	В	C	D	Quantity	Room #	
AP34480	6	192	96	n/a	1	1	
AP30495	n/a	n/a	n/a	126	2	1 & 2	
AP29469	180	340	19	n/a	1	4	
AP29305	63	159	13	n/a	1	2	
6-PIN		6-P PLU	-	DS VILL CONNEC	A	3-PIN CAP	C 3-PIN CAP

(TO CONTROL BOX)

2005 and 2006 40E 40G

Harness connecting lockdown arm control module for Room #1 to pump = 160" Harness connecting lockdown arm control module for Room #2 to pump = 430" Harness connecting lockdown arm control module for Room #3 to pump = no lock-arms Harness connecting lockdown arm control module for Room #4 to pump = 250"

AP29292 Harness connecting lockdown arm control module for Room #1 to panel = 432" **AP29288** Harness connecting lockdown arm control module for Room #2 & #4 to panel = 480"

Harness from Dewald bedslide to HWH pump: 500"


(used with room #3)

Other Parts

<u>Description:</u>	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	2	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3.5	HWH	P14291
Bed Slide Mechanism	FM-1871	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804

- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system & corrected bed slide mechanism part number NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04
 - 9. Changed dinette slide switch sensor harness (room #1) ECN #3140 NS 9-27-04
 - 10. Updated room #1 with 192" harness per HWH NS,10-11-04
 - NS, 4-22-05 11. Updated per ECN #3429, all dinette slide outs take same lock down arm harness
 - 12. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 13. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05



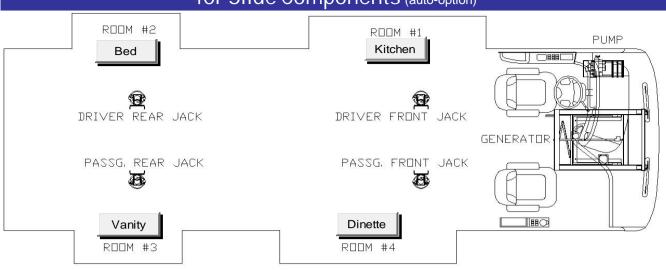


 Leveling System = AP34286
 Hose Kit = AP33443

 Description:
 Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks Total:

 Length: (feet)
 16
 41
 36
 FM-3090
 5
 11
 33
 142

Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 4 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

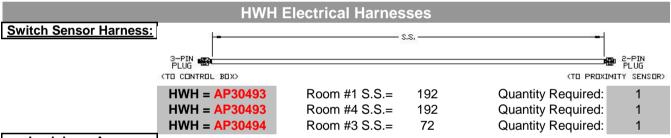

Lockdown Arms:

<u>Dimension</u> (inches)

		Difficition	inches)				
HWH Part #	Α	В	С	D	Quantity	Room #	
AP34298	180	340	19	n/a	1	1	
AP30495	n/a	n/a	n/a	126	2	3 & 4	
AP34480	6	192	96	n/a	1	4	
AP29305	63	159	13	n/a	1	3	(TO LOCKDOWN ARMS)
		6-PPL	-	DS VILL CONNEC		3-PIN	C 3-PIN
6-PIN PLUG		- D ————		•	6-PIN CAP		

2005 and 2006 40F

250" Harness connecting lockdown arm control module for Room #1 to pump = Harness connecting lockdown arm control module for Room #2 to pump = no lock-arms 430" Harness connecting lockdown arm control module for Room #3 to pump = 250" Harness connecting lockdown arm control module for Room #4 to pump =

Harness connecting lockdown arm control module for Room #1 to panel = 432" **AP29288** Harness connecting lockdown arm control module for Room #3 & #4 to panel = 480"

Harness from Dewald bedslide to HWH pump: 500"

(used with room #2)


Other Parts

Description:	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	2	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3.5	HWH	P14291
Bed Slide Mechanism	FM-1871	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804

- Revisions: 1. Added on 8-3-04 NS
 - 2. Chagned lock down harness for room #4 (no units built yet) 9-21-04
 - 3. Changed dinette slide switch sensor harness (room #4) ECN #3140 NS 9-27-04
 - 4. Updated room #4 with 192" harness and added leveling system kit # per HWH NS,10-11-04
 - 5. Adjusted room #1 and #4 lockdown arm harnesses for better wire routing NS, 12-28-04 ecn #3304
 - 6. Updated per ECN #3429, all dinette slide outs take same lock down arm harness NS, 4-22-05
 - 7. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 8. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05


AP29292



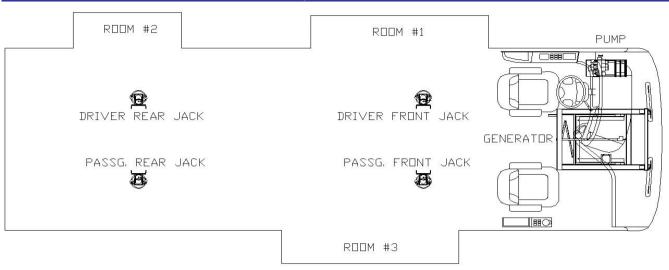

Leveling System = AP33645 **Hose Kit = AP33457** Description: Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks Length: (feet) FM-3090 39 16 5 11 31 102

> Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 3 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder



Lockdown Arms:

Dimension (inches)

							-	
HWH Part #	Α	В	С	D	Quantity	Room #		
AP29304	100	264	10	n/a	1	1		
AP30496	n/a	n/a	n/a	120	1	1		
AP29469	180	340	19	n/a	1	3	(TO LOCKDOWN ARMS)	
6-PIN CAP CAP CAP								
GEDUR WINDS VILL CONNECTS								
6-PIN PLUG PLUG CONTROL BOX>		- D			6-PIN			

Harness connecting lockdown arm control module for Room #1 to pump = 160" Harness connecting lockdown arm control module for Room #2 to pump = no lock-arms Harness connecting lockdown arm control module for Room #3 to pump = 250" Harness connecting lockdown arm control module for Room #4 to pump = n/a

AP29292 Harness connecting lockdown arm control module for Room #1 to panel = 432" **AP29288** Harness connecting lockdown arm control module for Room #3 to panel = 672"

Harness from Dewald bedslide to HWH pump:


(used with room #2)

Other Parts

<u>Description:</u>	Print #	Quan.	<u>Vendor</u>	<u>Vendor #</u>
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	1	HWH	AP26810
Hardware Kit	FM-1806	1	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3	HWH	P14291
Bed Slide Mechanism	FM-2014	1	Power Gear	59-754-0100


- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04

40B Slide Components (standard 325 series)

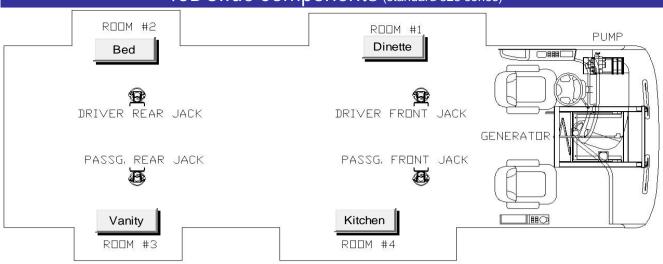

Leveling System = AP				Но	se Kit = AP3	3444		
Description:	Room #1	Room #2	Room #3	Room #4	Generator	Front Jacks	Rear Jacks	Total:
Length: (feet)	FM-3090	41	36	16	5	11	33	142


Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 4 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

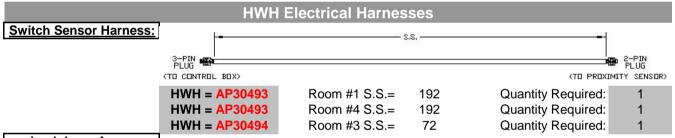

Lockdown Arms:

Dimension (inches)

HWH Part #	Α	В	С	D	Quantity	Room #
AP34480	6	192	96	n/a	1	1
AP30495	n/a	n/a	n/a	126	2	1 & 3
AP29469	180	340	19	n/a	1	4
AP29305	63	159	13	n/a	1	3

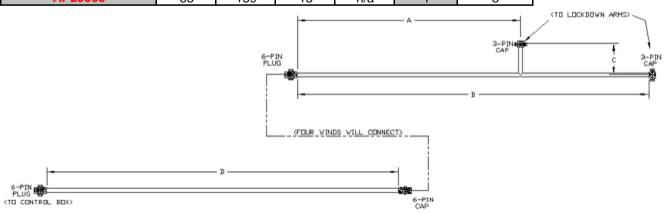

2005 and 2006 40B

Harness connecting lockdown arm control module for Room #1 to pump = 160" Harness connecting lockdown arm control module for Room #2 to pump = no lock-arms Harness connecting lockdown arm control module for Room #3 to pump = 430" Harness connecting lockdown arm control module for Room #4 to pump = 250"

AP29292 Harness connecting lockdown arm control module for Room #1 to panel = 432" **AP29288** Harness connecting lockdown arm control module for Room #3 & #4 to panel = 480"

Harness from Dewald bedslide to HWH pump: 500"


(used with room #2)

Other Parts

<u>Description:</u>	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	2	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3.5	HWH	P14291
Bed Slide Mechanism	FM-2014	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804

- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04
 - 9. Changed dinette slide switch sensor harness (room #1) ECN #3140 NS 9-27-04
 - 10. Updated room #1 with 192" harness per HWH NS,10-11-04
 - NS, 4-22-05 11. Updated per ECN #3429, all dinette slide outs take same lock down arm harness
 - 12. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 13. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05

40D Slide Components (standard 325 series)

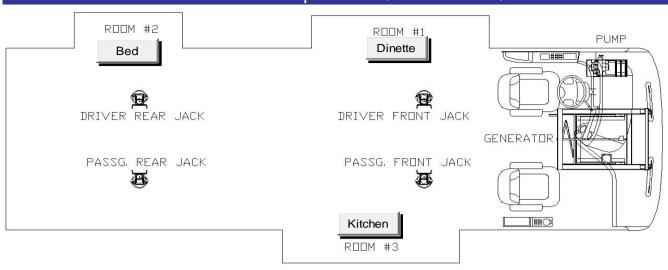


 Leveling System = AP33647
 Hose Kit = AP33458

 Description:
 Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks Total:


 Length: (feet)
 FM-3090 37 16 0 5 11 33 102

Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 3 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder



Lockdown Arms:

Dimension (inches) HWH Part # С D Quantity Room # В AP34480 6 192 96 n/a n/a n/a n/a 126

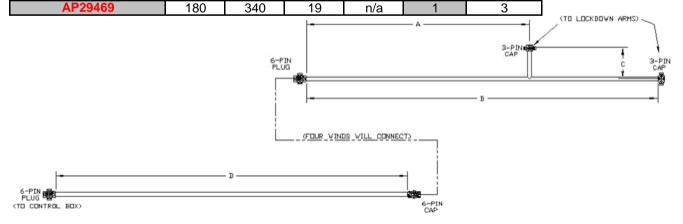

2005 and 2006 40D

Harness connecting lockdown arm control module for Room #1 to pump = Harness connecting lockdown arm control module for Room #2 to pump = Harness connecting lockdown arm control module for Room #3 to pump = Harness connecting lockdown arm control module for Room #4 to pump = Harness connecting lockdown arm control module for Room #1 to panel = Harness connecting lockdown arm control module for Room #3 to panel =

no lock-arms 250" n/a AP29292 432" **AP29288** 480"

160"

Harness from Dewald bedslide to HWH pump:


(used with room #2)

Other	Darte
Other	ганэ

Description:	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	1	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	2	HWH	P14291
Bed Slide Mechanism	FM-1871	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809


- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system & corrected bed slide mechanism part number NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Corrected leveling system AP number NS, 6-15-04
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04
 - 9. Changed dinette slide switch sensor harness (room #1) ECN #3140 NS 9-27-04
 - 10. Updated room #1 with 192" harness per HWH NS,10-11-04
 - 11. Updated per ECN #3429, all dinette slide outs take same lock down arm harness NS. 4-22-05
 - 12. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 13. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05

40E & 40G Slide Components (standard 325 series)

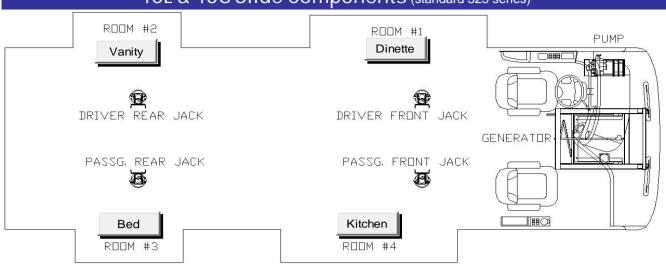

Leveling System = AP33641					Но			
Description:	Room #1	Room #2	Room #3	Room #4	Generator	Front Jacks	Rear Jacks	Total:
Length: (feet)	FM-3090	36	41	16	5	11	33	142

Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 4 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

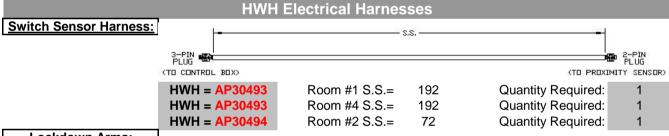

Lockdown Arms:

Dimension (inches)

			()				
HWH Part #	Α	В	C	D	Quantity	Room #	
AP34480	6	192	96	n/a	1	1	
AP30495	n/a	n/a	n/a	126	2	1 & 2	
AP29469	180	340	19	n/a	1	4	
AP29305	63	159	13	n/a	1	2	475 1 50475 W. 4046
6-PIN PLUS		6-P	-	OS VILL CONNEC	- A	3-PIN CAP	C S-PIN CAP

(TO CONTROL BOX)

2005 and 2006 40E 40G

Harness connecting lockdown arm control module for Room #1 to pump = 160" Harness connecting lockdown arm control module for Room #2 to pump = 430" Harness connecting lockdown arm control module for Room #3 to pump = no lock-arms Harness connecting lockdown arm control module for Room #4 to pump = 250" Harness connecting lockdown arm control module for Room #1 to panel = 432"

AP29288 Harness connecting lockdown arm control module for Room #2 & #4 to panel = 480"

Harness from Dewald bedslide to HWH pump: 500"

(used with room #3)


Other Parts

<u>Description:</u>	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	2	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3.5	HWH	P14291
Bed Slide Mechanism	FM-1871	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804

- Revisions: 1. Released to HWH and production NS, 4-22-04
 - 2. Added HWH part number for leveling system & corrected bed slide mechanism part number NS, 5-14-04
 - 3. Added "Harness from Dewald bedslide to HWH pump" for room #2 NS, 6-10-04
 - 4. Added semi-auto levling as the standard for Mandalay (two possible kits for every coach now)
 - 5. Changed hose length for room #1 to reference FM-3090 NS, 7-2-04
 - 6. Changed multiplex harness length from 8' to 12' for touch pad NS, 7-8-04
 - 7. Added the HWH hose kit part number NS, 7-13-04
 - 8. Added the harnesses that connect the lockdown control module to the panel NS, 7-26-04
 - 9. Changed dinette slide switch sensor harness (room #1) ECN #3140 NS 9-27-04
 - 10. Updated room #1 with 192" harness per HWH NS,10-11-04
 - NS, 4-22-05 11. Updated per ECN #3429, all dinette slide outs take same lock down arm harness
 - 12. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 13. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05

AP29292

40F Slide Components (standard 325 series)

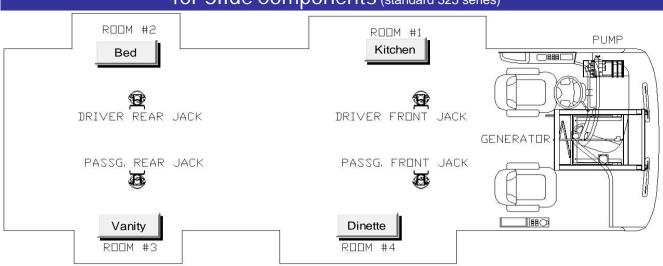


 Leveling System = AP34284
 Hose Kit = AP33443

 Description:
 Room #1 Room #2 Room #3 Room #4 Generator Front Jacks Rear Jacks Total:

 Length: (feet)
 16
 41
 36
 FM-3090
 5
 11
 33
 142

Notes: The hose kit will include the following: touch panel w/ 12' multiplex harness that connects to pump, 12K lb front and rear jacks with cross ties, power unit with valving for 4 room extensions and one generator extension, automatic leveling sensors, & a sync cylinder

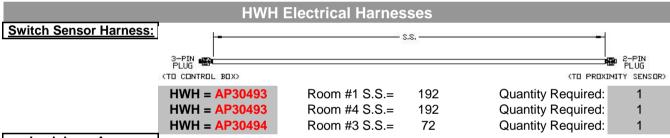

Lockdown Arms:

<u>Dimension</u> (inches)

				<u>ori</u> (inches)				
HW	/H Part #	Α	В	C	D	Quantity	Room #	
Al	P34289	180	340	19	n/a	1	1	
Al	P30495	n/a	n/a	n/a	126	2	3 & 4	
Al	P34480	6	192	96	n/a	1	4	
Al	P29305	63	159	13	n/a	1	3	(TO LOCKDOWN ARMS) <
6-PIN PLUG			6-FPL	-	DS VILL CONNE	-	3-PIN CAP	C 3-PIN
(TO CONTROL BO	OX)					6-PIN CAP		

2005 and 2006 40F

250" Harness connecting lockdown arm control module for Room #1 to pump = Harness connecting lockdown arm control module for Room #2 to pump = no lock-arms Harness connecting lockdown arm control module for Room #3 to pump = 430" 250" Harness connecting lockdown arm control module for Room #4 to pump =

AP29292 Harness connecting lockdown arm control module for Room #1 to panel = 432" **AP29288** Harness connecting lockdown arm control module for Room #3 & #4 to panel = 480"

Harness from Dewald bedslide to HWH pump: 500"


(used with room #2)

Other Parts

<u>Description:</u>	Print #	Quan.	<u>Vendor</u>	Vendor #
36" Slide Mechanism	n/a	2	HWH	AP25893
18" Slide Mechanism	n/a	2	HWH	AP26810
Hardware Kit	FM-2158	4	HWH	AP27968
Angle, Room Mount (short)	FM-1806	1	HWH	AP27499
Angle, Room Mount (long)	FM-1806	1	HWH	P26223
Cylinder, Bed Slide	n/a	1	HWH	AP27411
Sync Cylinder	n/a	1	HWH	AP29839
Nylon Strip (beveled)	n/a	3.5	HWH	P14291
Bed Slide Mechanism	FM-1871	1	Power Gear	
Angle, Room Mount (short)	FM-2158	1	HWH	P29809
Angle, Room Mount (long)	FM-2158	1	HWH	AP29804

- Revisions: 1. Added on 8-3-04 NS
 - 2. Chagned lock down harness for room #4 (no units built yet) 9-21-04
 - 3. Changed dinette slide switch sensor harness (room #4) ECN #3140 NS 9-27-04
 - 4. Updated room #4 with 192" harness and added leveling system kit # per HWH NS,10-11-04
 - 5. Adjusted room #1 and #4 lockdown arm harnesses for better wire routing NS, 12-28-04 ecn #3304
 - 6. Updated per ECN #3429, all dinette slide outs take same lock down arm harness NS, 4-22-05
 - 7. Modified hose length from sync cylinder to pump; see FM-3090-1 (ECN #3477) NS, 6-2-05
 - 8. Changed length of AP29288, was 672" now 480" (ECN #3619) NS, 8-24-05


30F HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

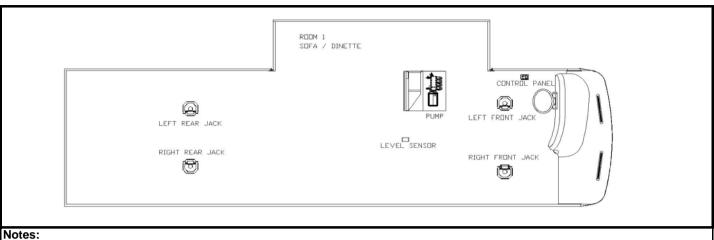

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8267	
Pump	5-Function,1 Room, Jacks	1		7242	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 48	Pump to Room 1	2	Green	7306	127 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			
1	Change hose length fro room 1 from 32 to 4	8 (10/19/05	MJK)		


30Q HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

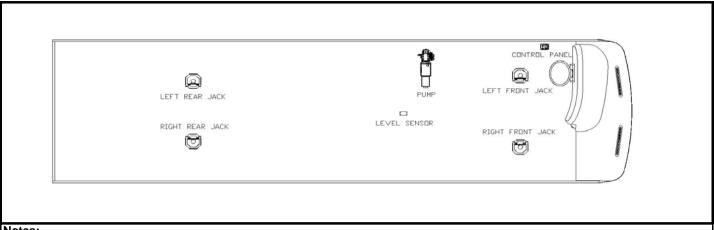

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	ı	T	
		Revisions			
		I C VISIOIIS			
	I				


31D HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

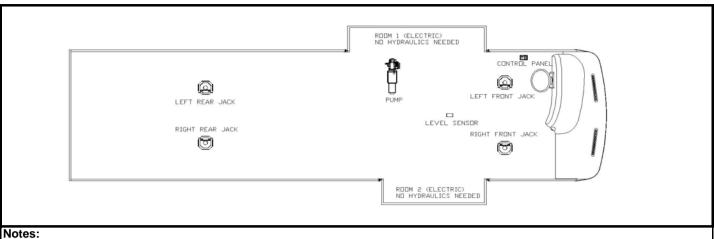

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	ı	T	
		Revisions			
		I C VISIOIIS			
	I				


31H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

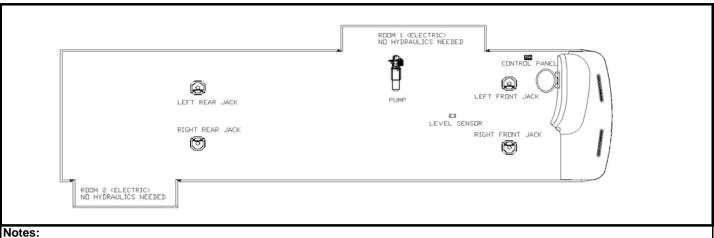

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8252	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	ı	T	
		Revisions			
		I C VISIOIIS			
	I				


32R HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

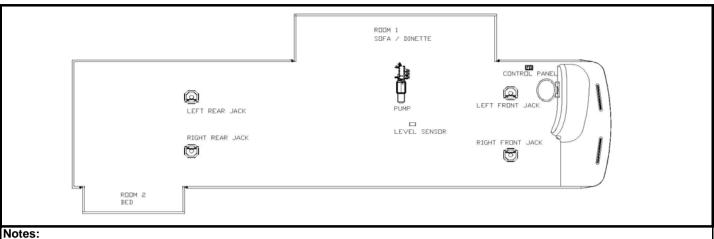

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8254	
Pump	6-Function, 2 Rooms, Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, 364	Pump to Room 2	2	Purple	7300	305 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			


33H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

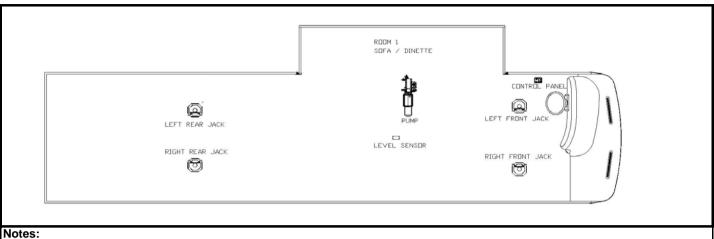

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8270	
Pump	5-Function,1 Room, Jacks	1		7242	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	ı		
		Revisions			
		IVE AISIOIIS			


34N HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

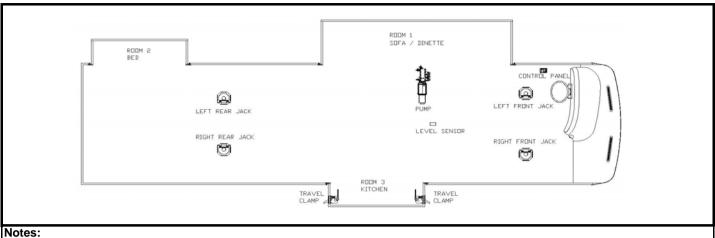

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8269	
Pump	7-Function, 3 Rooms, Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A		N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	Green	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	Green	N/A	N/A
Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, 364	Pump to Room 2	2	Purple	7300	305 / Passenger Side
Hose w90, 110	Pump to Room 3	2	Gray	7299	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
		Revisions			


30F HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

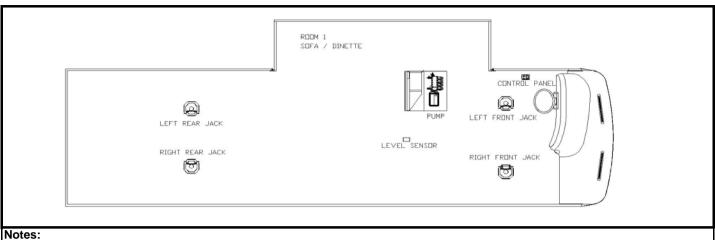

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	N/A	8267	
Pump	5-Function,1 Room, Jacks	1	N/A	7242	
Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 48	Pump to Room 1	2	Green	TBD	127 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
		Revisions			
1	Change hose length fro room 1 from 32 to 4		M IK)		
·	Change hose length no room 1 hom 32 to 4	0 (10/13/03	IVIOIN)		
	J				


30Q HURRICANE (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

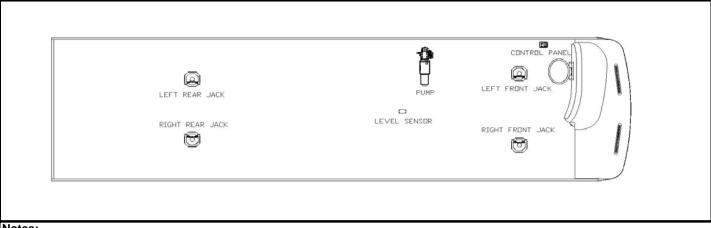

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	N/A	8252	
Pump	4-Function, Jacks	1	N/A	7239	
Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options	ı		
		Revisions			
		I/EAISIO112			
<u>I</u>	<u>l</u>				


31D HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

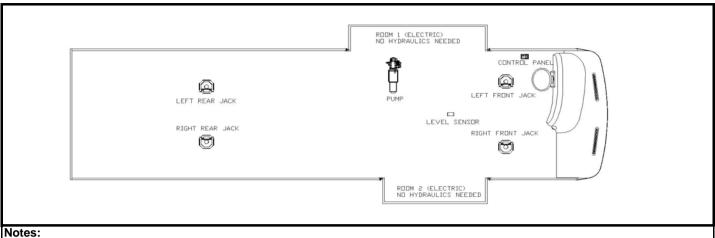

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	N/A	8252	
Pump	4-Function, Jacks	1	N/A	7239	
Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options	1		
			<u> </u>		
		Revisions			
		1/6/1910119			


31H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT**

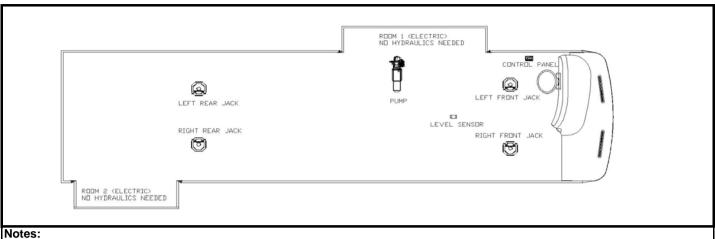

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	N/A	8252	
Pump	4-Function, Jacks	1	N/A	7239	
Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
		Davisiana			
		Revisions			


32R HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

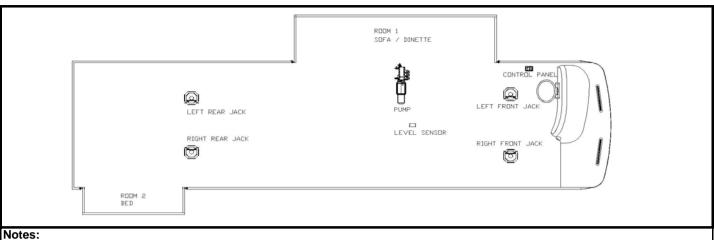

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Kit	Item, Length	Description / Location	Qty	Color	Vendor PN	
Measuring from inside of		(Items listed below)		N/A	8254	
Measuring from inside of	Pump	6-Function, 2 Rooms, Jacks	1	N/A	7243	
Level Sensor	Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Flow Divider	Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Hose, 140 Hose, 240 Pump to Jack, Left Front Hose, 240 Pump to Jack, Left Rear Pump to Jack, Right Front Hose, 280 Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Jack, Right Rear Pump to Flow Divider N/A Hose, N/A Flow divider to front slide, Room 1 N/A Hose, N/A Flow divider to rear slide, Room 1 N/A Hose, 32 Pump to Room 1 Pump to Room 1 Pump to Room 2 Pump to Room 3 N/A Read N/A N/A N/A N/A N/A Red N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Hose, 240	Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 180	Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 280	Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, N/A Pump to Flow Divider N/A TBD N/A N/A N/A N/A Hose, N/A Flow divider to front slide, Room 1 N/A TBD N/A N/A N/A N/A Hose, N/A Flow divider to rear slide, Room 1 N/A TBD N/A N/A N/A Hose, 32 Pump to Room 1 2 Green 7298 127 / Drivers Side Hose, 364 Pump to Room 2 Purple 7300 305 / Passenger Side Hose, N/A Pump to Room 3 N/A Gray N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A TBD N/A N/A N/A Travel Clamp Two per Slide N/A N/A HWH N/A	Hose, 180	Pump to Jack, Right Front	2	White		
Hose, N/A	Hose, 280			Yellow	7297	
Hose, N/A Flow divider to rear slide, Room 1 N/A TBD N/A N/A N/A Hose, 32 Pump to Room 1 2 Green 7298 127 / Drivers Side Hose, 364 Pump to Room 2 2 Purple 7300 305 / Passenger Side Hose, N/A Pump to Room 3 N/A Gray N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A TBD N/A N/A N/A Travel Clamp Two per Slide N/A N/A HWH N/A N/A HWH N/A	Hose, N/A	Pump to Flow Divider		TBD	N/A	N/A
Hose, 32	Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, 364		Flow divider to rear slide, Room 1	N/A	TBD	N/A	
Hose, N/A Pump to Room 3 N/A Gray N/A N/A N/A Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A Hose, N/A Pump to Generator Slide N/A TBD N/A N/A Travel Clamp Two per Slide N/A N/A HWH N/A N/A HWH N/A	Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, N/A Pump to Room 4 N/A Red N/A N/A N/A N/A Hose, N/A Pump to Generator Slide N/A TBD N/A N/A N/A Travel Clamp Two per Slide N/A N/A HWH N/A N/A HWH N/A N/A HWH N/A N/A N/A HWH N/A N/A N/A HWH N/A N/A N/A HWH N/A N/A N/A HWH N/A N/A N/A N/A HWH N/A N/A N/A HWH N/A N/A N/A N/A HWH N/A N/A N/A HWH N/A N/A N/A N/A HWH N/A N/A N/A N/A HWH N/A N/A N/A N/A HWH N/A N/A N/A N/A N/A N/A N/A N/A N/A N/A	Hose, 364	Pump to Room 2		Purple		
Hose, N/A Pump to Generator Slide N/A TBD N/A N/A Travel Clamp Two per Slide N/A N/A HWH N/A Options				Gray	N/A	
Travel Clamp Two per Slide N/A N/A HWH N/A Options					N/A	N/A
Options Options			N/A		N/A	N/A
	Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
Revisions			Options	ı		
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
Revisions						
			Revisions			
		 	I TO VIOIDIIS			


33H HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

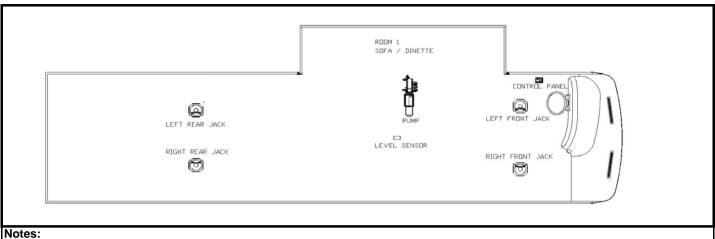

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	N/A	8270	
Pump	5-Function,1 Room, Jacks	1	N/A	7242	
Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
	Ι	- Pilolio			
		Revisions			


34N HURRICANE (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

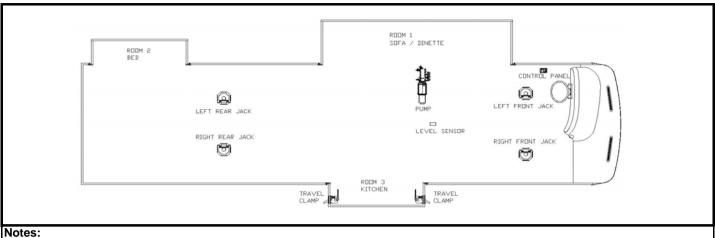

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket.
 - b) 22.5 Tires: Bottom hole in jack to bottom hole in bracket.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	N/A	8269	
Pump	7-Function, 3 Rooms, Jacks	1	N/A	7301	
Jack	12,000 lbs, 16" Stroke	4	N/A	7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1	N/A	2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1	N/A	7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	N/A	N/A	N/A	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 180	Pump to Jack, Right Front	2	White	7296	
Hose, 280	Pump to Jack, Right Rear	2	Yellow	7297	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 32	Pump to Room 1	2	Green	7298	127 / Drivers Side
Hose, 364	Pump to Room 2	2	Purple	7300	305 / Passenger Side
Hose, 110	Pump to Room 3	2	Gray	7299	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
		Options	Γ	Ι	
		Revisions			


36A Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

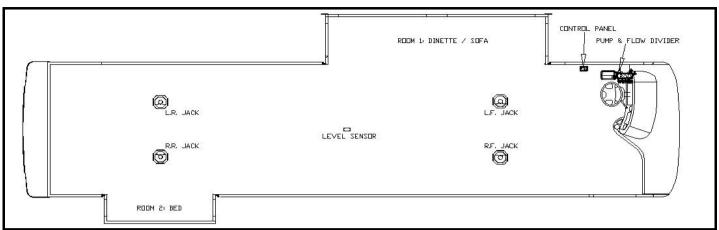

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8279			
Pump	6-Function, 2 Rooms & Jacks	1		7318			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted	1		7351	hoses where they attach to		
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.		
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307			
Hose, 140	Pump to Jack, Right Front	2	White	7308			
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309			
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure		
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side		
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Hose, 450	Pump to Room 2	2	Purple	TBD	325 / Drivers Side		
	Pump to Room 3		Gray				
	Pump to Room 4		Red				
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	2		HWH	N/A		
		Ontions					
	T	Options	l				
		Revisions					
1	ECN #3714, added the note on hose fittings	for the 3" in	floor slide (ı	now 90 degree t	fittings)		
2	ECN #3772, changed dinette slide hoses to						
3	3 ECN #3845, flow divider is replaced by the synchronizing cylinder (all field units as well)						


37A Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

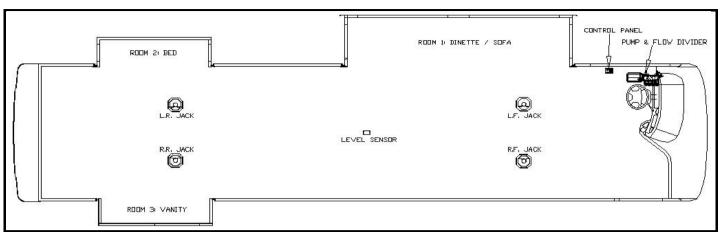

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8280			
Pump	7-Function, 3 Rooms & Jacks	1		7319			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted inside pump compartment	1		7351	hoses where they attach to		
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.		
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307			
Hose, 140	Pump to Jack, Right Front	2	White	7308			
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309			
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure		
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side		
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Hose, 420	Pump to Room 2	2	Purple	7313	325 / Drivers Side		
Hose w90, 450	Pump to Room 3	2	Gray	7314	355 / Passenger Side		
	Pump to Room 4	N/A	Red				
	Pump to Generator Slide	N/A					
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
		Options					
		Revisions					
1	ECN #3714, added the note on hose fittings	for the 3" ir	floor slide (ı	now 90 degree	fittings)		
2	ECN #3772, changed dinette slide hoses to	mech 2, no	w 16" longer	for routing			
3	ECN #3845, flow divider is replaced by the s	ynchronizin	g cylinder (a	ll field units as v	vell)		


38C Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

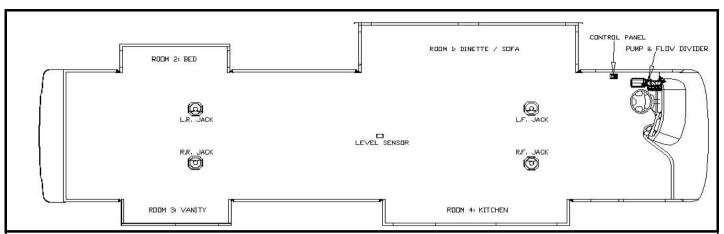

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8278				
Pump	8-Function, 4 Rooms & Jacks	1		7302				
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of			
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end			
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic			
Sync Cylinder	Mounted	1		7351	hoses where they attach to			
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.			
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307				
Hose, 140	Pump to Jack, Right Front	2	White	7308				
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309				
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure			
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side			
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side			
	Pump to Room 1	N/A	Green					
Hose, 420	Pump to Room 2	2	Purple	7313	325 / Drivers Side			
Hose w90, 450	Pump to Room 3	2	Gray	7314	355 / Passenger Side			
Hose w90, 200	Pump to Room 4	2	Red	7315	146 / Passenger Side			
	Pump to Generator Slide	N/A			N/A			
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A			
		Options						
		Revisions						
1	ECN #3714, added the note on hose fittings				rittings)			
2	ECN #3772, changed dinette slide hoses to				10			
3	ECN #3845, flow divider is replaced by the s	ynchronizin	g cylinder (a	II field units as w	/ell)			


36A Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

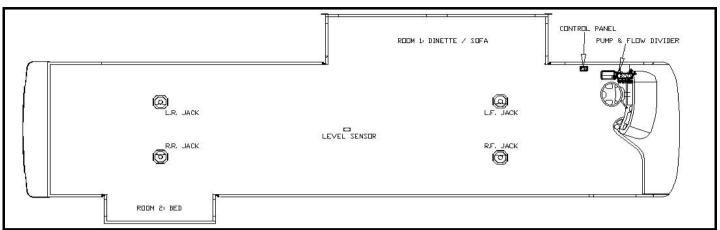

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8279			
Pump	6-Function, 2 Rooms & Jacks	1		7318			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted	1		7351	hoses where they attach to		
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.		
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307			
Hose, 140	Pump to Jack, Right Front	2	White	7308			
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309			
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure		
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side		
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Hose, 450	Pump to Room 2	2	Purple	TBD	325 / Passenger Side		
	Pump to Room 3		Gray				
	Pump to Room 4		Red				
	Pump to Generator Slide	N/A			N/A		
Travel Clamp	(two per slide, except the bed slide)	2		HWH	N/A		
		Options					
		•					
		D					
1		Revisions	floor olide /	2011 00 dog===	Fitting and		
<u>1</u> 2	ECN #3714, added the note on hose fittings ECN #3772, changed dinette slide hoses to	moch 2 no	1 HOOF SHIDE (for routing	iittiiigs)		
					wall)		
<u> </u>	3 ECN #3845, flow divider is replaced by the synchronizing cylinder (all field units as well)						


36B Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

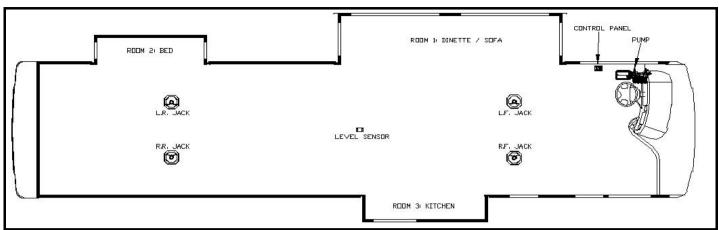

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8310	
Pump	7-Function, 3 Rooms & Jacks	1		7319	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted	1		7351	hoses where they attach to
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309	
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 420	Pump to Room 2	2	Purple	7313	325 / Drivers Side
Hose w90, 200	Pump to Room 3	2	Red	7315	146 / Passenger Side
	Pump to Room 4	N/A			
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A
		Options			
		D			
		Revisions			


37A Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

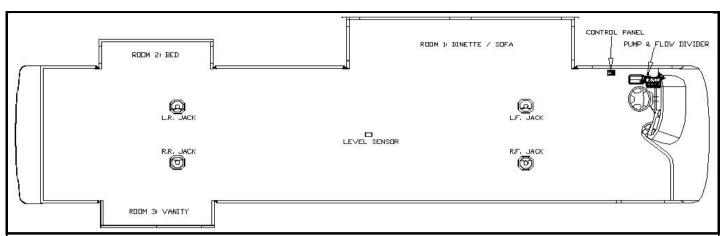

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1 & #3 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN			
Kit	(Items listed below)	1		8280			
Pump	7-Function, 3 Rooms & Jacks	1		7319			
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted	1		7351	hoses where they attach to		
Hose, 126	Pump to Jack, Left Front	2	Brown	7246	the slide mechanism.		
Hose, 364	Pump to Jack, Left Rear	2	Orange	7307			
Hose, 140	Pump to Jack, Right Front	2	White	7308			
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309			
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure		
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side		
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side		
	Pump to Room 1	N/A	Green				
Hose, 420	Pump to Room 2	2	Purple	7313	325 / Drivers Side		
Hose w90, 450	Pump to Room 3	2	Gray	7314	355 / Passenger Side		
	Pump to Room 4	N/A	Red				
	Pump to Generator Slide	N/A					
Travel Clamp	(two per slide, except the bed slide)	4		HWH	N/A		
		Options					
		Revisions					
1	ECN #3714, added the note on hose fittings		floor slide (now 90 degree	fittings)		
2	ECN #3714, added the note of nose fittings ECN #3772, changed dinette slide hoses to				iittii igə <i>j</i>		
3					vell)		
3 ECN #3845, flow divider is replaced by the synchronizing cylinder (all field units as well)							


38C Valencia EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

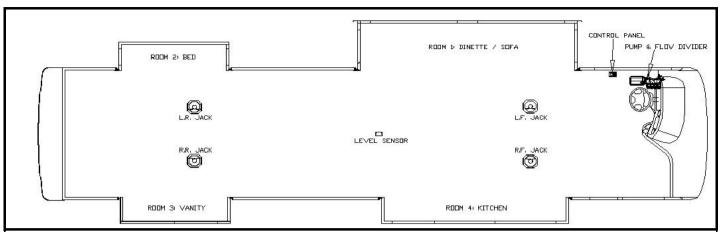

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on lower hat section flanges or square tube.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Otv	Color	Vendor PN		
	(Items listed below)	Qty 1	COIOI	8278		
Pump	8-Function, 4 Rooms & Jacks	1		7302		
Jack	17,000 lbs, 18" Stroke	4		7302	Measuring from inside of	
Control Panel	Located to the left of the drivers seat	4 1		2057	firewall, this is the end	
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic	
Sync Cylinder	Mounted	1		7351	-	
Hose, 126		2	Drouge	7351	hoses where they attach to the slide mechanism.	
	Pump to Jack, Left Front	2	Brown		the slide mechanism.	
Hose, 364	Pump to Jack, Left Rear		Orange	7307		
Hose, 140	Pump to Jack, Right Front	2	White	7308		
Hose, 364	Pump to Jack, Right Rear	2	Yellow	7309		
Hose, 140	Pump to synchronizing manifold	2	Green	7311	Mounts to bracket on structure	
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side	
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side	
	Pump to Room 1	N/A	Green			
Hose, 420	Pump to Room 2	2	Purple	7313	325 / Drivers Side	
Hose w90, 450	Pump to Room 3	2	Gray	7314	355 / Passenger Side	
Hose w90, 200	Pump to Room 4	2	Red	7315	146 / Passenger Side	
	Pump to Generator Slide	N/A			N/A	
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A	
		Options				
		Revisions				
1	ECN #3714, added the note on hose fittings	for the 3" in	floor slide (ı	now 90 degree f	fittings)	
	ECN #3772, changed dinette slide hoses to r					
	ECN #3845, flow divider is replaced by the synchronizing cylinder (all field units as well)					
	(an indicate and an indicate and indicate an					


32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

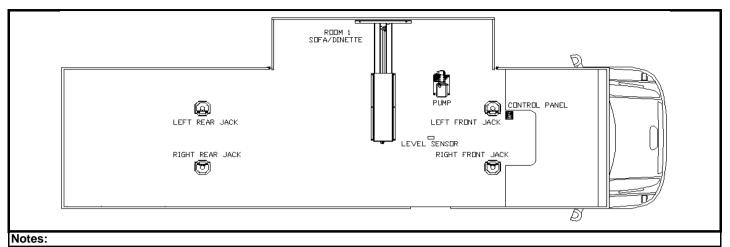

1) Jacks mount 2nd hole from top to top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8264	Managerian from back of oak
Pump	5-Function,1 Room, Jacks	1		7242	
Jack	12,000 lbs, 16" Stroke	4		7214	 Measuring from back of cab floor, this is the end location
Control Panel	Located to the right of the drivers seat	1		2057	of the hydraulic hoses where they attach to the slide mechanism.
Level Sensor	Attached to bottom of structure	1		7196	
Flow Divider	Mounted inside pump compartment	N/A		N/A	
Hose, 84	Pump to Jack, Left Front	2	Brown	7287	
Hose, 256	Pump to Jack, Left Rear	2	Orange	7249	
Hose, 100	Pump to Jack, Right Front	2	White	7288	
Hose, 223	Pump to Jack, Right Rear	2	Yellow	7289	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	7254	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1	Made Jack, Control Panel, Level Sensor & hoses standard			JB	11/17/2005


33K KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

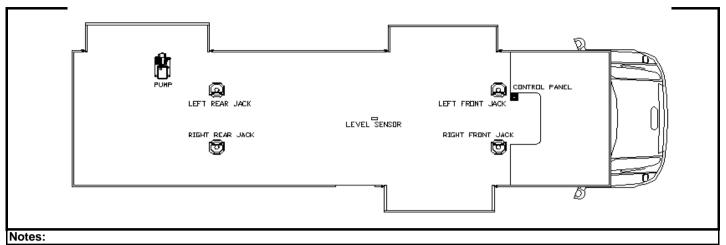

1) Jacks mount 2nd hole from top to top mounting plate hole.


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
Kit	(Items listed below)	1		8274	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	
Hose, 300	Pump to Jack, Left Front	2	Brown	7247	
Hose, 100	Pump to Jack, Left Rear	2	Orange	7248	
Hose, 300	Pump to Jack, Right Front	2	White	7304	
Hose, 126	Pump to Jack, Right Rear	2	Yellow	7305	
	F	Revisions			

34G KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

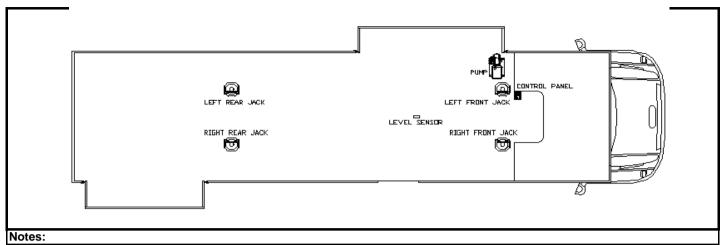


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8275	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	
Hose, 84	Pump to Jack, Left Front	2	Brown	7287	
Hose, 256	Pump to Jack, Left Rear	2	Orange	7249	
Hose, 100	Pump to Jack, Right Front	2	White	7288	
Hose, 269	Pump to Jack, Right Rear	2	Yellow	7252	
	·				
	F	Revisions			
			<u> </u>		
				·	

35B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

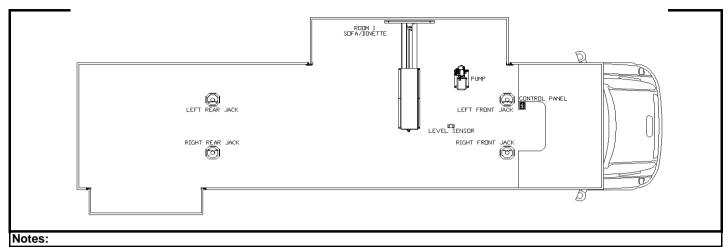


Item, Length	Description / Location	Qty	Color	Vendor PN	
10				2004	
Kit	(Items listed below)	1		8264	
Pump	5-Function,1 Room, Jacks	1		7242	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Control Panel	Located to the right of the drivers seat	1		2057	of the hydraulic hoses where
Level Sensor	Attached to bottom of structure	1		7196	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, 84	Pump to Jack, Left Front	2	Brown	7287	mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	
Hose, 100	Pump to Jack, Right Front	2	White	7288	
Hose, 269	Pump to Jack, Right Rear	2	Yellow	7252	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	7254	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
				-	D.1
Revisions	Description			Ву	Date

32B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

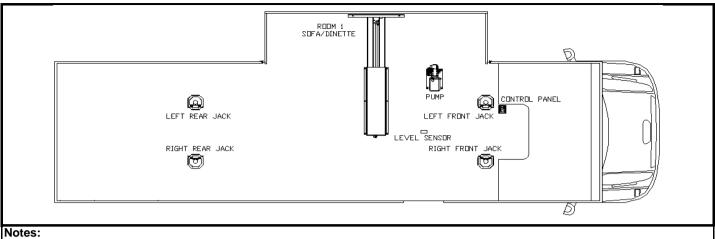


Item, Length	Description / Location	Qty	Color	Vendor PN	
	·				
Kit	(Items listed below)	1		8264	1
Pump	5-Function,1 Room, Jacks	1		7242	Magaziring from book of oab
Jack	12,000 lbs, 16" Stroke	4		7214	 Measuring from back of cab floor, this is the end location
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 84	Pump to Jack, Left Front	2	Brown	7287	mechanism.
Hose, 223	Pump to Jack, Left Rear	2	Orange	7249	
Hose, 100	Pump to Jack, Right Front	2	White	7288	
Hose, 223	Pump to Jack, Right Rear	2	Yellow	7289	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	7254	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1	Made Jack, Control Panel, Level Sensor & h	oses stand	ard	JB	11/17/2005
•	made casing control is already better control with	JUDO OLAITA	<u></u>	- 02	1.7.172000
	I .				ı

33K KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

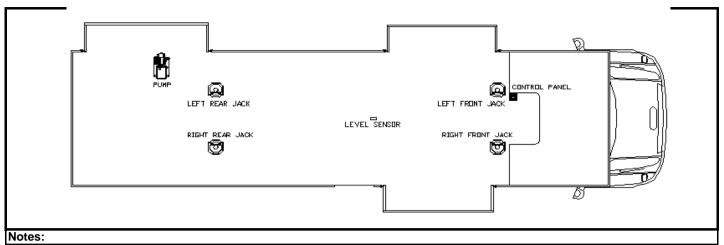


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	N/A	HWH	N/A
		Options			
Kit	(Items listed below)	1		8274	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	
Hose, 300	Pump to Jack, Left Front	2	Brown	7247	
Hose, 100	Pump to Jack, Left Rear	2	Orange	7248	
Hose, 300	Pump to Jack, Right Front	2	White	7304	
Hose, 126	Pump to Jack, Right Rear	2	Yellow	7305	
	F	Revisions			

34G KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

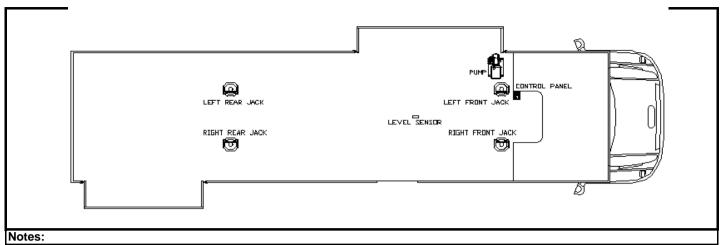


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
					floor, this is the end location
					of the hydraulic hoses where
					they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8275	
Pump	4-Function, Jacks	1		7239	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	
Hose, 84	Pump to Jack, Left Front	2	Brown	7287	
Hose, 223	Pump to Jack, Left Rear	2	Orange	7249	
Hose, 100	Pump to Jack, Right Front	2	White	7288	
Hose, 269	Pump to Jack, Right Rear	2	Yellow	7252	
	i i i i i i i i i i i i i i i i i i i	Revisions			

35B KODIAK (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

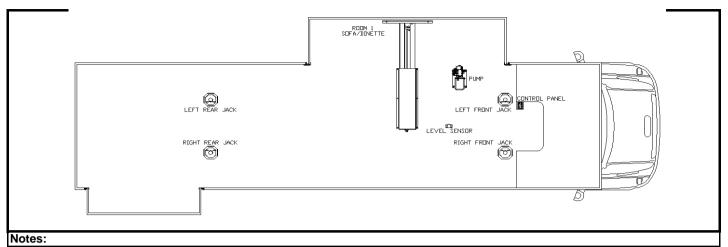

Item, Length		04.	Color	Vander DN	
	Description / Location	Qty	Color	Vendor PN	4
Kit	(Items listed below)	1		8264	-
Pump	5-Function,1 Room, Jacks	1		7242	-
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from back of cab
Control Panel	Located to the right of the drivers seat	1		2057	floor, this is the end location
Level Sensor	Attached to bottom of structure	1		7196	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide
Hose, 84	Pump to Jack, Left Front	2	Brown	7287	mechanism.
Hose, 240	Pump to Jack, Left Rear	2	Orange	7295	1
Hose, 100	Pump to Jack, Right Front	2	White	7288	1
Hose, 269	Pump to Jack, Right Rear	2	Yellow	7252	1
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	7254	80 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
·	·				
		Options			
D	D			D	Dete
Revisions	Description			Ву	Date


32R WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

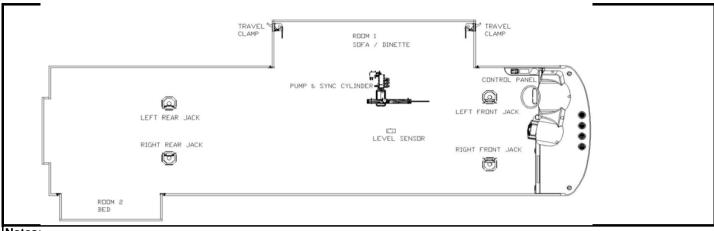

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8283	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
		Revisions	. = 2.1 2	,	
1	Flow divider replaces sync cylinder (addendu	um to origina	al ECN 3706)	

34A WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

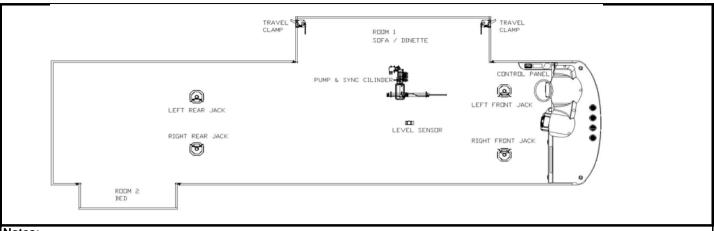


- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8284	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	301 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
		Revisions	15011050		
1	Flow divider replaces sync cylinder (addende	um to origin	ai ECN 3706	5)	

34N WINDSPORT (19.5) TIRES 34N MAGELLAN (22.5) TIRES

EQUALIZER JACKS (FULLY AUTOMATIC)


STANDARD ON THIS UNIT

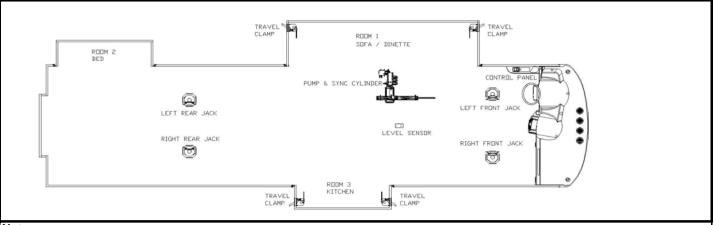

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8285	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	323 / Drivers Side
Hose w90, 110	Pump to Room 3	1	Gray	7299	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	Flow divider replaces sync cylinder, add 90 f	itting to "Pu	mp to Room	3" (addendum t	to original ECN 3706)
					_

35W WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT**

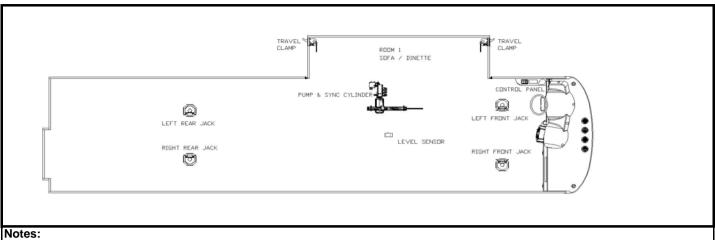


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Itom Longth	Description / Location	Qty	Color	Vendor PN			
Item, Length Kit	(Items listed below)		COIOI	8286			
Pump	5-Function, 1 Room & Jacks	1 1		7242			
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of		
Control Panel	Located to the left of the drivers seat	4		2057	firewall, this is the end		
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic		
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to		
Hose, 160	Pump to Jack, Left Front	1	Brown	7320	the slide mechanism.		
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	the since mechanism.		
Hose, 200	Pump to Jack, Right Front	1	White	7321			
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297			
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment		
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side		
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side		
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A		
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A		
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A		
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A		
Hose, N/A	Pump to Generator Slide	N/A	1100	N/A	N/A		
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A		
	por o do (o dop r dod o do)						
		Options					
		Revisions					
1	Omit hoses erroneously entered for room 2.						
2	Flow divider replaces sync cylinder (addendu	um to origina	al ECN 3706)			

36A WINDSPORT (19.5) TIRES 36A MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)

STANDARD ON THIS UNIT

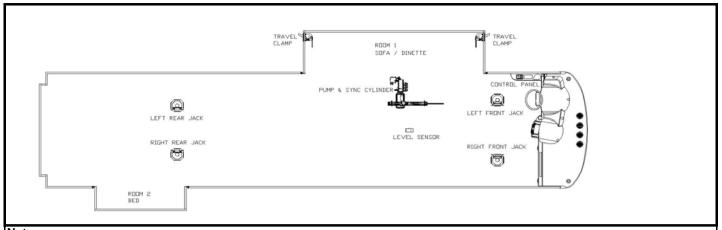


- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8287	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	301 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
		D			
4		Revisions	-LEON 0700	<u> </u>	
1	Flow divider replaces sync cylinder (addendu	um to origin	ai ECN 3/06)	

36E WINDSPORT (19.5) TIRES 36E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)

EQUALIZER JACKS (FULLY AUTOMA STANDARD ON THIS UNIT

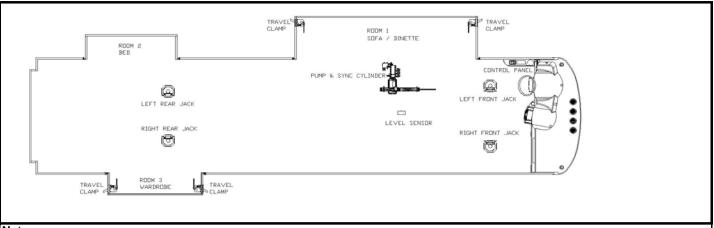


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8288	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	319 / Drivers Side
Hose w/90, 364	Pump to Room 3	1	Gray	7324	319 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	4		HWH	N/A
		Options			
		Revisions			
1	Flow divider replaces sync cylinder, add 90 f	itting to "Pu	mp to Room	3" (addendum t	to original ECN 3706)

36K WINDSPORT (19.5) TIRES 36K MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)

STANDARD ON THIS UNIT

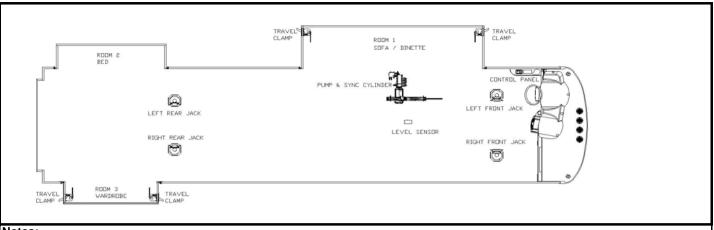


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8289	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	340 / Drivers Side
Hose w/90, 364	Pump to Room 3	1	Gray	7324	323 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	4		HWH	N/A
		Options			
		Davisiers			
4		Revisions	mn to Door	2" (addandura 4	en original ECN 2706\
1	Flow divider replaces sync cylinder, add 90 f	itting to Pu	iiip to Room	s (addendum i	o original ECN 3706)
					_

36Z WINDSPORT (19.5) TIRES 36Z MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)


STANDARD ON THIS UNIT

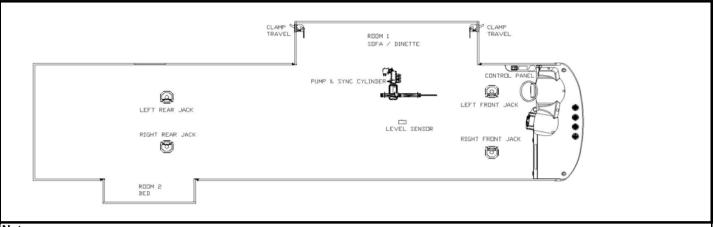

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1	00.0.	8290	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	319 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
		Revisions			
1	Flow divider replaces sync cylinder (addendu	um to origina	al ECN 3706)	


38E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

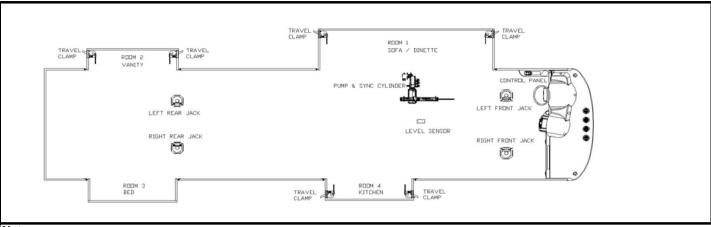

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qtv	Color	Vendor PN	
Kit	(Items listed below)	1	33.5.	8291	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 282	Pump to Jack, Left Rear	1	Orange	7325	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 318	Pump to Jack, Right Rear	1	Yellow	7326	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose w/90, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose w/90, 110	Sync cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	356 / Drivers Side
Hose, 396	Pump to Room 3	1	Gray	7327	344 / Passenger Side
Hose w/90, 110	Pump to Room 4	1	Red	7328	160 / Passenger Side
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	6		HWH	N/A
		Options			
		D! !			
1		Revisions	mn to Door	4" (addand::::::	to original ECN 2706)
1	Flow divider replaces sync cylinder, add 90 f	itting to "Pu	rnp to Room	4 (addendum	to original ECN 3706)


32R WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

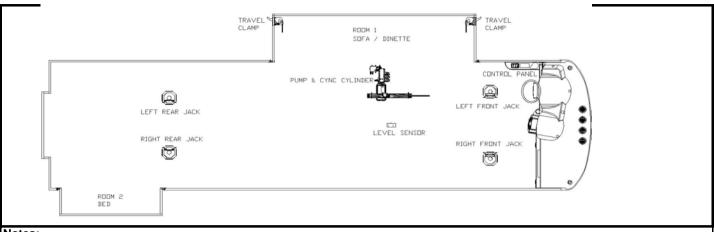

- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8283	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted behind pump compartment	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 32	Pump to sync cylinder	2	Green	7298	Inside pump compartment
Hose, 110	Sync cylinder to front slide, Room 1	2	Green	2392	95 / Drivers Side
Hose, 110	Sync Cylinder to rear slide, Room 1	2	Green	2392	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	310 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
		Danisian			
	 	Revisions			
					_

34A WINDSPORT (19.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

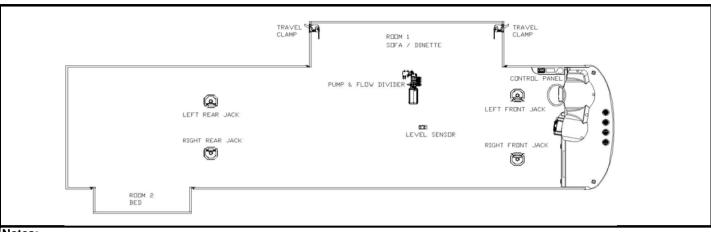


- Notes:
- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8284	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	301 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
<u> </u>					
		Revisions			
1					

34N WINDSPORT (19.5) TIRES 34N MAGELLAN (22.5) TIRES

EQUALIZER JACKS (FULLY AUTOMATIC)


STANDARD ON THIS UNIT

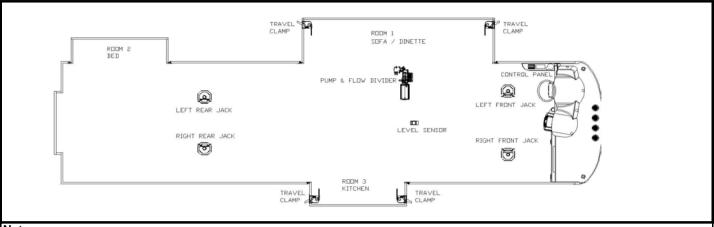

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8285	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	323 / Drivers Side
Hose, 110	Pump to Room 3	1	Gray	7299	160 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	4		HWH	N/A
		Options			
		Davisiers			
		Revisions			
	<u>l</u>				

35W WINDSPORT (19.5) TIRES **EQUALIZER JACKS (FULLY AUTOMATIC)** STANDARD ON THIS UNIT

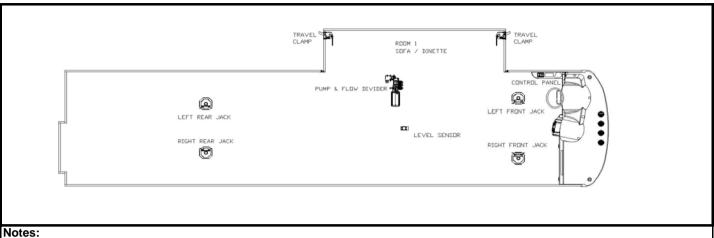


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qtv	Color	Vendor PN	
Kit	(Items listed below)	1	33.5.	8286	
Pump	5-Function, 1 Room & Jacks	1		7242	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 160	Pump to Jack, Left Front	1	Brown	7320	the slide mechanism.
Hose, 240	Pump to Jack, Left Rear	1	Orange	7295	
Hose, 200	Pump to Jack, Right Front	1	White	7321	
Hose, 280	Pump to Jack, Right Rear	1	Yellow	7297	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
•					
		Options			
		Revisions			
1	Omit hoses erroneously entered for room 2.				

36A WINDSPORT (19.5) TIRES 36A MAGELLAN (22.5) TIRES

EQUALIZER JACKS (FULLY AUTOMATIC)

STANDARD ON THIS UNIT

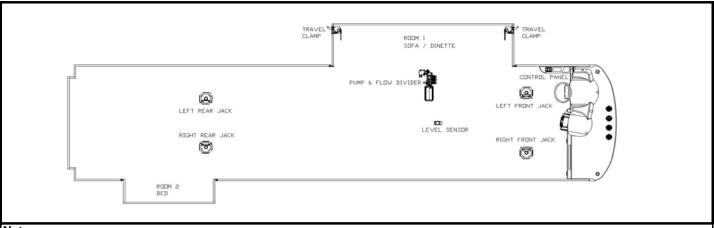


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8287	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	301 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
	T	Options		Π	Π
		Davia!	<u> </u>		
		Revisions			
	L				

36E WINDSPORT (19.5) TIRES 36E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)

STANDARD ON THIS UNIT

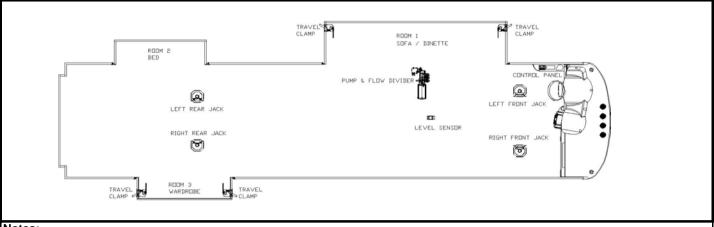


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN				
Kit	(Items listed below)	1		8288				
Pump	7-Function, 3 Rooms & Jacks	1		7301				
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of			
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end			
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic			
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to			
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.			
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322				
Hose, 180	Pump to Jack, Right Front	1	White	7296				
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323				
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment			
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side			
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side			
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A			
Hose, 364	Pump to Room 2	1	Purple	7300	319 / Drivers Side			
Hose, 364	Pump to Room 3	1	Gray	7324	319 / Passenger Side			
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A			
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A			
Travel Clamp	Two per Slide (except bed slide)	4		HWH	N/A			
		Options						
		D						
	Revisions							

36K WINDSPORT (19.5) TIRES 36K MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC)

STANDARD ON THIS UNIT

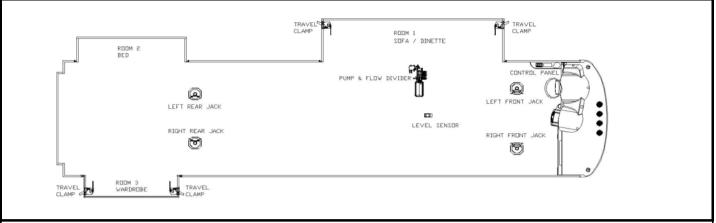


- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8289	
Pump	7-Function, 3 Rooms & Jacks	1		7301	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	340 / Drivers Side
Hose, 364	Pump to Room 3	1	Gray	7324	323 / Passenger Side
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	4		HWH	N/A
		Options			
		Davisiers			
		Revisions			
	<u>l</u>				

36Z WINDSPORT (19.5) TIRES 36Z MAGELLAN (22.5) TIRES

EQUALIZER JACKS (FULLY AUTOMATIC)


STANDARD ON THIS UNIT

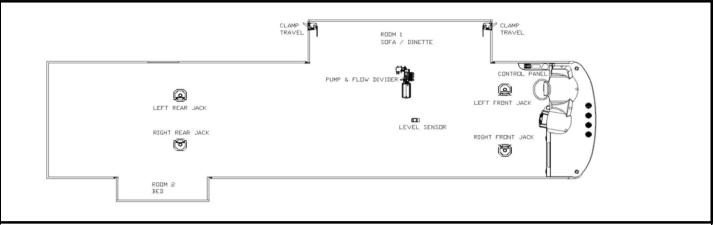

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8290	
Pump	6-Function, 2 Rooms & Jacks	1		7243	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 264	Pump to Jack, Left Rear	1	Orange	7322	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 300	Pump to Jack, Right Rear	1	Yellow	7323	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	319 / Passenger Side
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	2		HWH	N/A
		Options			
		Davidalar -			
		Revisions			


38E MAGELLAN (22.5) TIRES EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

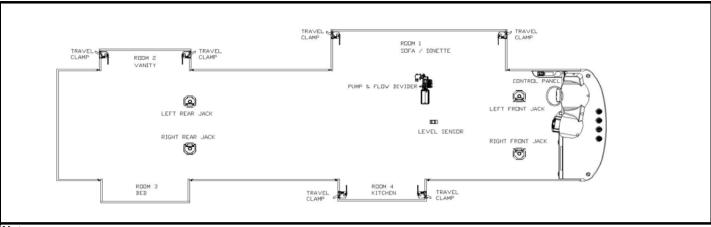

- 1) Jacks mount in two different locations on bracket depending on tire size of chassis.
 - a) 19.5 Tires: Top hole in jack to top hole in bracket. Use 4 bolts in welded area of bracket.
 - b) 22.5 Tires: Top hole in jack to second hole in bracket. Use 6 bolts, 4 in welded area of bracket & 2 below welded area.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8291	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	12,000 lbs, 16" Stroke	4		7214	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Flow Divider	Mounted inside pump compartment	1		7316	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	1	Brown	7294	the slide mechanism.
Hose, 282	Pump to Jack, Left Rear	1	Orange	7325	
Hose, 180	Pump to Jack, Right Front	1	White	7296	
Hose, 318	Pump to Jack, Right Rear	1	Yellow	7326	
Hose, 24	Pump to flow divider	1	Green	7310	Inside pump compartment
Hose w90, 140	Flow divider to front slide, Room 1	1	Green	7311	95 / Drivers Side
Hose w90, 140	Flow divider to rear slide, Room 1	1	Green	7311	166 / Drivers Side
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, 364	Pump to Room 2	1	Purple	7300	356 / Drivers Side
Hose, 396	Pump to Room 3	1	Gray	7327	344 / Passenger Side
Hose, 110	Pump to Room 4	1	Red	7328	160 / Passenger Side
Hose, N/A	Pump to Generator Slide	N/A		N/A	N/A
Travel Clamp	Two per Slide (except bed slide)	6		HWH	N/A
		Ontions			
		Options	l	Π	
_					
		Revisions			


39A Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

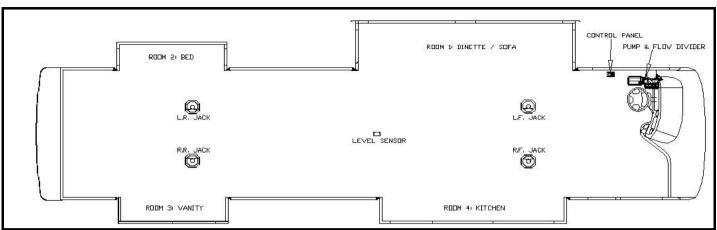

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted ?	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	7342	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	7341	
Hose, 140	Pump to synchronizing cylinder	2	Green	7311	Mounts to bracket on structure
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 475	Pump to Room 2	2	Purple	7338	340 / Drivers Side
Hose w90, 425	Pump to Room 3	2	Gray	7337	365 / Passenger Side
Hose w90, 220	Pump to Room 4	2	Red	7336	146 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions	ON #0045		
	Beginning with release of 1/23/06 and docur	nented on E	CN #3845		


39B Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

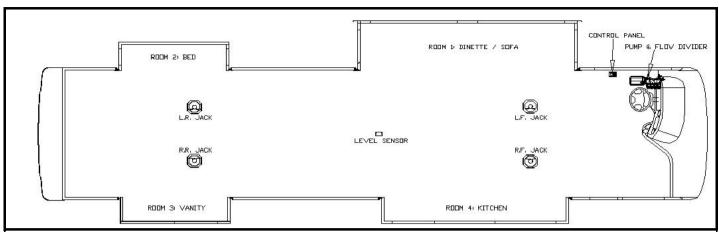

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8294	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted ?	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	7342	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	7341	
Hose, 140	Pump to synchronizing cylinder	2	Green	7311	Mounts to bracket on structure
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose, 475	Pump to Room 2	2	Purple	7338	340 / Drivers Side
Hose w90, 425	Pump to Room 3	2	Gray	7337	365 / Passenger Side
Hose w90, 220	Pump to Room 4	2	Red	7336	155 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions			
	Beginning with release of 1/23/06 and docur	nented on E	CN #3845		


39C Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

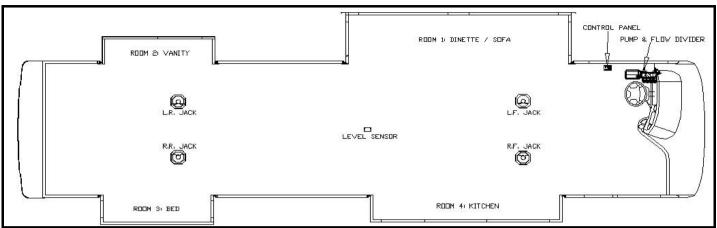

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #2, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 1 hydraulic connections.

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8293	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted ?	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	7342	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	7341	
Hose, 140	Pump to synchronizing cylinder	2	Green	7311	Mounts to bracket on structure
Hose w90, 170	Sync cylinder to front slide, Room 1	2	Green	2415	103 / Drivers side
Hose w90, 170	Sync cylinder to rear slide, Room 1	2	Green	2415	196 / Drivers side
	Pump to Room 1	N/A	Green		
Hose w90, 425	Pump to Room 2	2	Purple	7335	350 / Drivers Side
Hose, 475	Pump to Room 3	2	Gray	7334	345 / Passenger Side
Hose w90, 220	Pump to Room 4	2	Red	7336	146 / Passenger Side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
		Revisions	-ON #004=		
	Beginning with release of 1/23/06 and docur	nented on E	UN #3845		

39D Presidio EQUALIZER JACKS (FULLY AUTOMATIC) STANDARD ON THIS UNIT

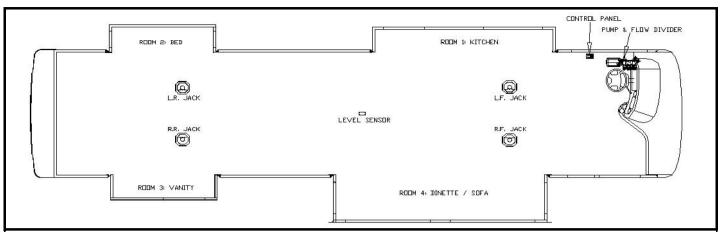

- 1) Jacks mount to chassis brackets with the lowest holes of the jacks aligned with the lowest holes of the mounting brackets.
 - 2) Level sensor attaches to bottom of structure; on the square tube the runs full length from axle to axle.
 - 3) Hydraulic hose terminations for room #1, #3, & #4 require 90 degree swivel elbows.
 - 4) Reference FM-3991 for a better visual of Room 4 hydraulic connections.


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8292	
Pump	8-Function, 4 Rooms & Jacks	1		7302	
Jack	17,000 lbs, 18" Stroke	4		7134	Measuring from inside of
Control Panel	Located to the left of the drivers seat	1		2057	firewall, this is the end
Level Sensor	Attached to bottom of structure	1		7196	location of the hydraulic
Sync Cylinder	Mounted ?	1		7351	hoses where they attach to
Hose, 140	Pump to Jack, Left Front	2	Brown	7294	the slide mechanism.
Hose, 396	Pump to Jack, Left Rear	2	Orange	7342	
Hose, 140	Pump to Jack, Right Front	2	White	7308	
Hose, 396	Pump to Jack, Right Rear	2	Yellow	7341	
Hose, 140	Pump to synchronizing cylinder	2	Red	2426	Mounts to bracket on structure
Hose w90, 140	Pump to Room 1	2	Green	7311	149 / Drivers side
Hose, 475	Pump to Room 2	2	Purple	7338	325 / Drivers Side
Hose w90, 425	Pump to Room 3	2	Gray	7337	355 / Passenger Side
Hose w90, 170	Sync cylinder to front slide, Room 4	2	Red	2425	103 / Passenger side
Hose w90, 170	Sync cylinder to rear slide, Room 4	2	Red	2425	196 / Passenger side
	Pump to Generator Slide	N/A			N/A
Travel Clamp	(two per slide, except the bed slide)	6		HWH	N/A
		Options			
					<u> </u>
		Revisions	ON #0045		
	Beginning with release of 1/23/06 and docur	nented on E	:CN #3845		

8251-LEVELING SYS	S-FULL AUTO(JACKS ONLY)	
PART NO	. DESCRIPTION	QUAN
1124	#4 JIC X #4 O-RING MALE 90	4
1403	RESTRICTOR FITTING #6 X #4	4
2057	CONTROL PANEL AUTO LEVEL PS M894-02-60	1
6569	HARNESS, FOUR WINDS MOTOR HOME 35'	1
7196	AUTO LEVEL SENSOR ASSEMBLY	1
7214	MH 16 SL LEG	4
7239	PUMP & MAN 4 FUN. 3.7 MAN P.S.	1
7247	HOSE KIT-PUMP TO L/F JACK-300" FM-3676-B	1
7248	HOSE KIT-PUMP TO L/R JACK-100" FM-3676-C	1
7251	HOSE KIT-PUMP TO R/F JACK-269" FM-3676-F	1
7253	HOSE KIT-PUMP TO R/R JACK-60" FM-3676-H	1
8250-SLIDE SYSTEM	M (1 ROOM) FM-3677 (SUGGESTED-SINGLE SLIDE	E PUMP KIT)
PART NO	. DESCRIPTION	QUAN
6569		1
7242	PUMP & MAN 5 FUNC 3.7 MAN P.S.	1
7254	HOSE KIT-PUMP TO SLIDE-84" FM-3676-I	1
8253-LEVELING SYS	S-FULL AUTO (JACKS & 1 ROOM) FM-3680	
PART NO	. DESCRIPTION	QUAN
1124	#4 JIC X #4 O-RING MALE 90	4
1403	RESTRICTOR FITTING #6 X #4	4
2057	CONTROL PANEL AUTO LEVEL PS M894-02-60	1
7196	AUTO LEVEL SENSOR ASSEMBLY	1
7214	MH 16 SL LEG	4
7246	HOSE KIT-PUMP TO L/F JACK-126" FM-3676-A	1
7249	HOSE KIT-PUMP TO L/R JACK-223" FM-3676-D	1
7250	HOSE KIT-PUMP TO R/F JACK-162" FM-3676-E	1
7252	HOSE KIT-PUMP TO R/R JACK-269" FM-3676-G	1

7164-SLIDE ASSEMBLY 36" FM-3655


	FOUR WINDS #	EQUALIZER #
LEVELING CONTROL TOUCH PANEL	SE-1315	2057
LEVEL CONTROL SENSOR MODULE	SE-1316	7196
HOSE KIT (PUMP TO JACKS) HOSE KIT (PUMP TO SLIDE)	FM-3659 FM-3661	2055 2056
HARNESS (PUMP TO SWITCH) HARNESS (PUMP TO SLIDE MECHANISM) HARNESS (SENSOR MODULE TO SWITCH)	SE-1312 SE-1313 SE-1314	6569 6571 1616
18" SLIDE MECHANISM 36" SLIDE MECHANISM	FM-3653 FM-3654	7135 7164
SINGLE MANIFOLD PUMP (JACKS ONLY) DUAL MANIFOLD PUMP (JACKS & 1 ROOM) TRIPLE MANIFOLD PUMP (JACKS & 2 ROOMS)	FM-3655 FM-3656 FM-3657	7239 7242 7243
12,000 JACK (16" STROKE, 2.5" BORE)	FM-3658	7214

33C FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

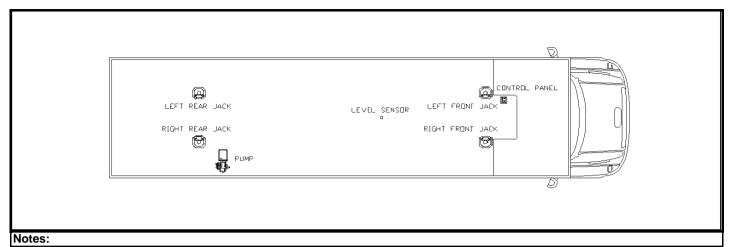


Item, Length	Description / Location	Qty	Color	Vendor PN	
, g		-4-7			1
Kit	(Items listed below)	1		8251	1
Pump	4-Function, Jacks Only	1		7239	Magaziring from book of oah
Jack	12,000 lbs, 16" Stroke	4		7214	 Measuring from back of cab floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	of the hydraulic hoses where
Control Box	Attached to bottom of structure	1		2319	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, 300	Pump to Jack, Left Front	2	Brown	2479	mechanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date

34C FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

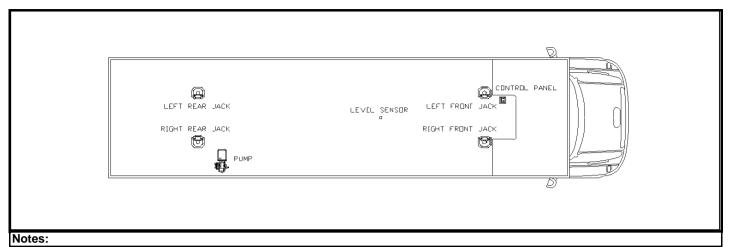

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Touch Pad	Located to the right of the drivers seat	1		2318	•
Control Box	Attached to bottom of structure	1		2319	of the hydraulic hoses where
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 300	Pump to Jack, Left Front	2	Brown	2479	mecnanism.
Hose, 108	Pump to Jack, Left Rear	2	Orange	2464	
Hose, 276	Pump to Jack, Right Front	2	White	2477	
Hose, 60	Pump to Jack, Right Rear	2	Yellow	2460	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1.07101010					Duto


39C FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

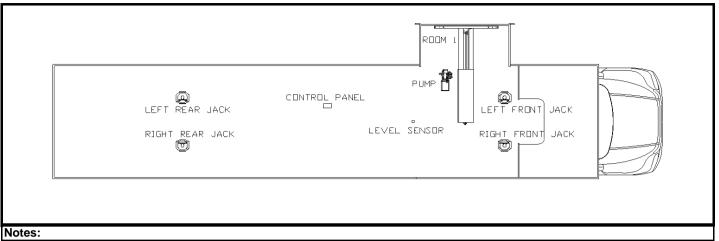

1) Jacks mount top hole to 2nd from top mounting plate hole.


Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
item, Length	Description / Location	Qty	COIOI	Vendor FIN	floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	42 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	160	HWH	N/A
Havel Claimp	I wo per Slide	IN/A		110011	IN/A
		Options			
Kit	(Items listed below)	1	I	8253	Π
·	(,				
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
,	, ,				
	F	Revisions			
	-				

39D FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

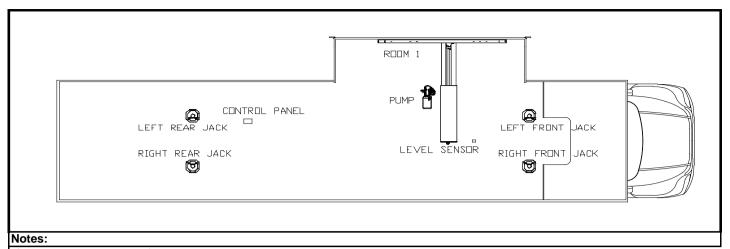


Item, Length	Description / Location	Otv	Color	Vendor PN	Measuring from back of cab
itelli, Leligth	Description / Location	Qty	COIOI	vendor PN	floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	2	Green	2462	73 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A	עפו	HWH	N/A
rravei Ciamp	Two per Slide	IN/A	+	ПИЛ	IN/A
		Options			
Kit	(Items listed below)	1		8253	Τ
	(vierne neisea a even,				
Jack	12,000 lbs, 16" Stroke	4		7214	
Touch Pad	Located to the right of the drivers seat	1		2318	
Control Box	Attached to bottom of structure	1		2319	
Hose, 132	Pump to Jack, Left Front	2	Brown	2466	
Hose, 264	Pump to Jack, Left Rear	2	Orange	2476	
Hose, 168	Pump to Jack, Right Front	2	White	2469	
Hose, 276	Pump to Jack, Right Rear	2	Yellow	2477	
,	, ,				
		Revisions			

33C FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

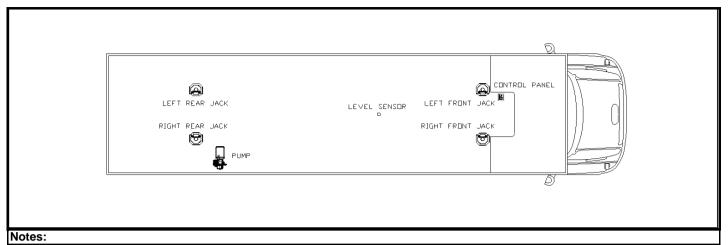


Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Control Panel	Located to the right of the drivers seat	1		2057	of the hydraulic hoses where
Level Sensor	Attached to bottom of structure	1		7196	•
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 300	Pump to Jack, Left Front	1	Brown	7247	mechanism.
Hose, 100	Pump to Jack, Left Rear	1	Orange	7248	
Hose, 269	Pump to Jack, Right Front	1	White	7251	
Hose, 60	Pump to Jack, Right Rear	1	Yellow	7253	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1.07101010					Duto

34C FUNMOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

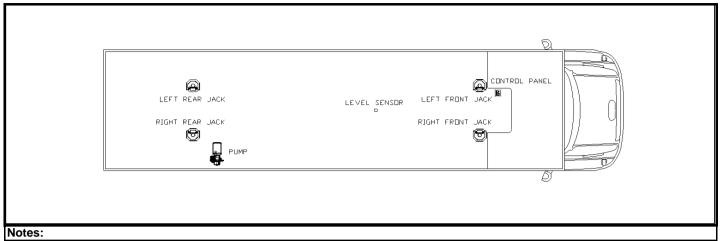

Item, Length	Description / Location	Qty	Color	Vendor PN	
Kit	(Items listed below)	1		8251	
Pump	4-Function, Jacks Only	1		7239	Measuring from back of cab
Jack	12,000 lbs, 16" Stroke	4		7214	floor, this is the end location
Control Panel	Located to the right of the drivers seat	1		2057	of the hydraulic hoses where
Level Sensor	Attached to bottom of structure	1		7196	•
Flow Divider	Mounted inside pump compartment	N/A		N/A	they attach to the slide mechanism.
Hose, 300	Pump to Jack, Left Front	1	Brown	7247	mechanism.
Hose, 100	Pump to Jack, Left Rear	1	Orange	7248	
Hose, 269	Pump to Jack, Right Front	1	White	7251	
Hose, 60	Pump to Jack, Right Rear	1	Yellow	7253	
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Pump to Room 1	N/A	Green	N/A	N/A
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
Options					
Revisions	Description			Ву	Date
1.07101010					Duto


39C FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

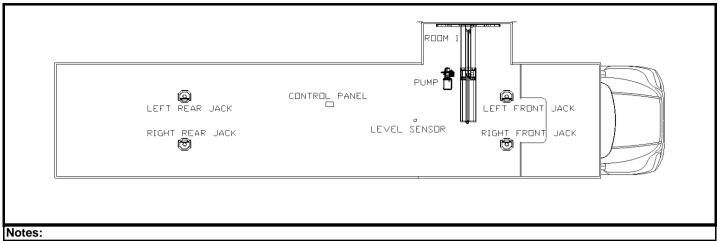

1) Jacks mount top hole to 2nd from top mounting plate hole.

Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
, g					floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	1	Green	7254	42 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options	•		
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	
Hose, 126	Pump to Jack, Left Front	1	Brown	7246	
Hose, 256	Pump to Jack, Left Rear	1	Orange	7249	
Hose, 162	Pump to Jack, Right Front	1	White	7250	
Hose, 269	Pump to Jack, Right Rear	2	Yellow	7252	
		D!			
T		Revisions			

39D FUN MOVER EQUALIZER JACKS (FULLY AUTOMATIC) OPTIONAL ON THIS UNIT

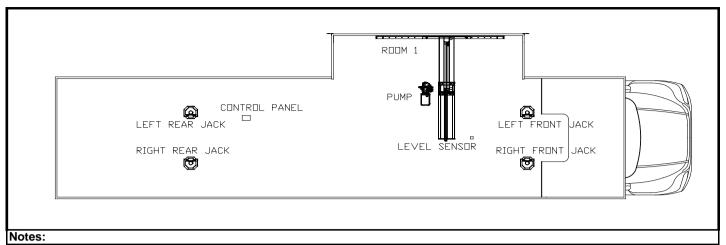

Item, Length	Description / Location	Qty	Color	Vendor PN	Measuring from back of cab
itom, Longtii	Decomption / Location	حدي	00101	Volidor i it	floor, this is the end location
Kit	(Items listed below)	1		8250	of the hydraulic hoses where
Pump	5-Function, 1 Room, Jacks	1		7242	they attach to the slide
Flow Divider	Mounted inside pump compartment	N/A		N/A	mechanism.
Hose, N/A	Pump to Flow Divider	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to front slide, Room 1	N/A	TBD	N/A	N/A
Hose, N/A	Flow divider to rear slide, Room 1	N/A	TBD	N/A	N/A
Hose, 84	Pump to Room 1	1	Green	7254	73 / Drivers Side
Hose, N/A	Pump to Room 2	N/A	Purple	N/A	N/A
Hose, N/A	Pump to Room 3	N/A	Gray	N/A	N/A
Hose, N/A	Pump to Room 4	N/A	Red	N/A	N/A
Hose, N/A	Pump to Generator Slide	N/A	TBD	N/A	N/A
Travel Clamp	Two per Slide	N/A		HWH	N/A
		Options			
Kit	(Items listed below)	1		8253	
Jack	12,000 lbs, 16" Stroke	4		7214	
Control Panel	Located to the right of the drivers seat	1		2057	
Level Sensor	Attached to bottom of structure	1		7196	
Hose, 126	Pump to Jack, Left Front	1	Brown	7246	
Hose, 256	Pump to Jack, Left Rear	1	Orange	7249	
Hose, 162	Pump to Jack, Right Front	1	White	7250	
Hose, 269	Pump to Jack, Right Rear	2	Yellow	7252	
			<u> </u>		
		Revisions			
-					

8251-LEVELING SYS	S-FULL AUTO(JACKS ONLY)	
PART NO	. DESCRIPTION	QUAN
1124	#4 JIC X #4 O-RING MALE 90	4
1403	RESTRICTOR FITTING #6 X #4	4
2057	CONTROL PANEL AUTO LEVEL PS M894-02-60	1
6569	HARNESS, FOUR WINDS MOTOR HOME 35'	1
7196	AUTO LEVEL SENSOR ASSEMBLY	1
7214	MH 16 SL LEG	4
7239	PUMP & MAN 4 FUN. 3.7 MAN P.S.	1
7247	HOSE KIT-PUMP TO L/F JACK-300" FM-3676-B	1
7248	HOSE KIT-PUMP TO L/R JACK-100" FM-3676-C	1
7251	HOSE KIT-PUMP TO R/F JACK-269" FM-3676-F	1
7253	HOSE KIT-PUMP TO R/R JACK-60" FM-3676-H	1
8250-SLIDE SYSTEM	M (1 ROOM) FM-3677 (SUGGESTED-SINGLE SLIDE	E PUMP KIT)
PART NO	. DESCRIPTION	QUAN
6569		1
7242	PUMP & MAN 5 FUNC 3.7 MAN P.S.	1
7254	HOSE KIT-PUMP TO SLIDE-84" FM-3676-I	1
8253-LEVELING SYS	S-FULL AUTO (JACKS & 1 ROOM) FM-3680	
PART NO	. DESCRIPTION	QUAN
1124	#4 JIC X #4 O-RING MALE 90	4
1403	RESTRICTOR FITTING #6 X #4	4
2057	CONTROL PANEL AUTO LEVEL PS M894-02-60	1
7196	AUTO LEVEL SENSOR ASSEMBLY	1
7214	MH 16 SL LEG	4
7246	HOSE KIT-PUMP TO L/F JACK-126" FM-3676-A	1
7249	HOSE KIT-PUMP TO L/R JACK-223" FM-3676-D	1
7250	HOSE KIT-PUMP TO R/F JACK-162" FM-3676-E	1
7252	HOSE KIT-PUMP TO R/R JACK-269" FM-3676-G	1

7164-SLIDE ASSEMBLY 36" FM-3655

7000	2000	LENGTH	FITTINGS	COLOR	
7310	2289	024"	SXS	GREEN SOLID	?
	2290	024"	SXS	GREEN STRIPE	?
7331	2342	024"	SXS	RED SOLID	?
	2343	024"	SXS	RED STRIPE	?
7298	2241	032"	SXS	GREEN SOLID	-
	2242	032"	SXS	GREEN STRIPE	
7306	2281	048"	SXS	GREEN SOLID	
	2282	048"	SXS	GREEN STRIPE	
7253	2189	060"	SXS	YELLOW SOLID	
1200	2190	060"	SXS	YELLOW STRIPE	
7254	2191	084"	SXS	GREEN SOLID	
7204	2192	084"	SXS	GREEN STRIPE	
7287	2221	084"	SXS	BROWN SOLID	
7207	2222	084"	SXS	BROWN STRIPE	
7248	2187	100"	SXS	ORANGE SOLID	
7240	2188	100"	SXS	ORANGE STRIPE	
7288	2223	100"	SXS	WHITE SOLID	
1200	2223	100"	SXS	WHITE STRIPE	
7299	2243	110"	SXS	GRAY SOLID	
7299		110"	SXS	GRAY STRIPE	
7220	2244				
7328	2338	110"	SX90	RED SOLID	
IZIT	2339	110"	SX90	RED STRIPE	
KIT	2392	110"	SX90	GREEN SOLID	
7040	2392	110"	SX90	GREEN STRIPE	
7246	2193	126"	SXS	BROWN SOLID	
7005	2194	126"	SXS	BROWN STRIPE	
7305	2263	126"	SXS	YELLOW SOLID	
	2264	126"	SXS	YELLOW STRIPE	
7308	2285	140"	SXS	WHITE SOLID	
7044	2286	140"	SXS	WHITE STRIPE	
7311	2291	140"	SX90	GREEN SOLID	
	2292	140"	SX90	GREEN STRIPE	
7294	2233	140"	SXS	BROWN SOLID	
1717	2234	140"	SXS	BROWN STRIPE	
KIT	2426	140"	SX90	RED SOLID	
	2426	140"	SX90	RED STRIPE	
7320	2322	160"	SXS	BROWN SOLID	
	2323	160"	SXS	BROWN STRIPE	
7250	2195	162"	SXS	WHITE SOLID	
LCIT	2196	162"	SXS	WHITE STRIPE	
KIT	2415	170"	SX90	GREEN SOLID	
	2415	170"	SX90	GREEN STRIPE	
KIT	2425	170"	SX90	RED SOLID	
	2425	170"	SX90	RED STRIPE	
7296	2237	180"	SXS	WHITE SOLID	
	2238	180"	SXS	WHITE STRIPE	
7333	2346	180"	SX90	RED SOLID	?
	2347	180"	SX90	RED STRIPE	?
7340	2361	180"	SX90	GREEN SOLID	?
	2362	180"	SX90	GREEN STRIPE	?
7315	2299	200"	SX90	RED SOLID	
	2300	200"	SX90	RED STRIPE	

7000	2000	LENGTH	FITTINGS	COLOR	
7321	2324	200"	SXS	WHITE SOLID	
	2325	200"	SXS	WHITE STRIPE	
7336	2353	220"	SX90	RED SOLID	
	2354	220"	SX90	RED STRIPE	
7289	2225	223"	SXS	YELLOW SOLID	
1 - 2 - 2	2226	223"	SXS	YELLOW STRIPE	
7295	2235	240"	SXS	ORANGE SOLID	
	2236	240"	SXS	ORANGE STRIPE	
7312	2293	256"	SX90	GREEN SOLID	
	2294	256"	SX90	GREEN STRIPE	
7249	2197	256"	SXS	ORANGE SOLID	
	2198	256"	SXS	ORANGE STRIPE	
7322	2326	264"	SXS	ORANGE SOLID	
	2327	264"	SXS	ORANGE STRIPE	
7251	2185	269"	SXS	WHITE SOLID	
	2186	269"	SXS	WHITE STRIPE	
7252	2199	269"	SXS	YELLOW SOLID	
	2200	269"	SXS	YELLOW STRIPE	
7297	2239	280"	SXS	YELLOW SOLID	
	2240	280"	SXS	YELLOW STRIPE	
7332	2344	280"	SX90	RED SOLID	?
	2345	280"	SX90	RED STRIPE	?
7339	2359	280"	SX90	GREEN SOLID	?
	2360	280"	SX90	GREEN STRIPE	?
7325	2332	282"	SXS	ORANGE SOLID	
	2333	282"	SXS	ORANGE STRIPE	
7247	2183	300"	SXS	BROWN SOLID	
	2184	300"	SXS	BROWN STRIPE	
7304	2265	300"	SXS	WHITE SOLID	
	2266	300"	SXS	WHITE STRIPE	
7323	2328	300"	SXS	YELLOW SOLID	
	2329	300"	SXS	YELLOW STRIPE	
7326	2334	318"	SXS	YELLOW SOLID	
	2335	318"	SXS	YELLOW STRIPE	
7307	2283	364"	SXS	ORANGE SOLID	
	2284	364"	SXS	ORANGE STRIPE	
7309	2287	364"	SXS	YELLOW SOLID	
	2288	364"	SXS	YELLOW STRIPE	
7300	2245	364"	SXS	PURPLE SOLID	
	2246	364"	SXS	PURPLE STRIPE	
7324	2330	364"	SX90	GRAY SOLID	
	2331	364"	SX90	GRAY STRIPE	
7327	2336	396"	SX90	GRAY SOLID	
	2337	396"	SX90	GRAY STRIPE	
7341	2363	396"	SXS	YELLOW SOLID	
	2364	396"	SXS	YELLOW STRIPE	
7342	2365	396"	SXS	ORANGE SOLID	
	2366	396"	SXS	ORANGE STRIPE	
7313	2295	420"	SXS	PURPLE SOLID	
	2296	420"	SXS	PURPLE STRIPE	
7335	2350	425"	SX90	PURPLE SOLID	
	2351	425"	SX90	PURPLE STRIPE	

7000	2000	<u>LENGTH</u>	<u>FITTINGS</u>	COLOR	
7337	2355	425"	SX90	GRAY SOLID	
	2356	425"	SX90	GRAY STRIPE	
7314	2297	450"	SX90	GRAY SOLID	
	2298	450"	SX90	GRAY STRIPE	
7317	2309	450"	SXS	PURPLE SOLID	
	2310	450"	SXS	PURPLE STRIPE	
7334	2348	475"	SXS	GRAY SOLID	
	2349	475"	SXS	GRAY STRIPE	
7338	2357	475"	SXS	PURPLE SOLID	
	2358	475"	SXS	PURPLE STRIPE	